

PROBLEM SYMPTOMS TABLE

LIGHTING SYSTEM:

Symptom	Suspected Area	See page
Headlight does not come on. (Low beam)	1. Light control switch circuit 2. Headlight relay circuit 3. Combination switch 4. Body ECU (Main)	DI-1257 DI-1265 BE-36 IN-36
Headlight system does not operate. (HI beam or Flash)	1. Headlight dimmer switch circuit 2. Light control switch circuit 3. Combination switch 4. Body ECU (Main)	DI-1259 DI-1257 BE-36 IN-36
Automatic light control system does not operate.	1. Light control sensor circuit 2. Light control sensor 3. Body ECU (Main)	DI-1245 BE-36 IN-36
Taillight system does not come on.	1. Taillight relay circuit 2. Taillight circuit 3. Light control switch circuit 4. Combination switch 5. Body ECU (Sub) 6. Body ECU (Main)	DI-1269 DI-1284 DI-1257 BE-36 IN-36 IN-36
Stop light system does not come on.	1. Stop light switch 2. Stop light circuit 3. Body ECU (Sub)	BE-63 DI-1286 IN-36

HAZARD WARNING SYSTEM:

Symptom	Suspected Area	See page
Hazard warning light does not come on.	1. Hazard switch 2. Flasher relay	BE-48 BE-48

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspected Area	See page
Illumination light does not come on.	1. Power source circuit (Body ECU (Sub)) 2. Power source circuit (Body ECU (Main)) 3. Illumination circuit (Body ECU (Main) control) 4. Illumination circuit (Body ECU (Sub) control) 5. Body ECU (Sub) 6. Body ECU (Main)	DI-1280 DI-1247 DI-1288 DI-1291 IN-36 IN-36
Brightness does not change even when rheostat is turned on. (All)	1. Light control rheostat 2. Body ECU (Main)	BE-82 IN-36
Door courtesy light does not come on.	1. Door courtesy switch circuit 2. Body ECU (Main)	DI-1255 IN-36

DRIVER SEAT BELT SYSTEM:

Symptom	Suspected Area	See page
Driver seat belt warning does not come on.	1. Driver buckle switch circuit 2. Combination meter 3. Body ECU (Main)	DI-1263 BE-82 IN-36

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the doors can not be locked or unlocked.	1. Power source circuit (Body ECU (Main)) 2. Body ECU (Main)	DI-1247 IN-36
Driver side door lock does not operate.	1. Door lock motor circuit 2. Body ECU (Main)	DI-1324 IN-36
Door key related function cannot be done.	1. Door key lock and unlock switch circuit 2. Door courtesy switch circuit 3. Body ECU (Main)	DI-1322 DI-1255 IN-36
Key confinement prevention function does not operate.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Body ECU (Main)	DI-1255 DI-1326 IN-36

POWER SEAT CONTROL SYSTEM:

Symptom	Suspect Area	See page
Driving position memory system does not operate.	1. Memory switch circuit (w/ memory) 2. Power seat control ECU 3. Body ECU (Main)	DI-1278 IN-36 IN-36

WIRELESS DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Wireless door lock does not operate.	1. Wireless door lock control circuit 2. Wireless door lock tuner 3. Body ECU (Main)	DI-1271 IN-36 IN-36
Wireless door lock buzzer does not operate.	1. Wireless door lock buzzer circuit 2. Body ECU (Main)	DI-989 IN-36

REAR WIPER SYSTEM:

Symptom	Suspect Area	See page
Rear wiper system does not operate.	1. Door courtesy switch circuit (back door) 2. Power source circuit (Body ECU (Sub)) 3. Rear wiper switch circuit 4. Rear wiper motor circuit 5. Body ECU (Sub)	DI-1255 DI-1280 DI-1294 DI-1296 IN-36
Rear washer linked function does not operate.	1. Rear wiper switch circuit 2. Body ECU (Sub)	DI-1294 IN-36
Vehicle speed switching function does not operate.	1. Door courtesy switch circuit (back door) 2. Speed signal circuit 3. Body ECU (Sub) 4. Body ECU (Main)	DI-1255 DI-1301 IN-36 IN-36
Reverse linked function does not operate.	1. Door courtesy switch circuit (back door) 2. Reverse signal circuit 3. Front wiper position circuit 4. Body ECU (Sub)	DI-1255 DI-1299 DI-1192 IN-36

OTHERS:

Symptom	Suspect Area	See page
Key unlock warning system does not operate.	1. Key unlock warning switch circuit 2. Key unlock warning switch 3. Combination meter 4. Body ECU (Main)	DI-1253 BE-30 BE-82 IN-36
Parking brake indicator does not come on.	1. Parking brake switch circuit 2. Combination meter 3. Body ECU (Main)	DI-1261 BE-77 IN-36
Open door warning light does not come on.	1. Open door warning light circuit 2. Door courtesy switch 3. Combination meter 4. Body ECU (Main)	DI-1273 BE-53 BE-77 IN-36