

DTC	B1222	Door lock switch circuit on driver door
------------	--------------	--

CIRCUIT DESCRIPTION

These DTC notifies how switch works as follows:

If DTC is not output when operating switch, this means failure of switch contact. If DTC is output when not operating switch, this means stick of switch. When a malfunction is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wire harness if there is no problem.

DTC No.	DTC Detecting Condition	Trouble Area
B1222	Stick of door key lock and unlock switch	• Door lock control switch • Door key lock and unlock switch • Wire harness

HINT:

Refer to BE section for switch inspection.