


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

WIRING DIAGRAM

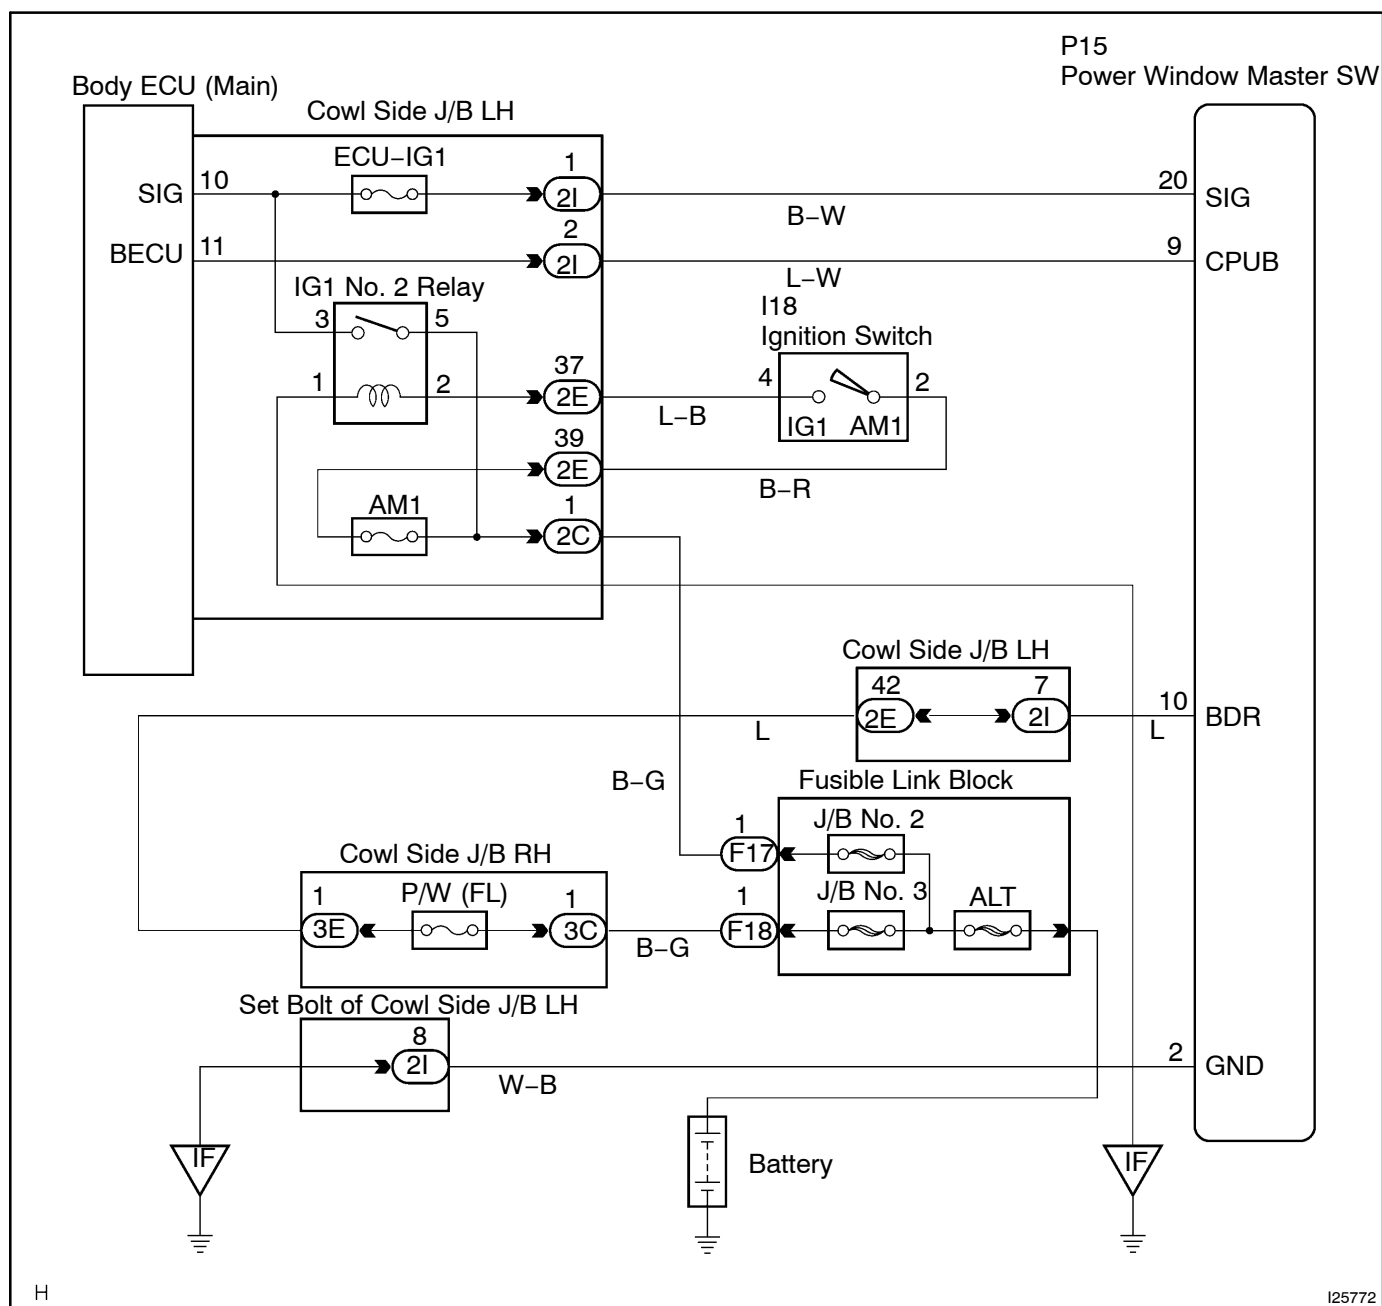

INSPECTION PROCEDURE

1	Check ECU-IG1 and AM1 fuse.
----------	------------------------------------

CHECK:

Check continuity of ECU-IG1 and AM1 fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2	Check voltage between terminals BECU, SIG, BDR and GND of power window master switch connector.
----------	--

PREPARATION:

Turn the ignition switch OFF.

CHECK:

Measure the voltage between terminals BECU, SIG, BDR and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1312](#)).

NG

3	Check wire harness and connector between power window master switch and body ground (See page IN-36).
----------	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1312](#)).