

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	22. Starter 23. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit	DI-1050 DI-222 DI-227
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-227
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-232 DI-227 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-232 DI-227
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-232 DI-227
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-1529 DI-222
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-1529 DI-227
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-227
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-222 DI-227
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-227 DI-262
Surging (Poor driveability)	1. Fuel pump control circuit	DI-227
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-1050 DI-227
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-1529 DI-222