

DTC	B2795	Unmatched Key Code
------------	--------------	---------------------------

This DTC is output when an unregistered key is inserted. When this DTC is output, delete DTC and insert the key that a customer keeps to check whether or not B2795 is output.

When a key that outputs B2795 is found, register this key. When B2795 is not output, there is a possibility that the unregistered key may be inserted before. (Transponder key ECU is normal.)

Ask a customer about the condition of using the system to find the cause of the trouble.

(Example: Another key has been inserted, etc..)

DTC No.	DTC Detecting Condition	Trouble Area
B2795	Key is not registered in ECU	• Key

INSPECTION PROCEDURE

1	Delete DTC and insert all the presently available keys to check whether the engine starts or not.
----------	--

HINT:

When inserting the key that does not start the engine, DTC (B 2795) is stored in memory.


RESULT:

OK	All keys start the engine.
NG	A specific key does not start the engine.

OK	No problem.
-----------	--------------------

HINT:

If the result is "OK", confirm whether or not customers have inserted the unregistered key or the immobiliser key (with transponder chip) of the other vehicle in the ignition key cylinder, and find out the cause of detecting DTC.

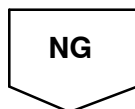

Resister the key that does not start the engine.
