


|            |          |                                      |
|------------|----------|--------------------------------------|
| <b>DTC</b> | <b>3</b> | <b>"CODE 3. Transceiver failure"</b> |
|------------|----------|--------------------------------------|

## CIRCUIT DESCRIPTION

This DTC is output when communication between the telephone ECU (Mayday ECU) and the telephone transceiver is disabled.

(When power is not supplied to the transceiver, this DTC is also output because the communication is not possible.)

## WIRING DIAGRAM

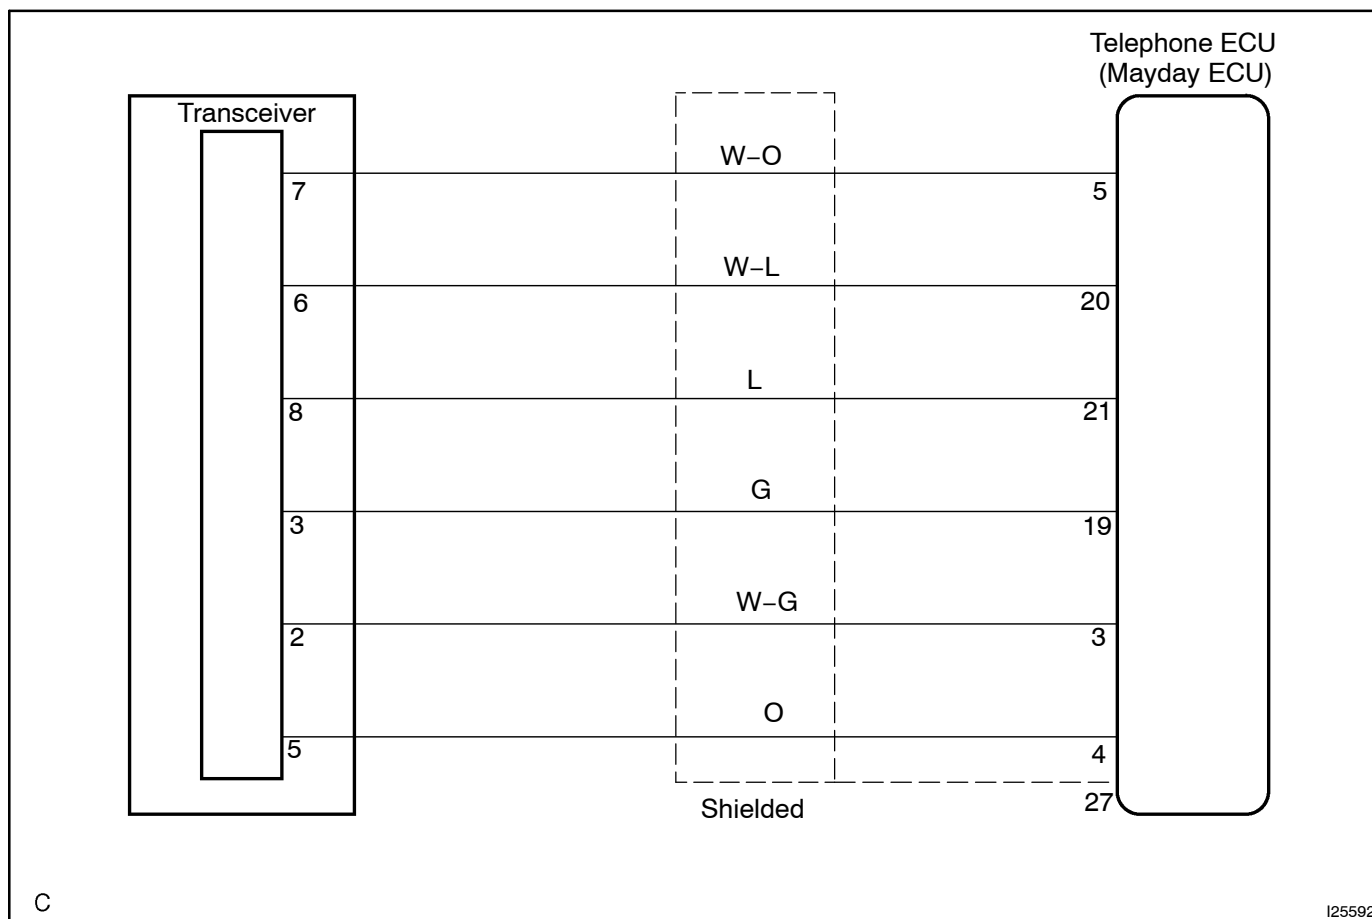

## INSPECTION PROCEDURE

|   |                                                                                                                                                 |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Check for open and short circuit in harness and connector between telephone ECU (Mayday ECU) and transceiver (See page <a href="#">IN-36</a> ). |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------|

**NG****Replace or repair wire harness connector.****OK****Replace the telephone transceiver  
(See page [IN-36](#)).****HINT:**

If DTC is not cleared even though the transceiver is replaced, replace the telephone ECU (Mayday ECU).