

While service call is working, voice does not reach to LEXUS Link Center.

INSPECTION PROCEDURE

1	Check microphone.
---	-------------------


CHECK:

Check that the malfunction disappears when a good microphone is installed.

RESULT:

A: Malfunction does not disappear.

B: Malfunction disappear.

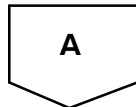

2	Check microphone amplifier.
---	-----------------------------


CHECK:

Check that the malfunction disappears when a good microphone amplifier is installed.

RESULT:

A: Malfunction does not disappear.

B: Malfunction disappear.

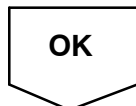

3	Check transceiver.
---	--------------------



CHECK:

Check that the malfunction disappears when a good transceiver is installed.

RESULT:

A: Malfunction does not disappear.

B: Malfunction disappear.

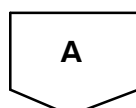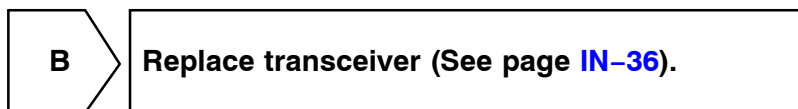

Check and replace telephone ECU (Mayday ECU) (See page IN-36).
