

The uncontrolled service is sent.

The uncontrolled emergency call is sent.

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check the DTC (Body control system) (See page DI-1352) |
|---|---|

CHECK:

Check whether or not "B1281: Airbag ECU communication stop" or "B1275: Bus buffer ECU communication stop" is detected in the Body Control ECU"

OK:

DTC is not output.

NG

Proceed troubleshooting for each DTC.

OK

- | | |
|---|--|
| 2 | Check for open and short circuit in harness and connector between telephone ECU (Mayday ECU) and bus buffer ECU (See page IN-36). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace telephone ECU (Mayday ECU) (See page [IN-36](#)).