

16. Touch switch does not function. (A/C control screen only)

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--|

NG

Replace the multi-display.

OK

- | | |
|---|--|
| 2 | Check "AVC-LAN communication circuit". (See page DI-1469) |
|---|--|

NG

Replace or repair AVC-LAN circuit.

OK

- | | |
|---|---|
| 3 | Check "Gateway ECU (AVC-LAN adopter) circuit" (See page DI-1476) |
|---|---|

NG

Repair or replace wire harness and connector

OK

Check and replace A/C amplifier (Center ECU).