

CIRCUIT INSPECTION

1. Black screen (Nothing displayed)

INSPECTION PROCEDURE

1	Check the ECU-B1, ECU-IG1 and ACC fuse.
---	---

NG

Replace the fuse.

OK

2	Check multi-display.
---	----------------------

PREPARATION:

Disconnect the multi- display connector.

CHECK:

Check voltage terminal +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turning the ignition switch to ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check voltage terminal IG when turning the ignition switch to ON position.

OK:

IG: 10 – 14 V

CHECK:

Check continuity terminal GND1.

OK:

GND1: Continuity

NG

Replace or repair wire harness or connector.

OK

Replace the multi-display.