

23. Vehicle position rotates without control. (Map rotates without control)

INSPECTION PROCEDURE

1	Recheck. (The vehicle when position does not rotating, turn the ignition switch to ON from OFF again.)
---	--

OK

Normal. (While the vehicle position was turning, the ignition switch was turned ON.)

NG

2	System check mode. (Is "58-10" is displayed in the unit check mode of the navigation ECU?)
---	--

Yes

Replace the navigation ECU.

No

3	System check mode. (Is "58-43" is displayed in the unit check mode of the navigation ECU?)
---	--

Yes

Replace and repair SPD terminal wire harness.

No

4	Navigation check mode (vehicle signal check mode: SPD and gyro).
---	--

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.