

24. Driving direction is opposite to moving direction of vehicle position mark.**INSPECTION PROCEDURE**

- | | |
|---|--|
| 1 | Navigation check mode (vehicle signal check mode REV). |
|---|--|

OK

Replace the navigation ECU.

NG

- | | |
|---|---------------------------|
| 2 | Check the navigation ECU. |
|---|---------------------------|

CHECK:

Check voltage terminal REV.

OK:

REV: See "Navigation ECU" of "TERMINAL OF ECU".

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.