

29. Power comes in, but DVD auto changer does not operate.**INSPECTION PROCEDURE**

1 Is DVD inserted with correct side up?

NO

Insert correctly.

YES

2 Function OK if different DVD magazine is inserted?

YES

Replace DVD magazine.

NO

3 Check wire harness and connector between RSA panel and DVD auto changer
(See page [IN-36](#)).

NG

Repair or replace wire harness or connector.

OK

4 Is temperature inside cabin hot?

YES

Protective circuit in operation.

NO

5	Does temperature suddenly change?
----------	--

YES**Formation of condensation due to temp. changes.****NO****Check and replace DVD auto changer.**