

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1 Service check mode. (Check the navigation ECU)

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2 Check the navigation ECU.

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check voltage terminal +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turning the ignition switch to ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector.

OK

3	Check wire harness and connector between multi display and navigation ECU (See page IN-36).
---	--

NG**Repair or replace wire harness or connector.****OK****Check and replace multi display.**