

7. Navigation screen is not stabilized (Synchronous error).

INSPECTION PROCEDURE

- | | |
|---|---------------------------|
| 1 | Check the navigation ECU. |
|---|---------------------------|

CHECK:

Check voltage terminal +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turning the ignition switch to ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check voltage terminals SYNC, VR or VG.

OK:

SYNC, VR, VG: See "Navigation ECU" of "TERMINAL OF ECU"

NG

Repair or replace the wire harness when all terminals are faulty. Replace the navigation ECU when the SYNC terminal is faulty.

OK

Replace the multi-display.