

PROBLEM SYMPTOMS TABLE

Flow chart No. (See page)	Component	Symptom
1. (DI-1424)	Multi display	Black screen (Nothing displayed)
2. (DI-1425)		No sound with Power switch pressed. ("AUTO OFF" on audio screen)
3. (DI-1428)		No navigation screen displayed when "MAP", "MENU" or "DEST" switch pressed. (Screen cannot be switched.)
4. (DI-1430)		No corresponding screen displayed when "AUDIO" or "Information" switch pressed.
5. (DI-1431)		No navigation displayed, "Audio OFF" on audio screen and no audio sound.
6. (DI-1433)		Screen cannot be dimmed in night time.
7. (DI-1434)		Navigation screen is not stabilized. (Synchronous error)
8. (DI-1435)		Color on navigation screen is unusual (RGB signal error)
9. (DI-1437)		Black screen appears when "MAP", "Menu" or "DEST" switch pressed.
10. (DI-1438)		Sound of radio, cassette tape or CD only cannot be heard from speaker.
11. (DI-1439)		No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.
12. (DI-1442)		Map DISC cannot be inserted.
13. (DI-1444)		MAP screen display does not appear. (Disc Caution screen does not change.)
14. (DI-1445)		MAP is displayed in white or blue screen. (Switch and vehicle position mark is displayed.)
15. (DI-1446)		Touch switch does not function. (Navigation screen only)
16. (DI-1447)		Touch switch does not function. (A/C control screen only)
17. (DI-1448)		Panel switch does not function. (Navigation screen only)
18. (DI-1449)		Panel switch does not function. (A/C control screen only)
19. (DI-1450)		The screen cannot be changed to night mode color.
20. (DI-1452)		Vehicle position is badly deviated from correct point.
21. (DI-1455)		GPS mark does not appear.

22. (DI-1457)		No voice navigation.
23. (DI-1458)		Vehicle position rotates without control. (Map rotates without control)
24. (DI-1460)		Driving direction is opposite to moving direction of vehicle position mark.
25. (DI-1461)		Navigation system cannot be operated with voice recognition.
26. (DI-1462)	DVD AUTO Changer	Any speaker does not work. (DVD sound only)
27. (DI-1463)		DVD magazine cannot be inserted.
28. (DI-1464)		DVD magazine inserted, but no power.
29. (DI-1465)		Power comes in, but DVD auto changer does not operate.
30. (DI-1467)		Sound jumps. (DVD sound)
31. (DI-1468)		DVD magazine will not be ejected.
32. (BE-160)		Any speaker does not work.