

PROBLEM SYMPTOMS TABLE

HINT:

- The table below shows the problem symptoms which could occur to the Night View System.
- The symptom using INSPECTION MODE (See page [DI-1077](#)).

Flow cart No.	Symptom	See page
1	Display cover does not open (night view indicator does not come on)	DI-1088
2	Display cover does not open (night view indicator comes on)	DI-1101
3	Display cover does not open (night view indicator comes on for a moment but immediately goes off)	DI-1105
4	Display cover opens but immediately closes	DI-1115
5	Display cover opens but stops while opening	DI-1118
6	Screen is white	DI-1122
7	Screen is black	DI-1133
8	Screen is striped	DI-1144
9	Screen is streaky	DI-1144
10	Screen is dark	DI-1154
11	Blurred bright image displayed	DI-1154
12	Double image displayed	DI-1154
13	Defect or flaw on the screen is displayed	DI-1162
14	Night view projector does not come on	DI-1163
15	Night view projector does not turn off	DI-1171
16	Night view display does not turn off	DI-1174
17	Screen displays colored blur marks	DI-1177
–	Screen is slanted	BE-97