

DTC	B1272	Power seat ECU communication stop
------------	--------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Power seat ECU (driver seat ECU) and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1272	No signal from driver seat ECU for more than 10 seconds.	• Power seat ECU (Driver seat ECU) • Wire harness

WIRING DIAGRAM

See page [DI-1362](#).

INSPECTION PROCEDURE

1	Check power seat ECU.
----------	------------------------------

CHECK:

Check that the operation of front vertical and that of rear vertical are normal.

HINT:

With this inspection, whether or not the power seat ECU CPU functions normally can be diagnosed.

NG

Replace power seat ECU (See page [IN-36](#)).

YES

2	Check wire harness. (See page IN-36)
---	---


PREPARATION:

Pull out the ECU connectors below.

Wire harness side connector of ECU	Terminal
Power seat control ECU - Body ECU (Main)	MPX1 (S28-4) - MPX2 (B7-23)
Power seat control ECU - Remote control mirror ECU (Main)	MPX2 (S28-9) - MPX1 (R30-25)

CHECK:

Check continuity of the wire harness between the connectors.

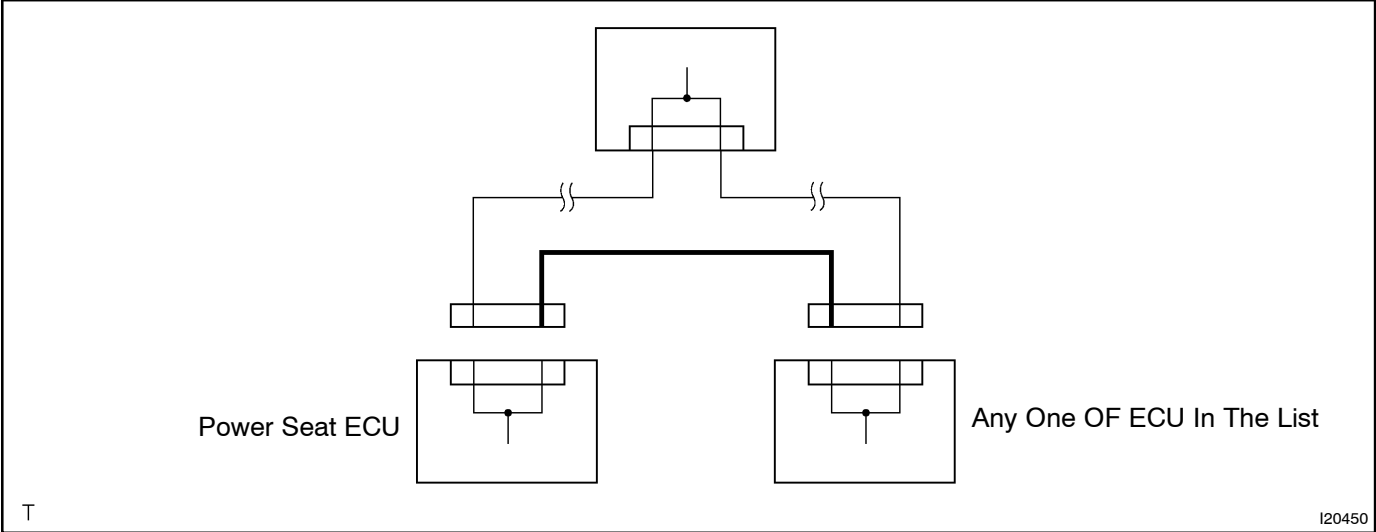

OK:

There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.

NG

Repair or replace wire harness.

OK

Replace power seat ECU (See page [IN-36](#)).