

DTC	B1273	Sliding roof control ECU communication stop (w/ Sliding roof vehicle only)
------------	--------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Sliding roof ECU and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1273	No signal from sliding roof ECU for more than 10 seconds.	• Sliding roof ECU • Wire harness

WIRING DIAGRAM

See page [DI-1362](#).

INSPECTION PROCEDURE

1	Check sliding roof ECU.
----------	--------------------------------

CHECK:

Check that the operation of the sliding roof is normal.

HINT:

With this inspection, whether or not the sliding roof ECU CPU functions normally can be diagnosed.

NG

Replace sliding roof ECU (See page [IN-36](#)).

OK

2	Check wire harness. (See page IN-36)
---	---


PREPARATION:

Pull out the ECU connectors below.

Wire harness side connector of ECU	Terminal
sliding roof ECU (Moon roof control ECU) – Body ECU (Main)	Bus (M2-2) – MPX2 (B7-23)

CHECK:

Check continuity of the wire harness between the connectors on the wire harness.

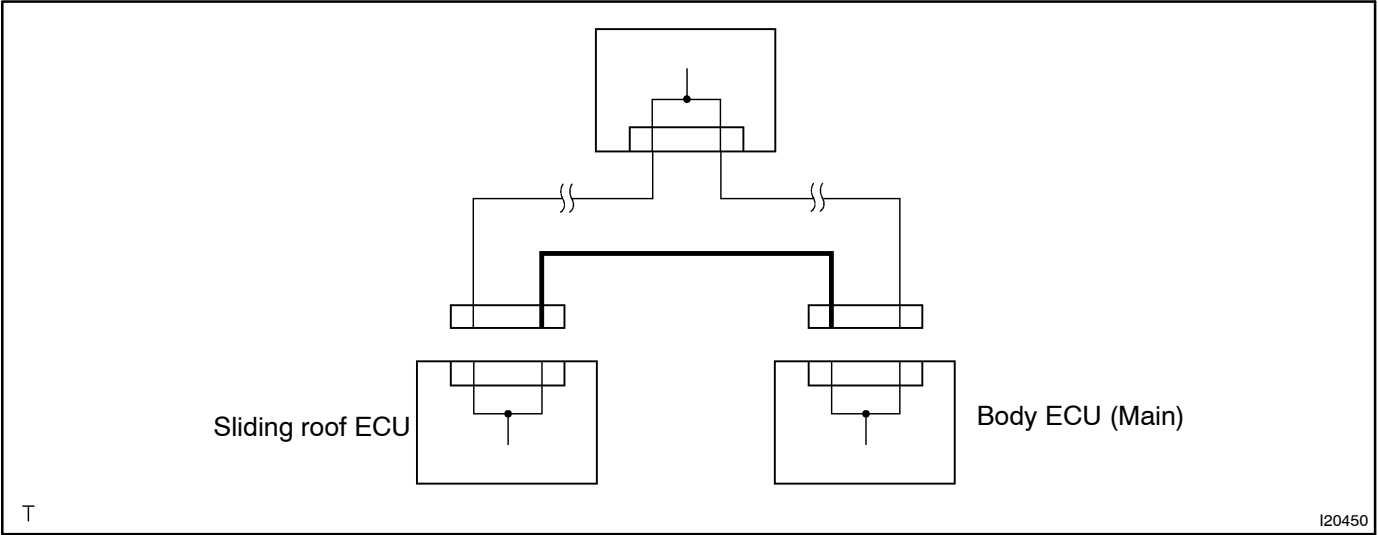

OK:

There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.

NG

Repair or replace wire harness.

OK

Replace sliding roof ECU (See page [IN-36](#)).