

DTC	B1275	Accessory Bus Buffer communication stop
------------	--------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Bus buffer ECU and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1275	No signal from bus buffer ECU for more than 10 seconds.	• Bus buffer ECU • Wire harness

WIRING DIAGRAM

See page [DI-1362](#).

INSPECTION PROCEDURE

1	Check wire harness. (See page IN-36)
---	---


PREPARATION:

Pull out the ECU connectors below.

Wire harness side connector of ECU	Terminal
Bus buffer ECU (Mayday ECU) – Center airbag sensor assembly	MPX1 (M11-6) – MPX1 (C32-24)

CHECK:

Check the continuity between the connectors on the wire harness.

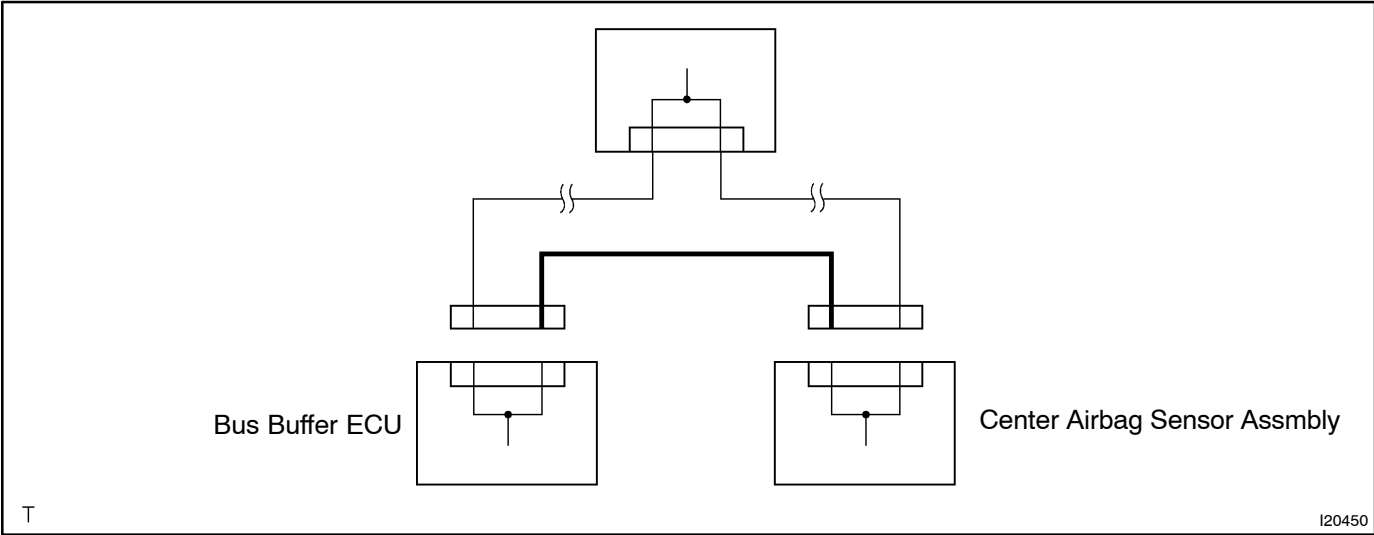

OK:

Continuity

NG

Repair or replace wire harness.

OK

Replace the bus buffer ECU.