


Front Wiper Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the wiper switch and send it to the Wiper Control ECU.

WIRING DIAGRAM

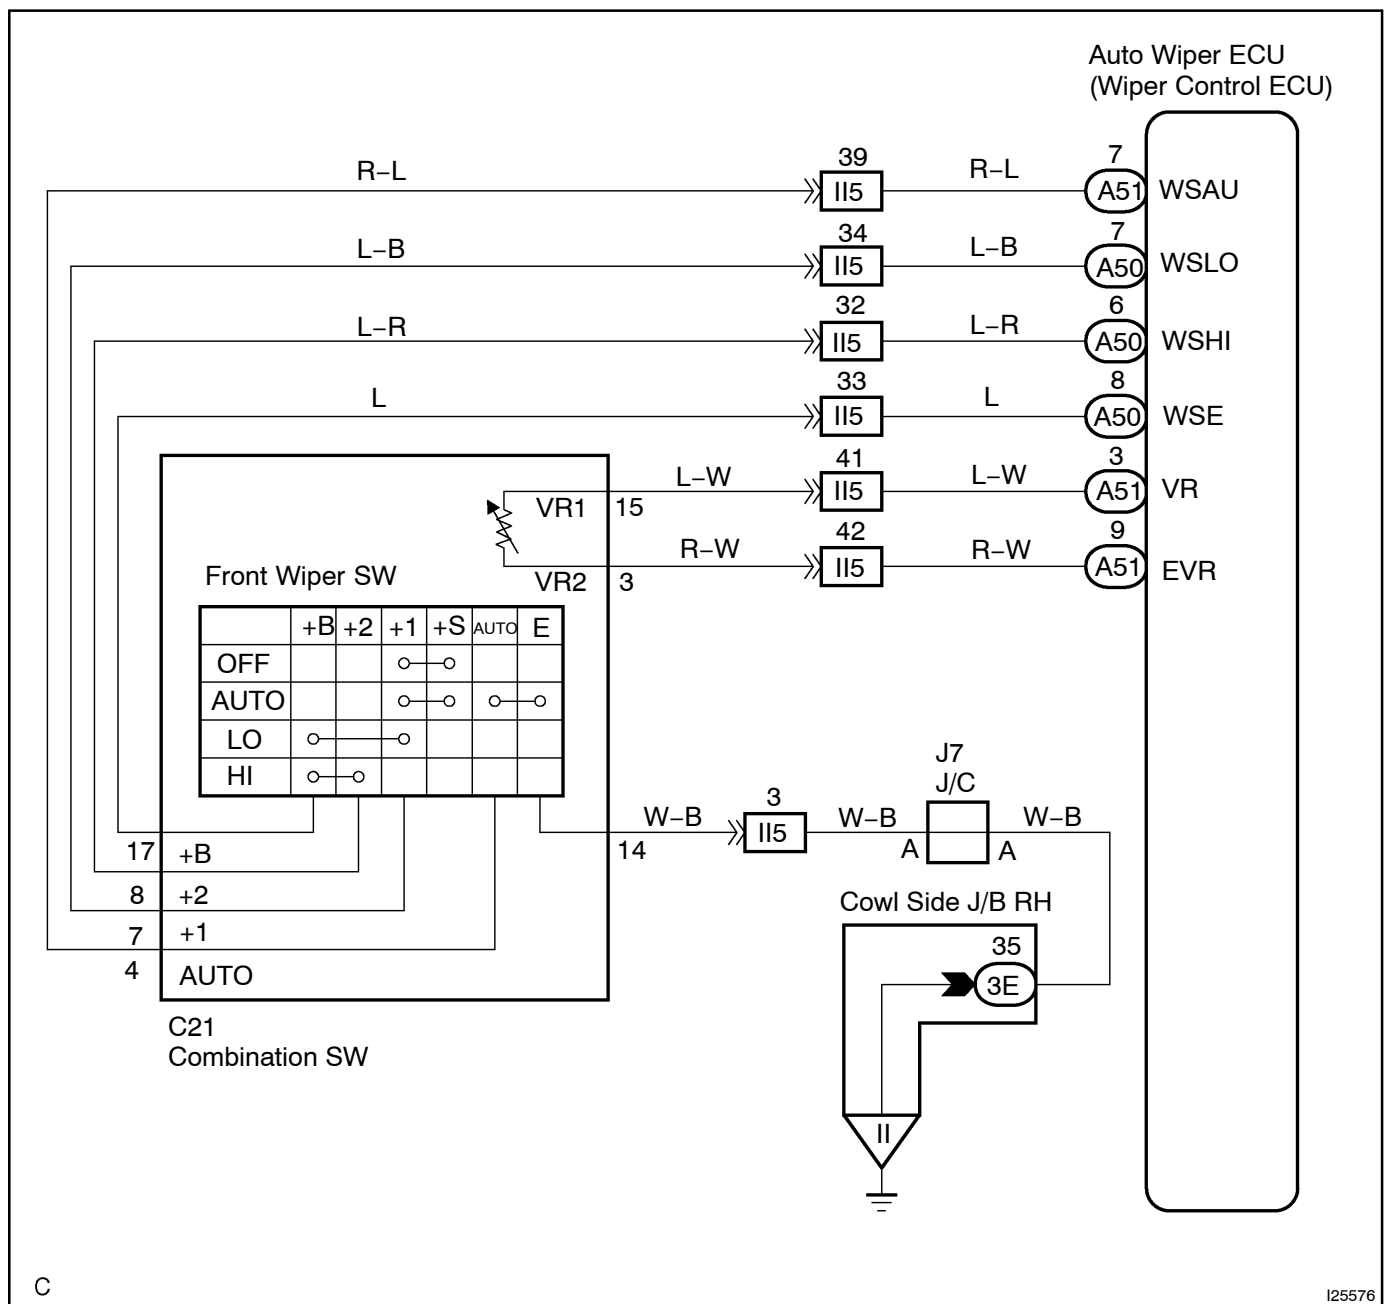

INSPECTION PROCEDURE

1	Check wire harness between combination switch and Wiper Control ECU (See page IN-36).
---	---

NG	Repair or replace wire harness.
----	---------------------------------

OK

2	Check wire harness between combination switch and body ground (See page IN-36).
---	---

NG	Repair or replace wire harness.
----	---------------------------------

OK

Proceed to next circuit inspection shown on problem symptom table. (See page [DI-1185](#))