

Neutral Signal Circuit


CIRCUIT DESCRIPTION

This circuit sends a signal of the Park/Neutral Position switch (Neutral or other) to the wiper control ECU.

HINT:

Refer to the Automatic Transmission section for the PNP switch check (See page [DI-268](#)).

WIRING DIAGRAM

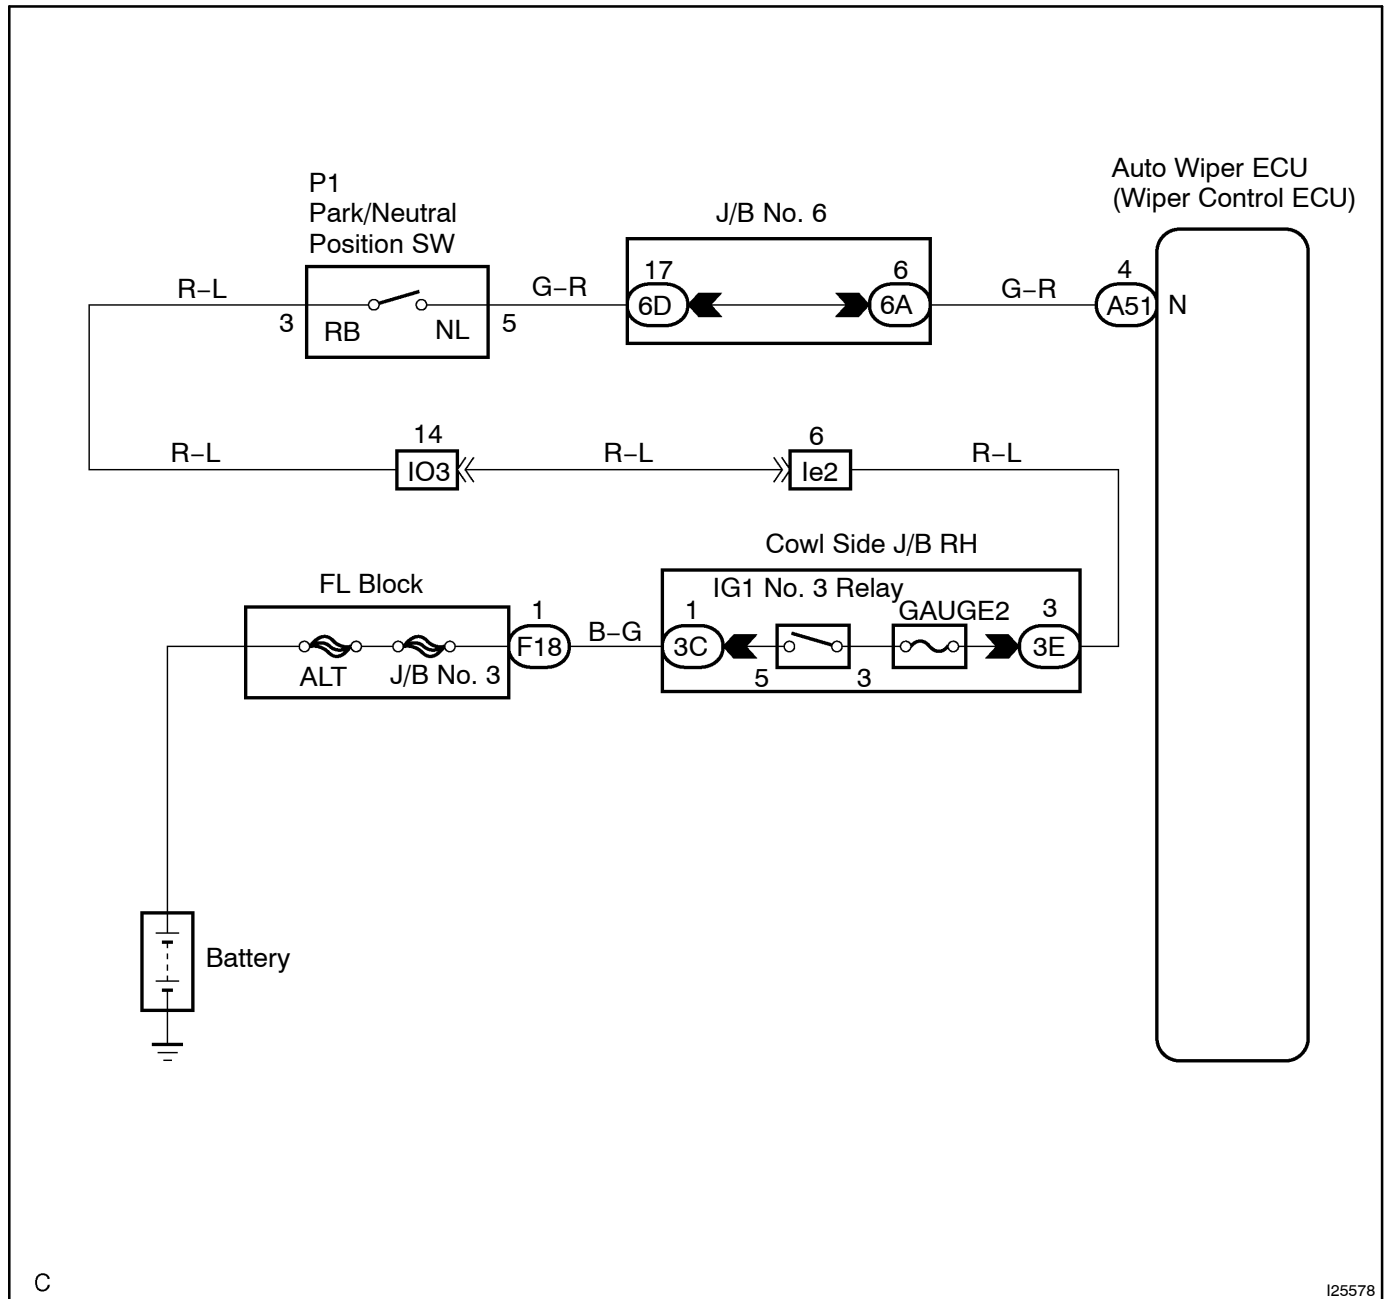

C

I25578

INSPECTION PROCEDURE

1	Check PNP signals using hand-held tester.
----------	--

PREPARATION:

Connect the hand-held tester to DLC3.

- (a) Connect the hand-held tester to DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main SW ON.

CHECK:

Select the item "NSW SW" in the DATA LIST and read its value displayed.

OK:

PNP switch position N: ON

PNP switch position except N: OFF

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1185](#)).

NG

Repair or replace harness and connector between park/neutral position switch and wiper control ECU (See page [IN-36](#)).