


Wiper Control ECU Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Wiper Control ECU.
This circuit is the power source for the BEAN drive circuit.

WIRING DIAGRAM

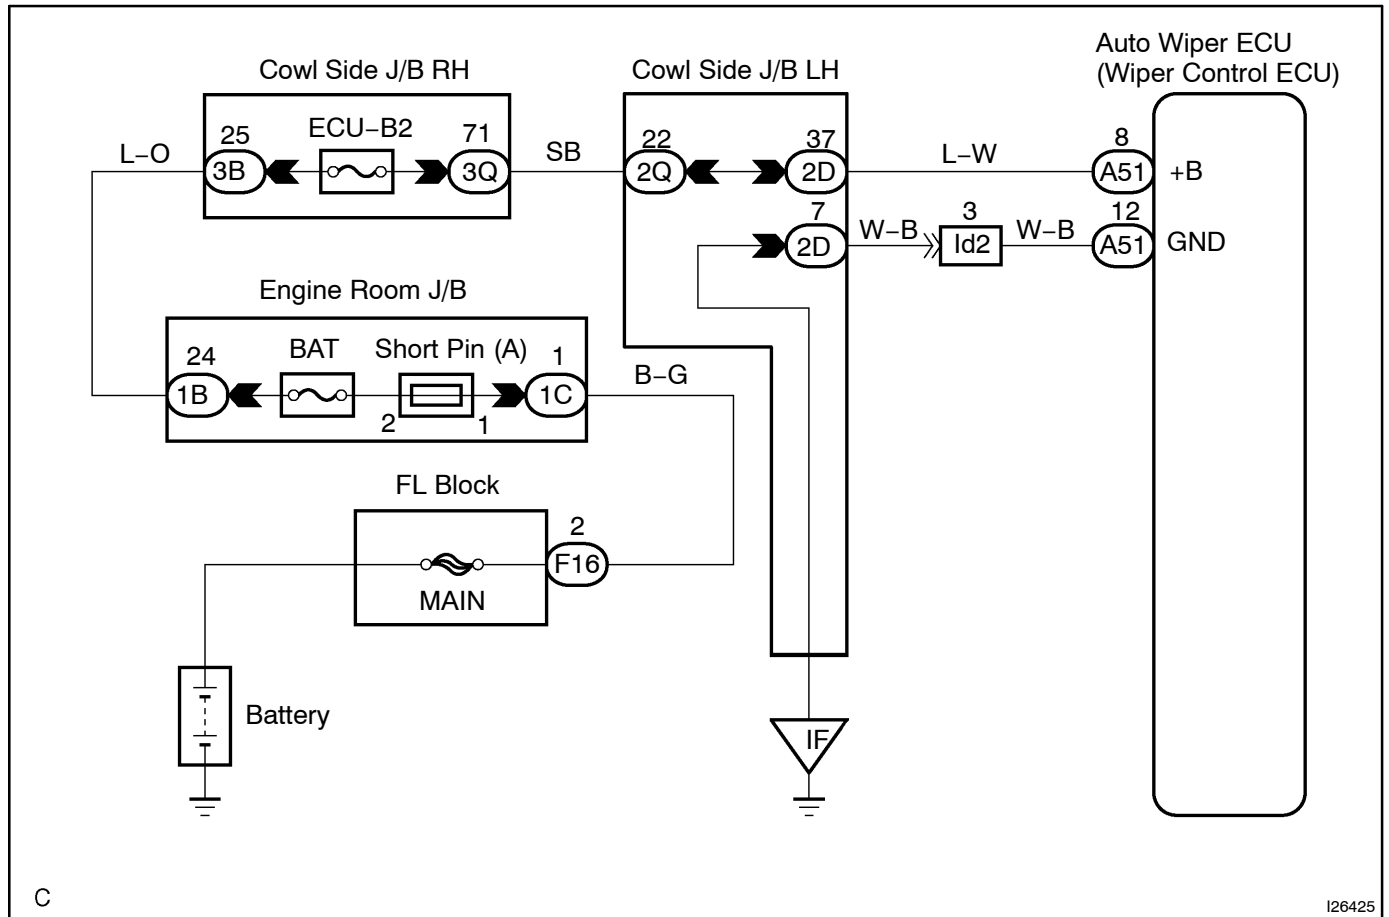

C

I26425

INSPECTION PROCEDURE**1 Check ECU-B2 fuse.****CHECK:**

Check continuity of ECU-B2 fuse.

OK:

Continuity

NG

Replace the defective fuse.

OK

2 Check voltage between terminal +B and GND of Wiper Control ECU.**CHECK:**

Measure voltage between terminals +B and GND of Wiper Control ECU with connector being connected.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1185](#)).

NG

3 Check wire harness and connector between Wiper Control ECU and body ground (See page [IN-36](#)).

NG

Repair or replace wire harness or connector.

OK

Check and repair wire harness and connector between ECU and battery.