

## PROBLEM SYMPTOMS TABLE

| Symptom                                                                                                                                                 | Suspect Area                                                                                                                                                                                                                                   | See page                                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto wiper system does not operate (All functions).                                                                                                     | 1. Front wiper switch<br>2. Front wiper switch circuit<br>3. Wiper control ECU power source circuit<br>4. IG switch circuit<br>5. Front wiper motor circuit<br>6. Front wiper position circuit<br>7. Front wiper motor<br>8. Wiper control ECU | <a href="#">BE-69</a><br><a href="#">DI-1200</a><br><a href="#">DI-1188</a><br><a href="#">DI-1190</a><br><a href="#">DI-1202</a><br><a href="#">DI-1192</a><br><a href="#">BE-69</a><br><a href="#">IN-36</a> |
| Raindrop Sensing Function does not operate (When the position is in "Auto", the system becomes vehicle speed-sensing adjustable interval INT function). | 1. Rain sensor circuit<br>2. Rain sensor<br>3. Wiper control ECU                                                                                                                                                                               | <a href="#">DI-1186</a><br><a href="#">IN-36</a><br><a href="#">IN-36</a>                                                                                                                                      |
| Vehicle Speed Switching Function Function does not operate.                                                                                             | 1. Neutral signal circuit<br>2. Stop light switch circuit<br>3. Stop light switch<br>4. Wiper control ECU                                                                                                                                      | <a href="#">DI-1194</a><br><a href="#">DI-1196</a><br><a href="#">BE-63</a><br><a href="#">IN-36</a>                                                                                                           |
| Washer-Linked Wiper with Drip-Preventive Function does not operate.                                                                                     | 1. Front wiper switch (front washer switch)<br>2. Front washer switch circuit<br>3. Wiper control ECU                                                                                                                                          | <a href="#">BE-69</a><br><a href="#">DI-1198</a><br><a href="#">IN-36</a>                                                                                                                                      |