

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Sliding roof control system does not operate.	1. Power Source Circuit 2. IG Switch Circuit 3. Sliding Roof Control Switch Circuit 4. Sliding Roof Control Gear Assembly with ECU	DI-1213 DI-1216 DI-1218 IN-36
Sliding roof operates abnormally or stops half way.	1. Pulse Plate (Sliding Roof Limit Switch) Circuit	DI-1220
Jam protection system does not operate.	1. Power Source Circuit 2. Sliding Roof Control Gear Assembly with ECU	DI-1213 IN-36