


TERMINALS OF ECU

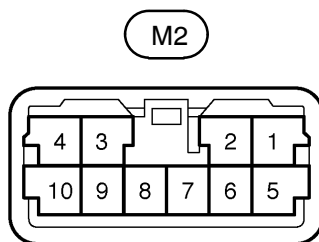

I04611

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
BUS (M2-2) ↔ (M2-7)	B	Multiplex communication circuit signals	–
DOWN ↔ E (M2-3 ↔ M2-7)	R-W ↔ W-B	Sliding roof control switch TILT DOWN	10 – 14 V
		Others	Below 1 V
UP ↔ E (M2-4 ↔ M2-7)	R-Y ↔ W-B	Sliding roof control switch TILT UP	10 – 14 V
		Others	Below 1 V
+B ↔ E (M2-5 ↔ M2-7)	B ↔ W-B	Always	10 – 14 V
E ↔ Body ground (M2-7 ↔ Body ground)	W-B ↔ Body Ground	Always	10 – 14 V
IG ↔ E (M2-8 ↔ M2-7)	B-W ↔ W-B	Ignition switch ON	10 – 14 V
		Ignition switch OFF or ACC	Below 1 V
OPEN ↔ E (M2-9 ↔ M2-7)	R ↔ W-B	Sliding roof control switch OPEN	10 – 14 V
		Others	Below 1 V
CLOSE ↔ E (M2-10 ↔ M2-7)	G-Y ↔ W-B	Sliding roof control switch CLOSE	10 – 14 V
		Others	Below 1 V