

Abnormal noise and vibration in the steering wheel

INSPECTION PROCEDURE

Check that the DTCs of VGRS, VSC and ABS are normal.

- | | |
|---|---|
| 1 | Check for abnormal noise and vibration when turning the steering wheel. |
|---|---|

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the VGRS actuator connector from VGRS ECU.

CHECK:

Check for abnormal noise and vibration, after starting the engine and turning the steering wheel.

OK:

No abnormal noise and vibration

NOTICE:

When the ignition switch with the steering actuator connector disconnected, DTC C1561/61 is stored.
Clear this code after this check.

NG

Check and repair power steering system.

OK

Replace VGRS actuator.