


## Tc and CG Terminal Circuit

### CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the VGRS ECU to display the DTC by blinking the VGRS warning light.

### WIRING DIAGRAM

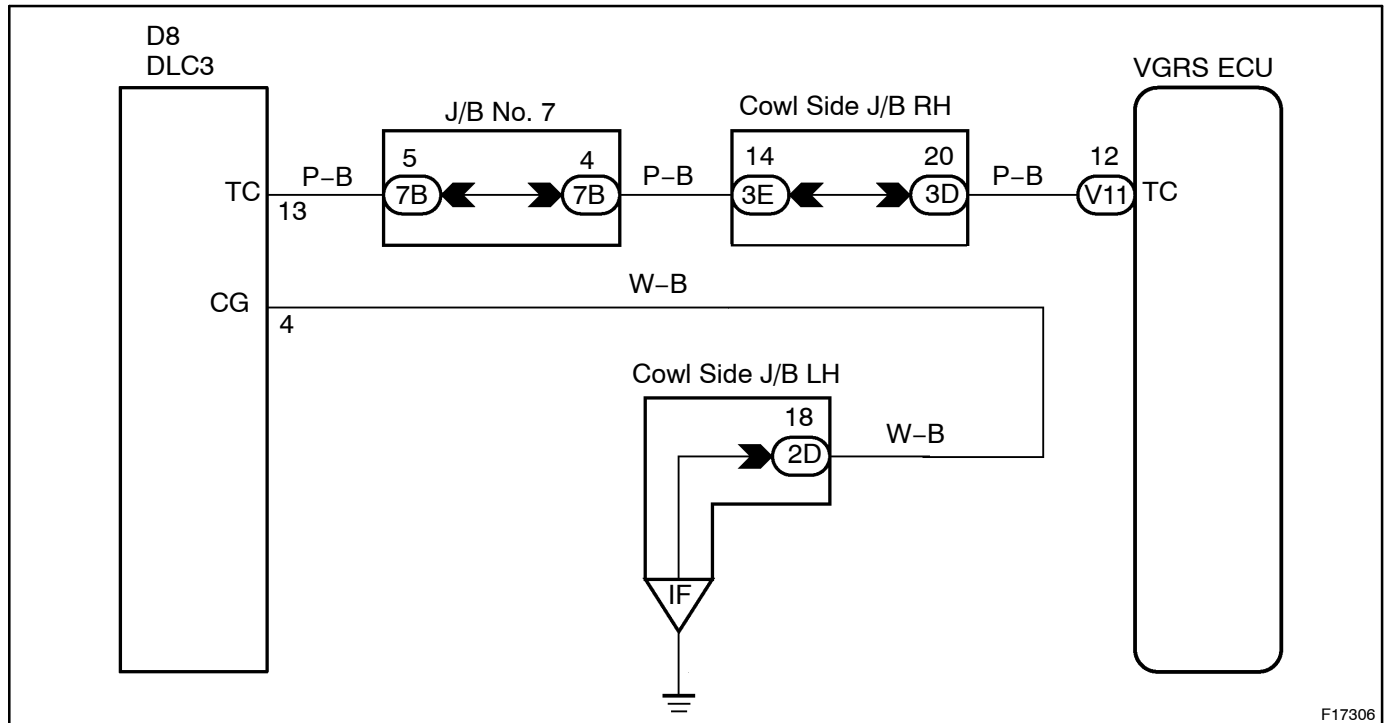

## INSPECTION PROCEDURE

- |   |                                                           |
|---|-----------------------------------------------------------|
| 1 | <b>Check voltage between terminals Tc and CG of DLC3.</b> |
|---|-----------------------------------------------------------|

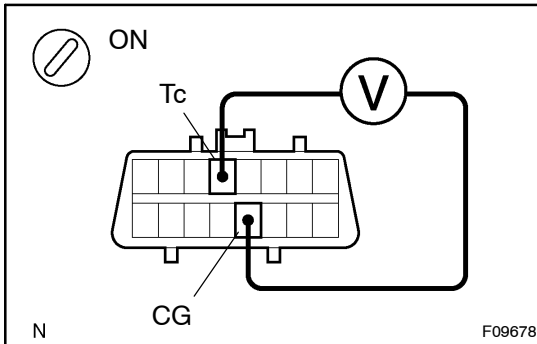**CHECK:**

Turn the ignition switch ON and measure the voltage between terminals Tc and CG of the DLC3.

**OK:**

**Voltage: 10 to 14 V**

**OK**

If VGRS warning light does not blink even after Tc and CG are connected, Check VGRS warning light circuit.

**NG**

- |   |                                                                                                                                                                 |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | <b>Check for open or short circuit in harness and connector between VGRS ECU and DLC3 (Tc), and DLC3 (CG) and body ground (See page <a href="#">IN-36</a>).</b> |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|

**NG**

**Repair or replace harness or connector.**

**OK**

**Replace VGRS ECU.**