

Ts and CG Terminal Circuit


CIRCUIT DESCRIPTION

The sensor signal check detects faults in VGRS sensor signal which cannot be detected by the DTC check.

HINT:

If a current DTC exists, when connecting Ts and CG the warning light will remain on.

WIRING DIAGRAM

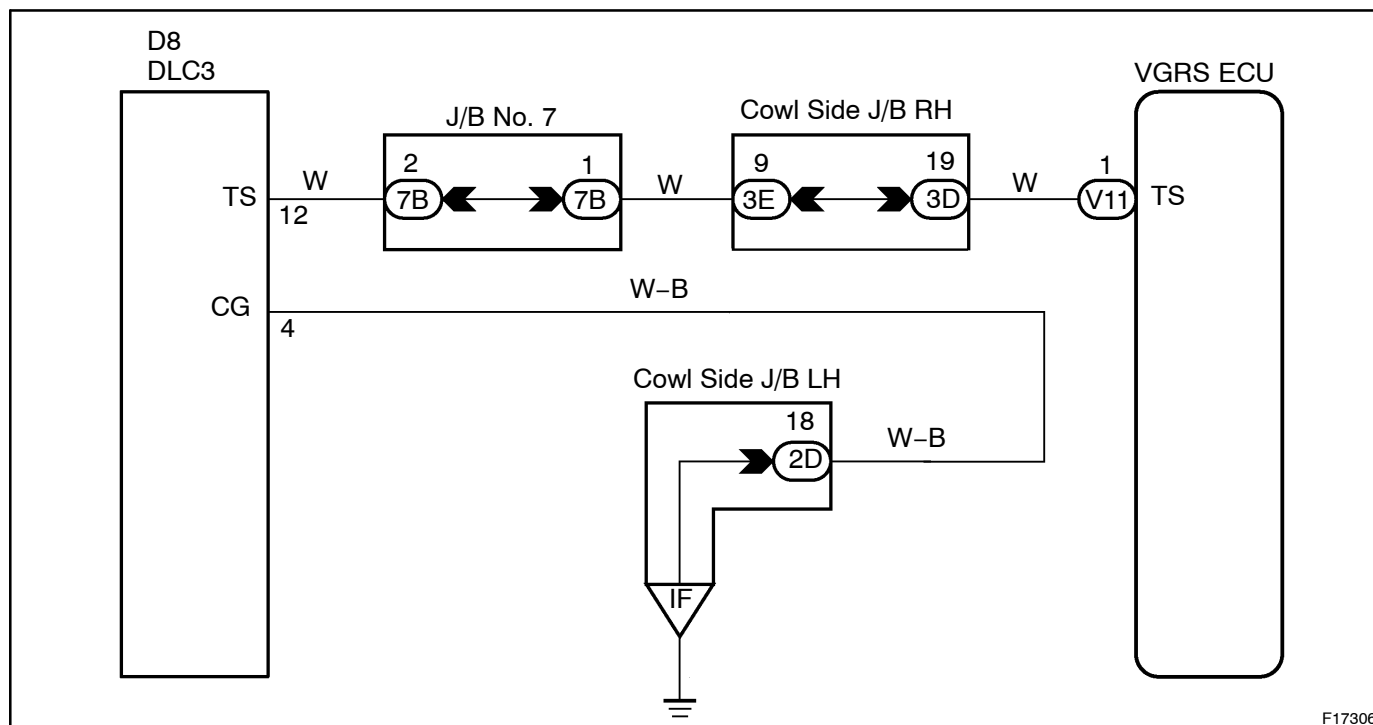

INSPECTION PROCEDURE

HINT:


Troubleshooting in accordance with the chart below for each trouble symptom.

VGRS warning light does not light up	Go to step 1
VGRS warning light remains on	Go to step 2

1	Connect terminals Ts and CG of DLC3.
----------	---

A: VGRS warning light does not illuminate.

 B: VGRS warning light on solid.




Check and repair circuit fuse, bulb, wire harness or combination meter.
--

2	Check for open circuit between DLC3 (Ts) and VGRS ECU.
----------	---

A: Open circuit

 B: No open circuit



Repair circuit.
