

PRE-CHECK

Wireless function (Remote control) does not operate.

Set the vehicle in the initialized condition.

Initialized condition is the condition when the following conditions are satisfied.

- (1) Key plate is not inserted in the ignition key cylinder.
- (2) All the doors are closed. (Door warning light is off.)
- (3) All the doors are locked.

Basic function check

Under the standard operation, check the UNLOCK-LOCK operation after operating the UNLOCK and LOCK switch 3 times or more alternately.

- Follow the procedure below to perform the standard operation.

- (1) Keep about 1 M away from the outside handle of a driver's seat in the right direction.
- (2) Face the transmitter toward the vehicle and press one of the transmitter switches for about 1 sec.

<Reference>

As of the security function, even the wireless function is normal, there may be the case that only UNLOCK operation will not work.

No

Yes

Normal

<Reference>

- Operative distance may differ depending on the operator, the way of holding or its position.
- As the transmitter uses weak wave, its operating range becomes narrow when the weak wave is interrupted by noise.







