


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

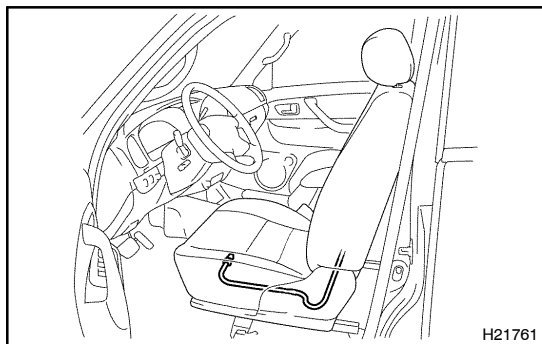

1. REMOVE FRONT SEAT

- Remove the 4 seat track covers and 4 bolts.
- Disconnect the connectors.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Remove the front seat.

NOTICE:

Be careful not to damage the body.


2. REMOVE HEADREST

3. REMOVE SEATBACK BOARD

Remove the seatback board as shown in the illustration.


HINT:

Remove the seatback board in order "A" and "B" as shown in the illustration.

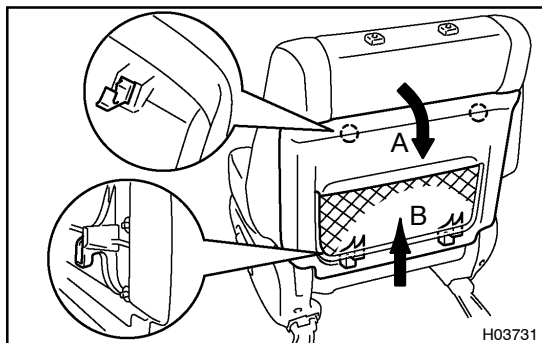


4. REMOVE SEAT CUSHION OUTER SHIELD


- Remove the 4 screws.
- Disconnect the connectors.
- Remove the seat cushion outer shield.

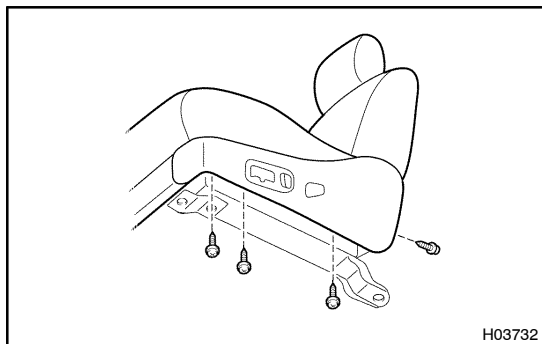


5. REMOVE FRONT SEAT INNER BELT

- Remove the clamp, then disconnect the connector.
- Remove the bolt and inner belt.

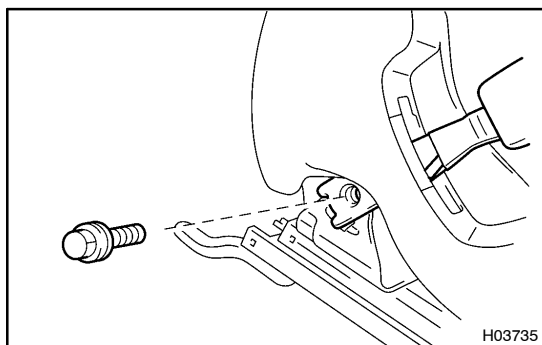


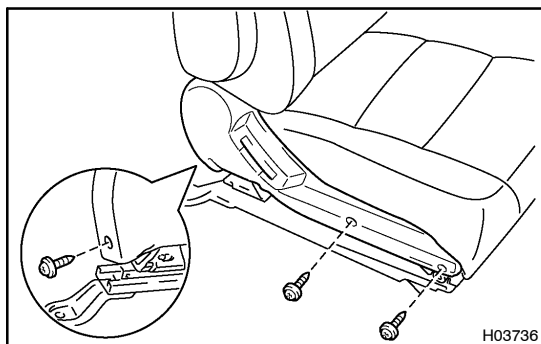**6. REMOVE SEAT CUSHION INNER SHIELD**


Remove the 3 screws and seat cushion inner shield.

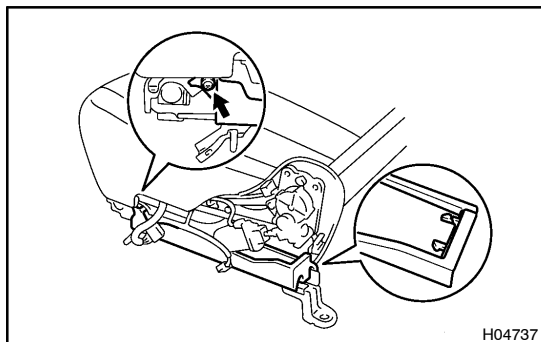**7. REMOVE LOWER SEAT CUSHION SHIELD**


Remove the screw and lower seat cushion shield as shown in the illustration.

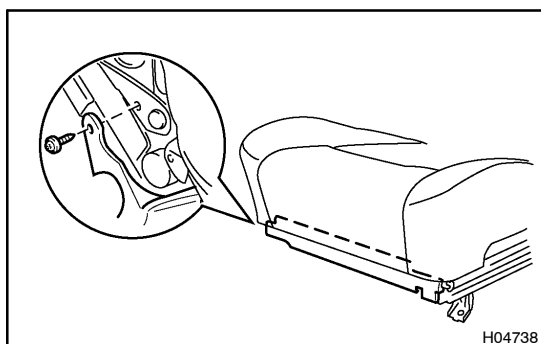**8. REMOVE FRONT SEAT CUSHION SHIELD**


Remove the screw and front seat cushion shield.

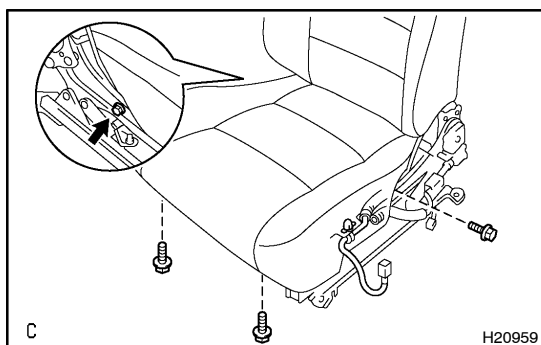**9. REMOVE SEAT CUSHION ASSEMBLY**

- (a) Remove the 4 bolts.
- (b) Remove the clamps from the seat cushion assembly.

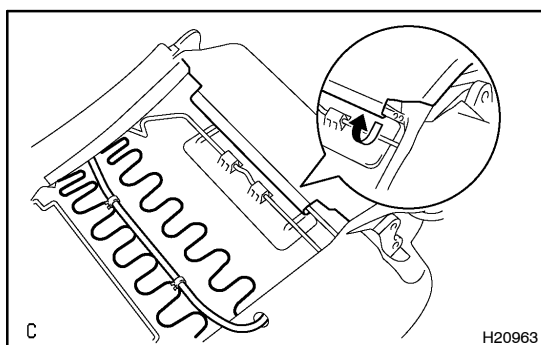**10. REMOVE SEATBACK ASSEMBLY**


- (a) Remove the hog rings.
- (b) Disengage the hook as shown in the illustration.
- (c) Disconnect the connectors.

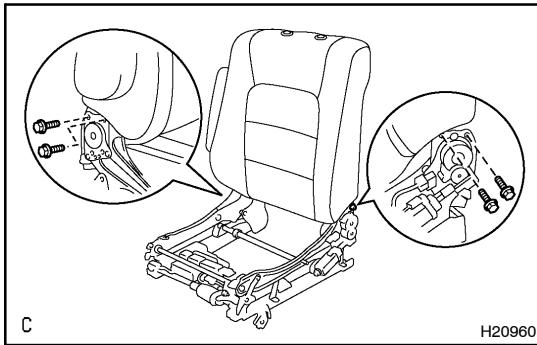

(d) Remove the 4 bolts and seatback assembly.

NOTICE:

When handling the airbag connector take care not to damage the airbag wire harness.

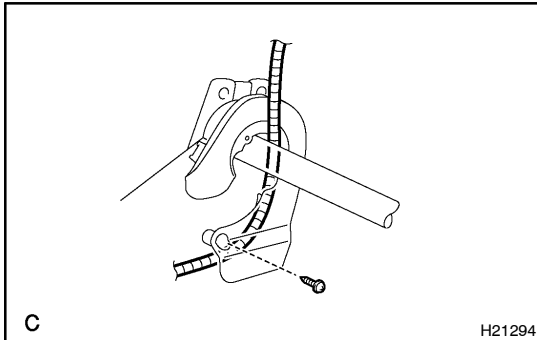


(e) Remove the screw and RH reclining adjuster inside shield, then disconnect the side airbag connector.

NOTICE:


When handling the airbag connector take care not to damage the airbag wire harness.

11. REMOVE ARMREST

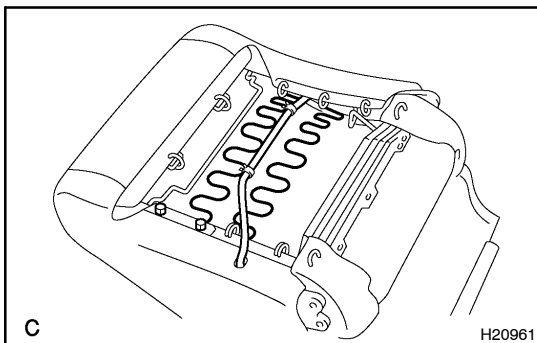

12. REMOVE SEATBACK FRAME

- (a) Remove the hog rings, the clamps and the 2 bolts.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.

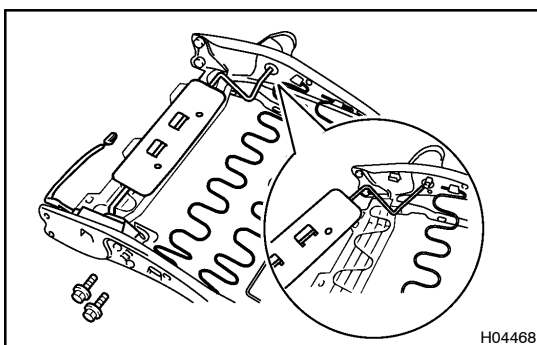

13. REMOVE LUMBER SUPPORT

Remove the 2 bolts and lumbar support.