

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-24](#)).

HINT:

After installation, check the ABS speed sensor signal. (See page [DI-431](#))