


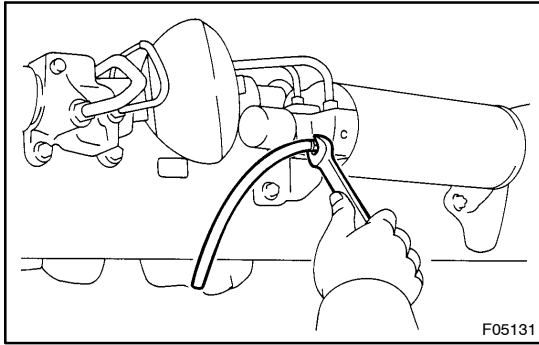

## REMOVAL


### 1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for height control accumulator and loosen the bleeder plug.
- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

**Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)**

### 2. REMOVE FRONT LH DAMPING FORCE CONTROL ACTUATOR (See page [SA-165](#))

### 3. DISCONNECT CONNECTOR

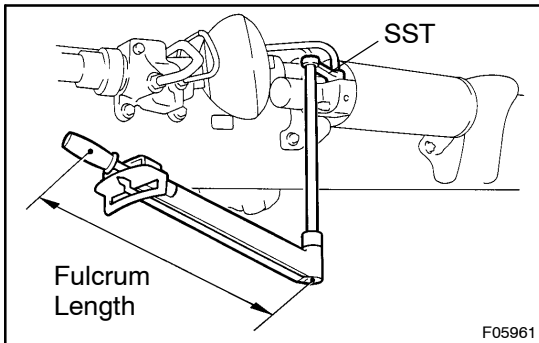


### 4. REMOVE HEIGHT CONTROL ACCUMULATOR

- (a) Using SST, disconnect the inlet fluid line from the height control accumulator.

SST 09023-38400

**Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)**

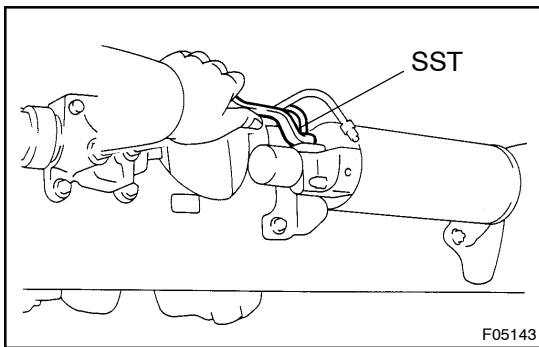

- (b) Using SST, disconnect the outlet fluid line from the height control accumulator.

SST 09751-36011

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

- (c) Remove the nut, 3 bolts and height control accumulator.

**Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)**