



## REMOVAL

### 1. REMOVE FRONT AXLE HUB (See page SA-10)

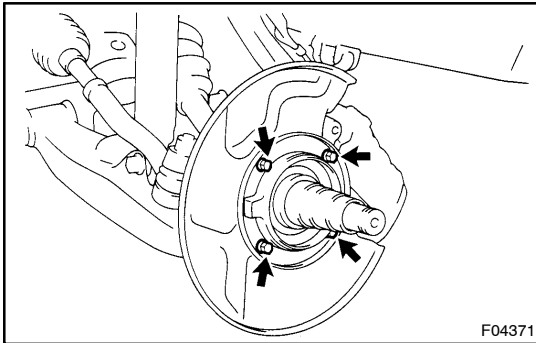

### 2. REMOVE OIL SEAL, GASKET AND DUST COVER

Remove the 4 bolts, oil seal, gasket and dust cover.

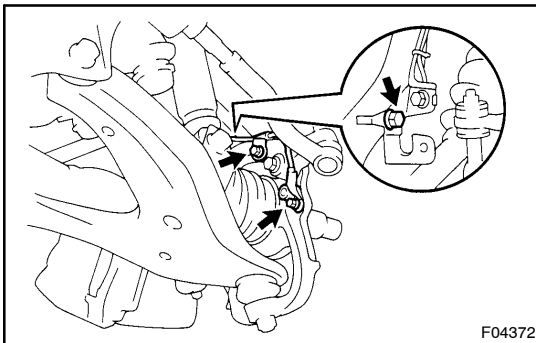


### 3. DISCONNECT ABS SPEED SENSOR AND WIRE HARNESS

Remove the 3 bolts and disconnect the ABS speed sensor and wire harness.

### 4. DISCONNECT TIE ROD END FROM STEERING KNUCKLE ARM

(a) Remove the cotter pin and nut.

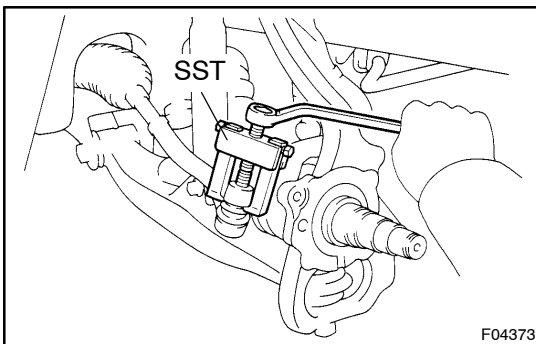


(b) Using SST, disconnect the tie rod end from the steering knuckle arm.

SST 09628-62011

### 5. DISCONNECT LOWER SUSPENSION ARM FROM STEERING KNUCKLE

(a) Remove the cotter pin and nut.

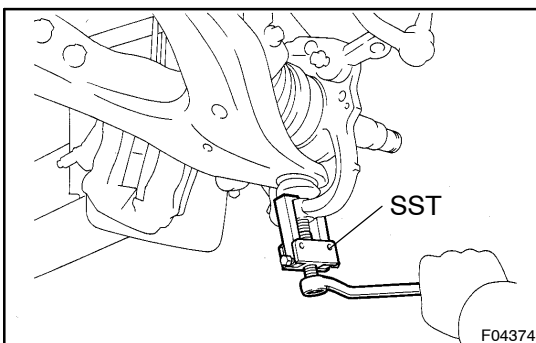


(b) Using SST, disconnect the lower suspension arm from the steering knuckle.

SST 09628-62011

### 6. REMOVE STEERING KNUCKLE

(a) Remove the cotter pin and nut.

(b) Temporarily install the nut to the lower suspension arm.

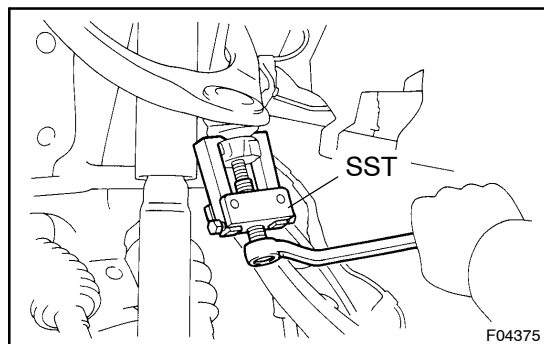

- (c) Using SST, disconnect the steering knuckle from the upper suspension arm.  
SST 09628-62011
- (d) Remove the nut and steering knuckle from the lower suspension arm.