

INSPECTION

1. REMOVE ECM
2. INSPECT ECM (See page [DI-31](#))
3. REINSTALL ECM