



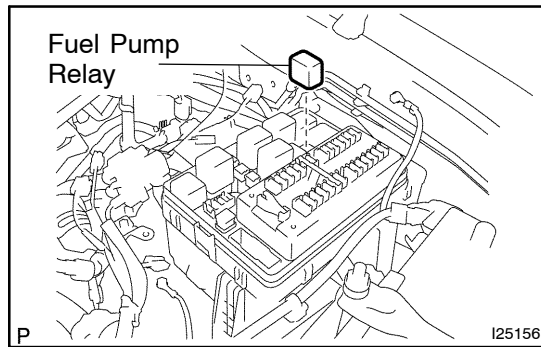

FUEL PUMP RELAY INSPECTION

SF1V1-01

1. REMOVE RELAY BOX COVER
2. REMOVE FUEL PUMP RELAY (Marking: F/PUMP)

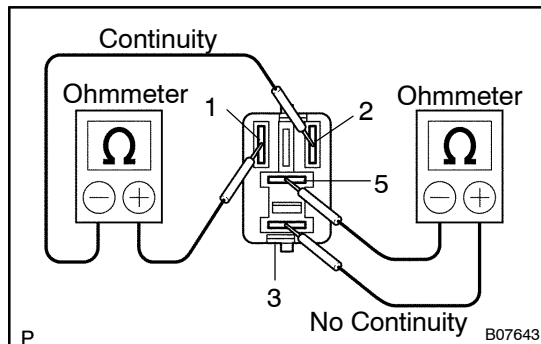


3. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is a continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is a continuity, replace the relay.

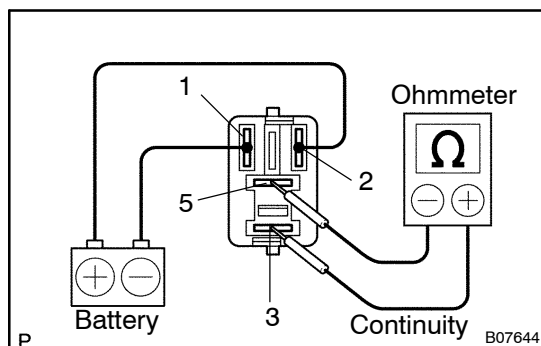

4. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply the battery positive voltage across terminal 1 and 2.

- (b) Using an ohmmeter, check that there is a continuity between terminal 3 and 5.

If there is no continuity, replace the relay.

5. REINSTALL FUEL PUMP RELAY
6. REINSTALL RELAY BOX COVER