


FUEL TANK AND LINE COMPONENTS

SF00Z-16

CAUTION:

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all tightening parts.

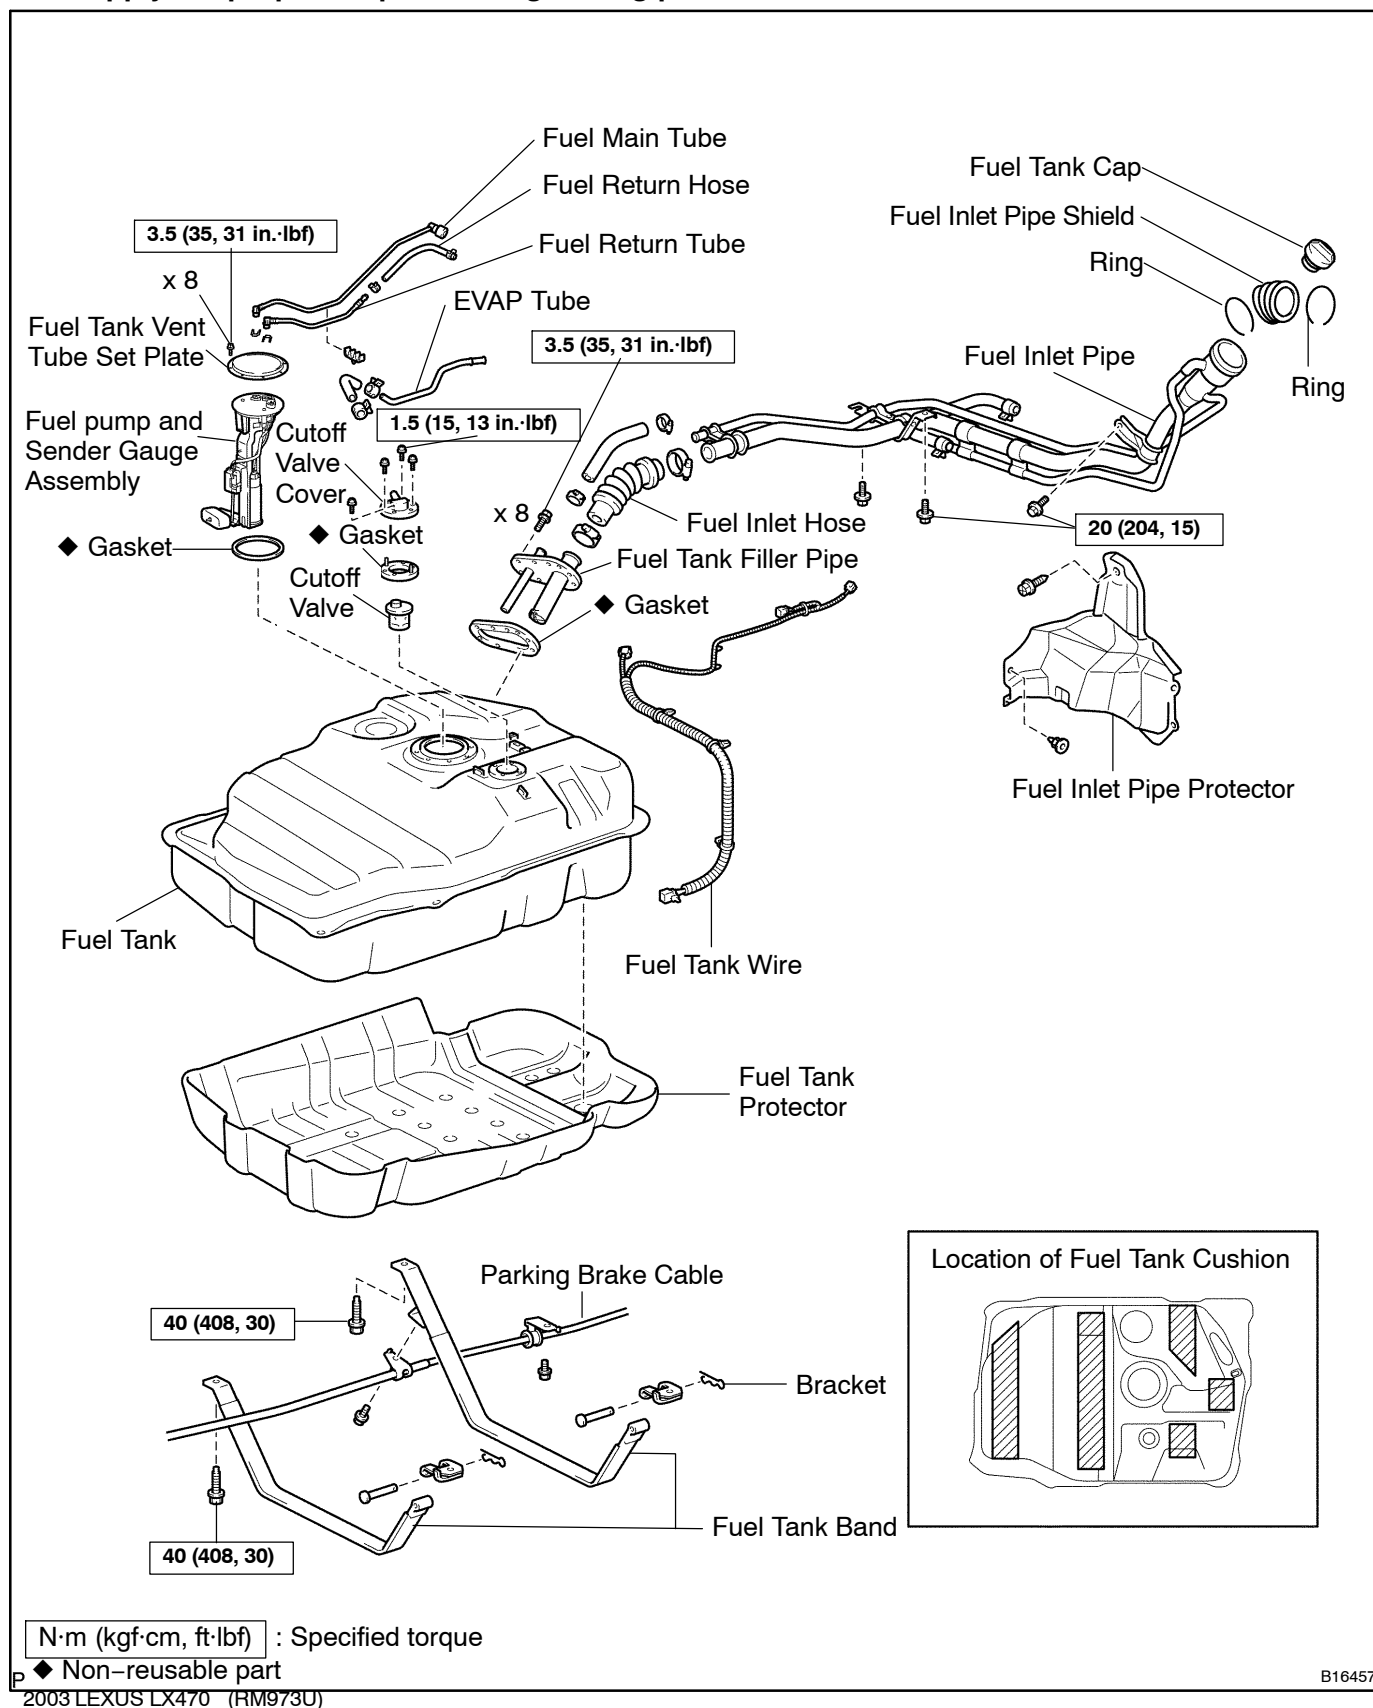

B16457