


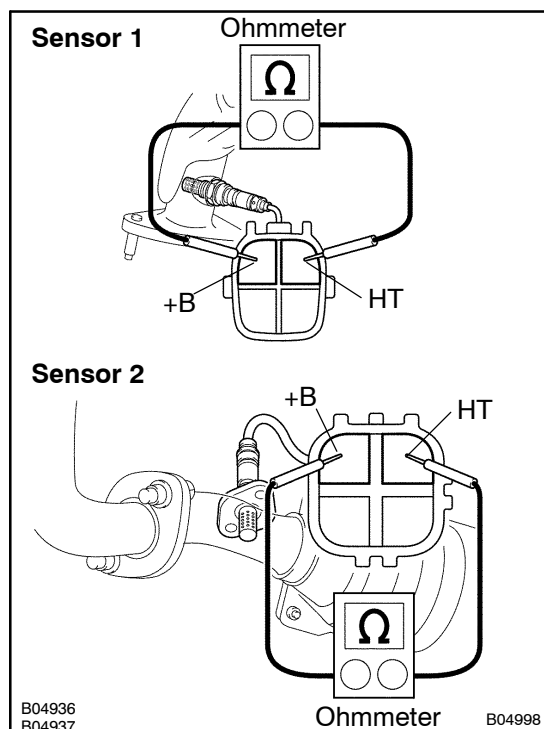

## INSPECTION

### 1. INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

- Disconnect the oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminal +B and HT.

**Resistance: 11 – 16  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the sensor.

**Torque:**

**44 N·m (450 kgf·cm, 32 ft·lbf) for sensor 1**

**20 N·m (200 kgf·cm, 14 ft·lbf) for sensor 2**

- Reconnect the oxygen sensor connector.
- ### 2. INSPECT OPERATION OF HEATED OXYGEN SENSORS (See pages [DI-66](#) and [DI-78](#))