


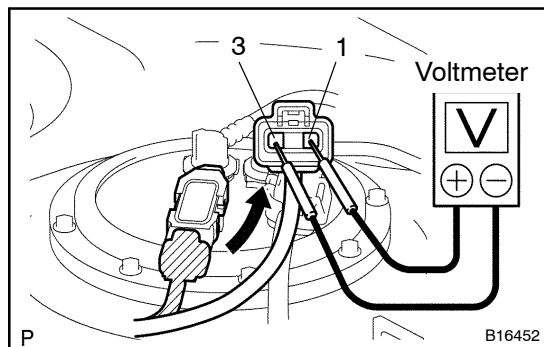


## INSPECTION

### 1. INSPECT POWER SOURCE VOLTAGE OF VAPOR PRESSURE SENSOR

- Disconnect the vapor pressure sensor connector.
- Turn the ignition switch ON.
- Using a voltmeter, measure the voltage between connector terminal 1 and 3 of the wiring harness side.

**Voltage: 4.5 – 5.5 V**

- Turn the ignition switch OFF.
- Reconnect the vapor pressure sensor connector.

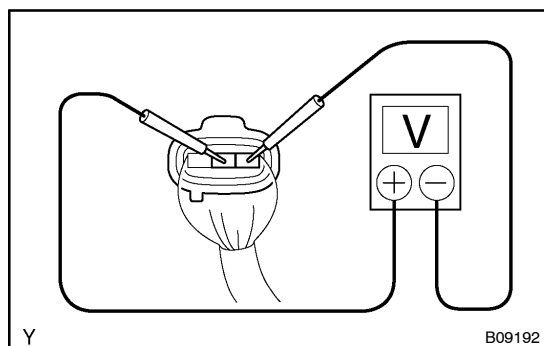

### 2. INSPECT POWER OUTPUT OF VAPOR PRESSURE SENSOR

- Turn the ignition switch ON.
- Remove the fuel tank cap.
- Connect a voltmeter to terminal 2 and 3, and measure the output voltage.

**Voltage: 3.0 – 3.6 V**

- Reinstall the fuel tank cap.
- Turn the ignition switch OFF.