


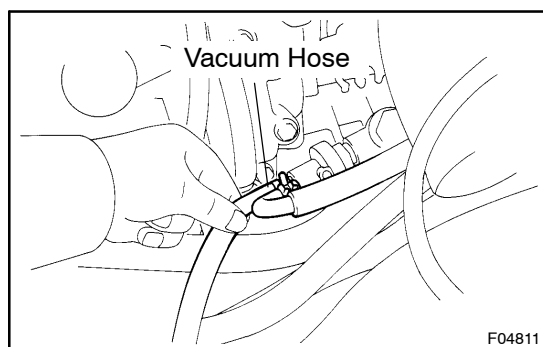

AIR CONTROL VALVE INSPECTION

SR0LZ-05

- 1. TURN AIR CONDITIONING SWITCH OFF**
- 2. CHECK IDLE-UP**
 - (a) Start the engine and run it at idle.
 - (b) Fully turn the steering wheel.
 - (c) Check that the engine rotations decreases when the vacuum hose of the air control valve is pinched.
 - (d) Check that the engine rotations increases when the hose is released.