



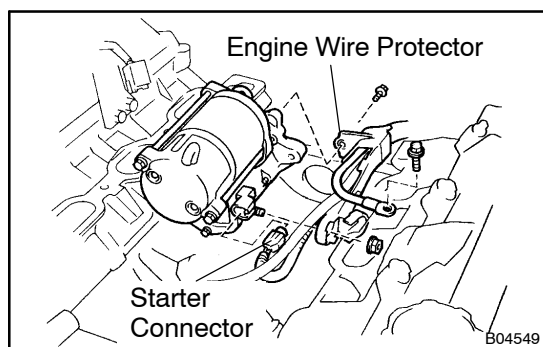

INSTALLATION

1. INSTALL STARTER

- (a) Install the engine wire protector to the starter with the bolt.
Torque: 9.81 N·m (100 kgf·cm, 84 in·lbf)
- (b) Connect the starter wire with the nut.
Torque: 9.81 N·m (100 kgf·cm, 84 in·lbf)
- (c) Connect the starter connector.
- (d) Connect the starter to the cylinder block.
- (e) Connect the engine wire with the bolt.

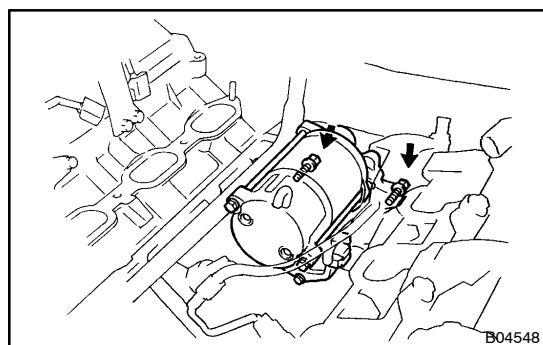

- (f) Install the starter with the 2 bolts.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- 2. **INSTALL INTAKE MANIFOLD ASSEMBLY**
(See page [EM-59](#))
- 3. **INSTALL INTAKE AIR CONNECTOR**
- 4. **INSTALL V-BANK COVER**