



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

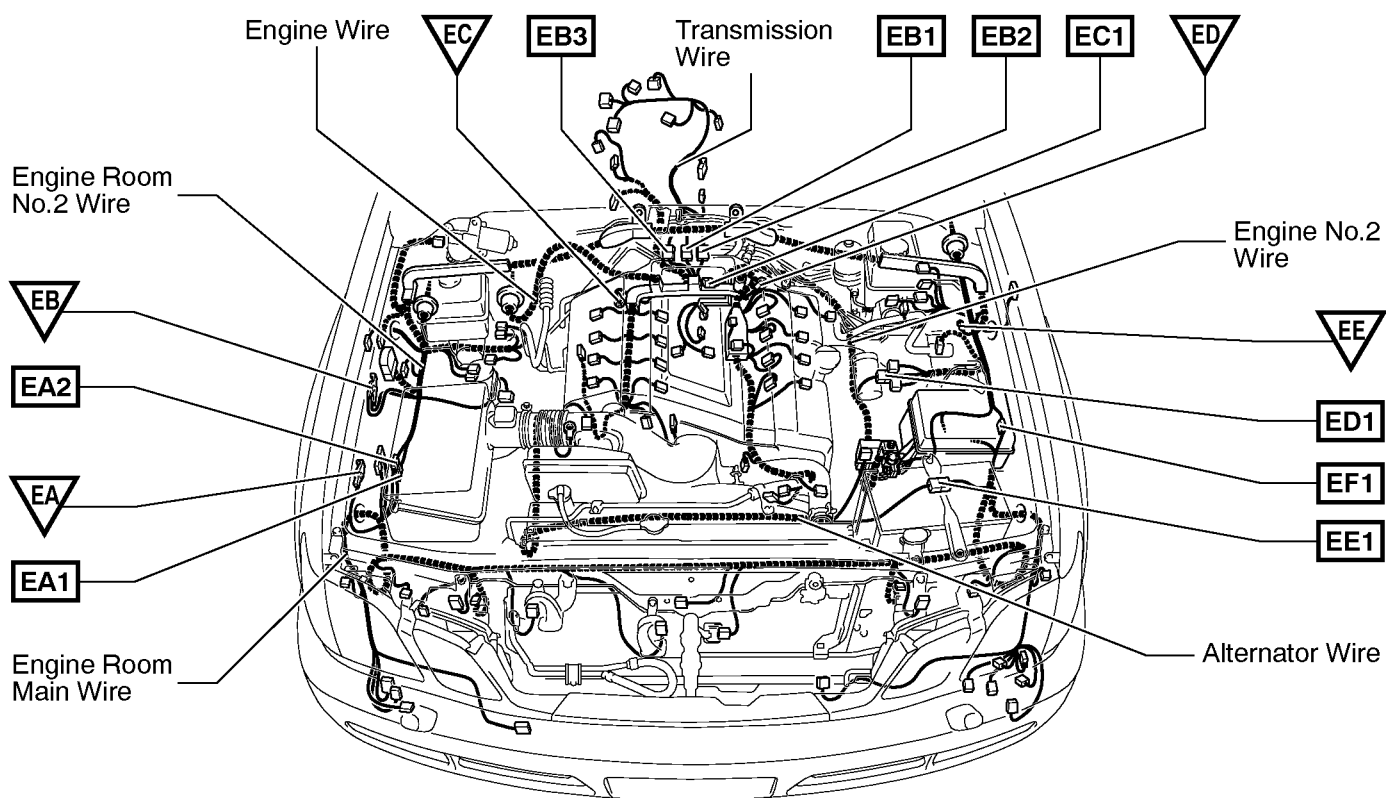

○ : Location of Splice Points

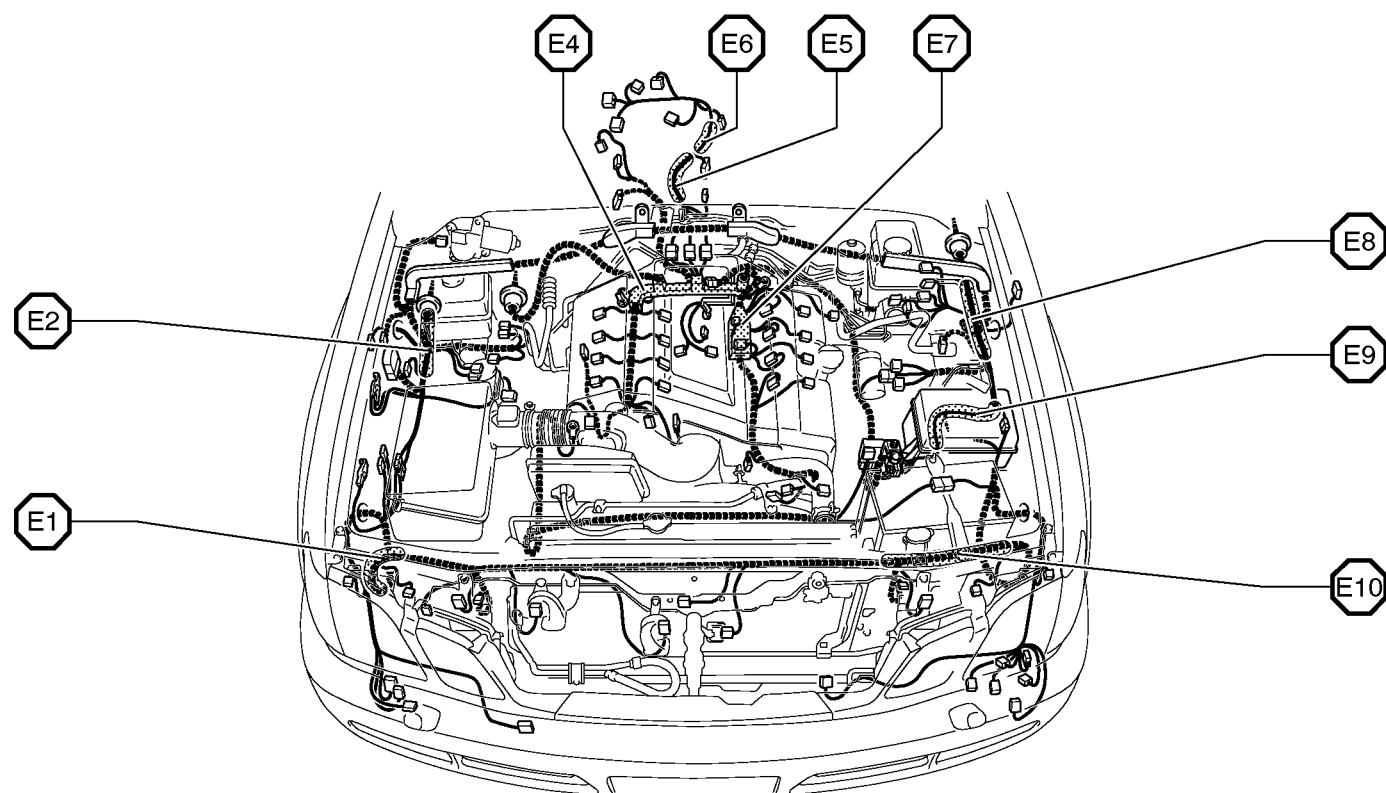


Connector Joining Wire Harness and Wire Harness

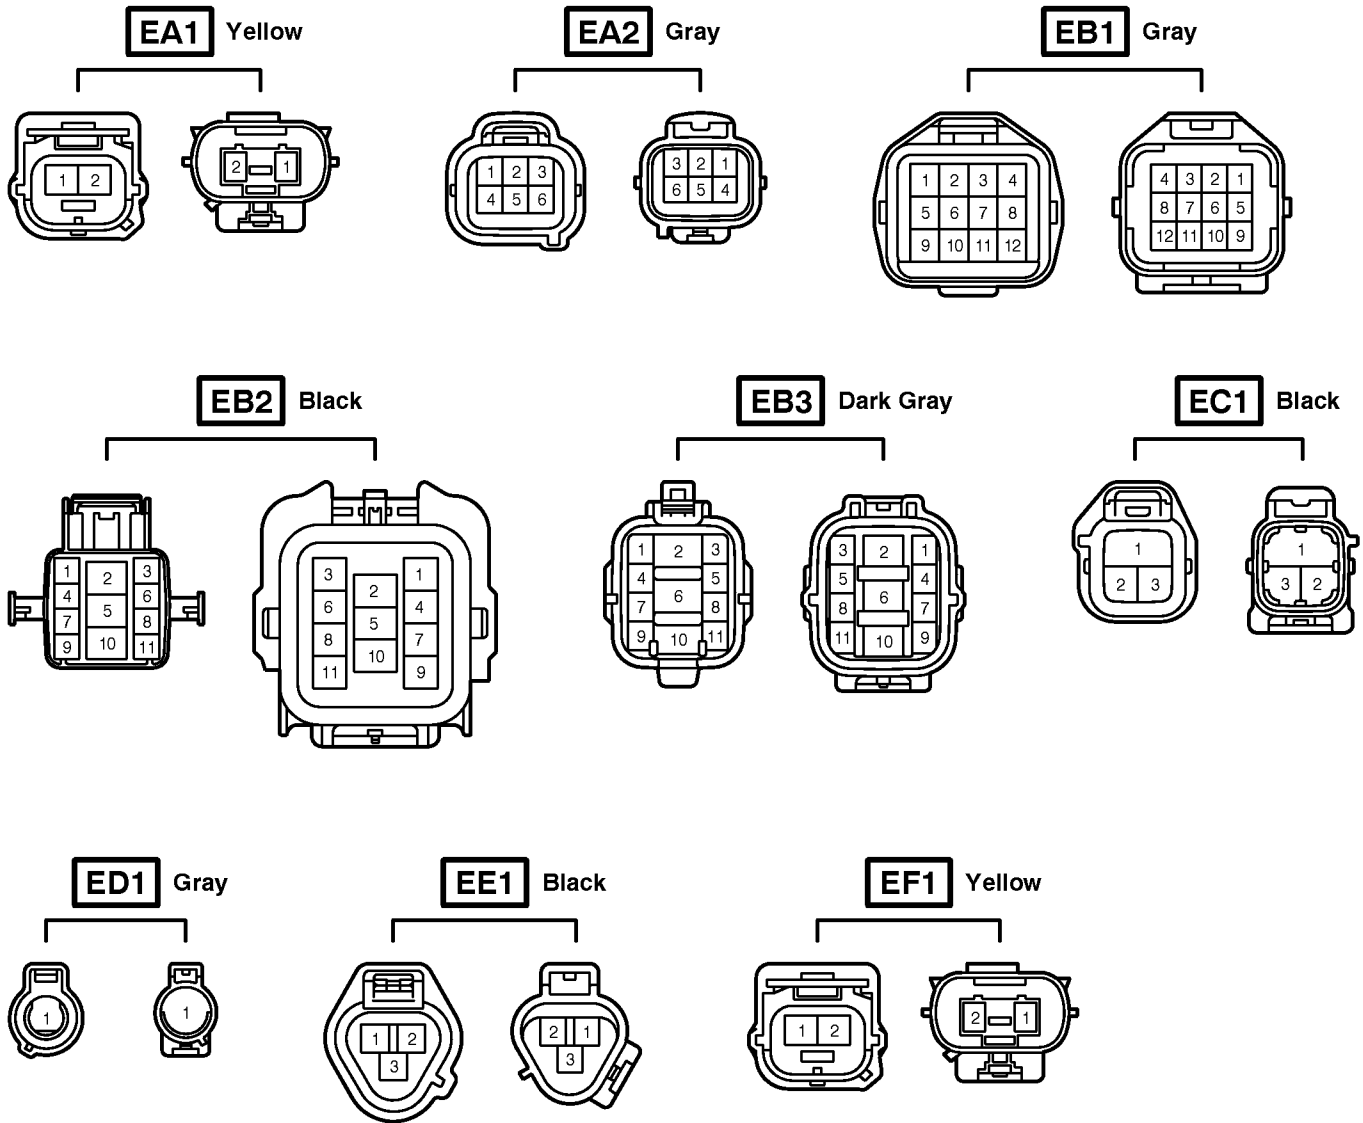


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB3	
EC1	Engine No.2 Wire and Engine Wire (On the Transmission)
ED1	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
EE1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

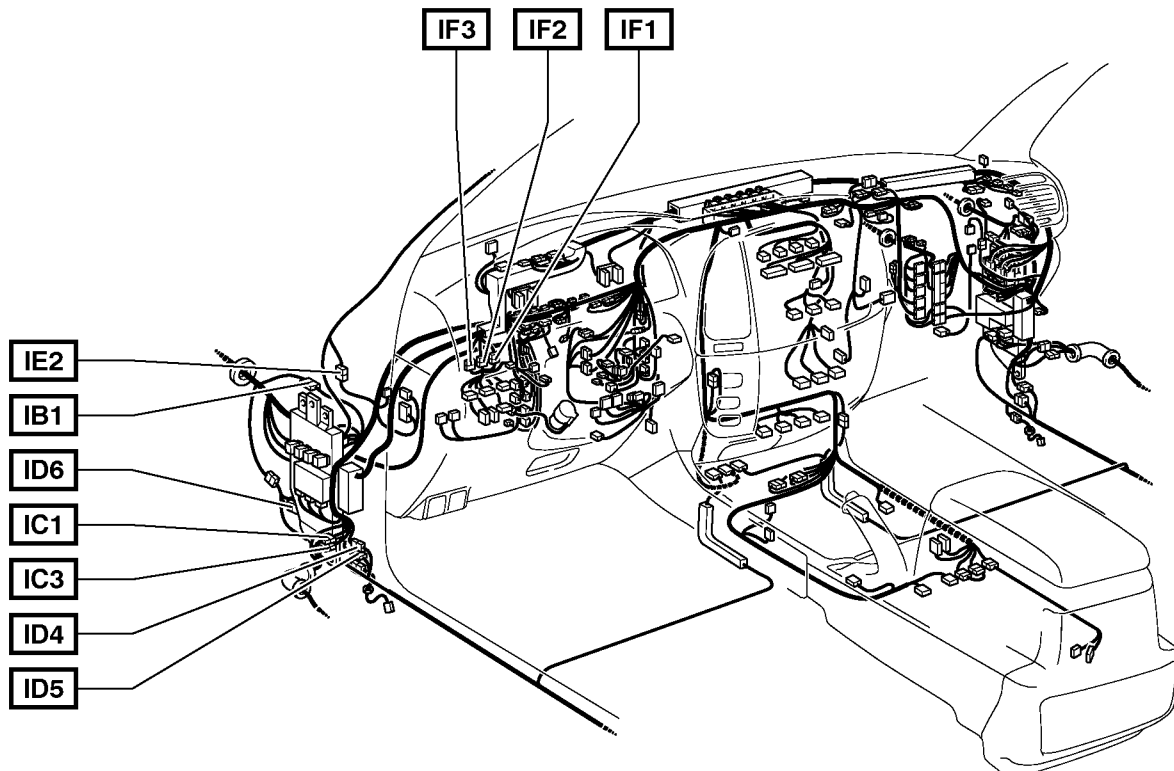

▽ : Location of Ground Points

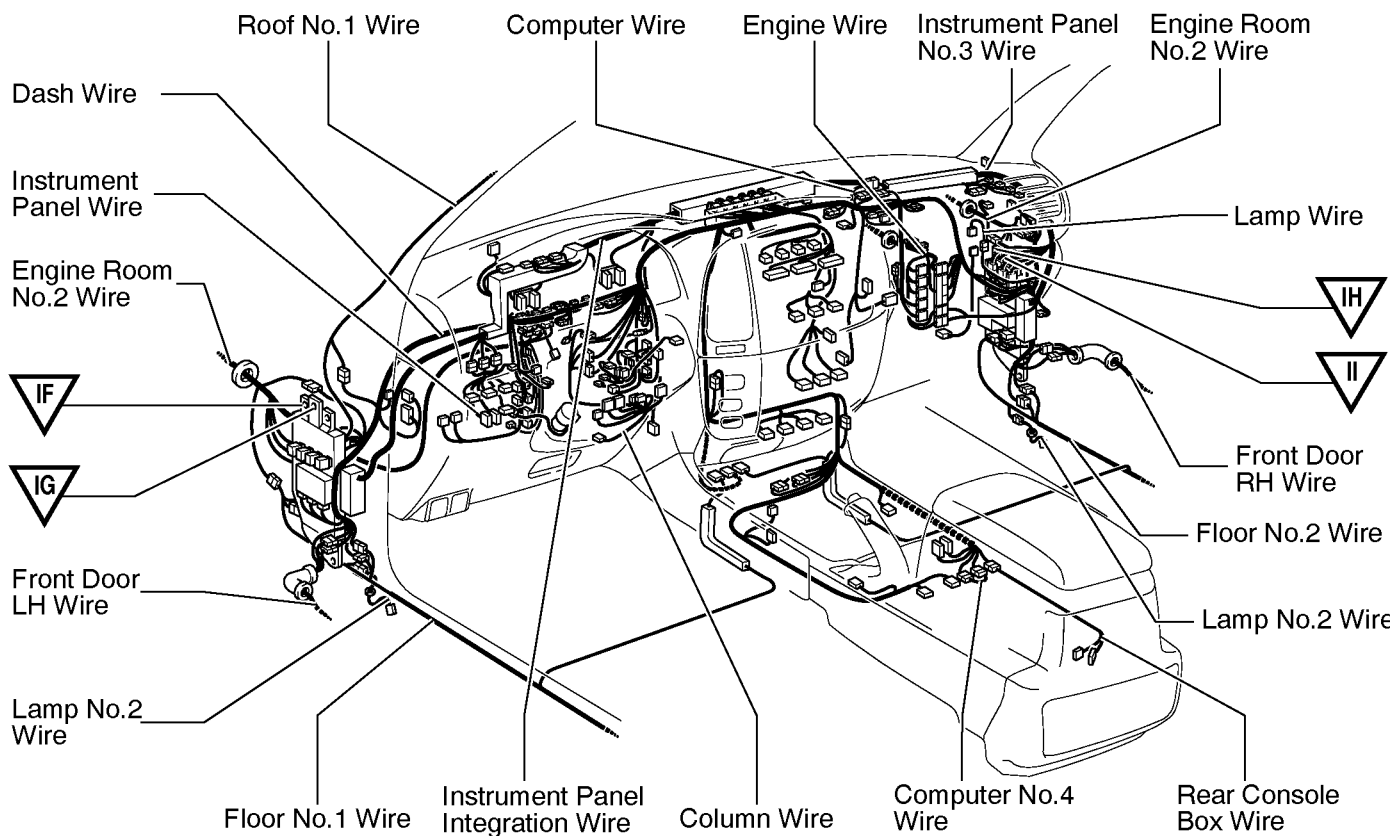


Connector Joining Wire Harness and Wire Harness

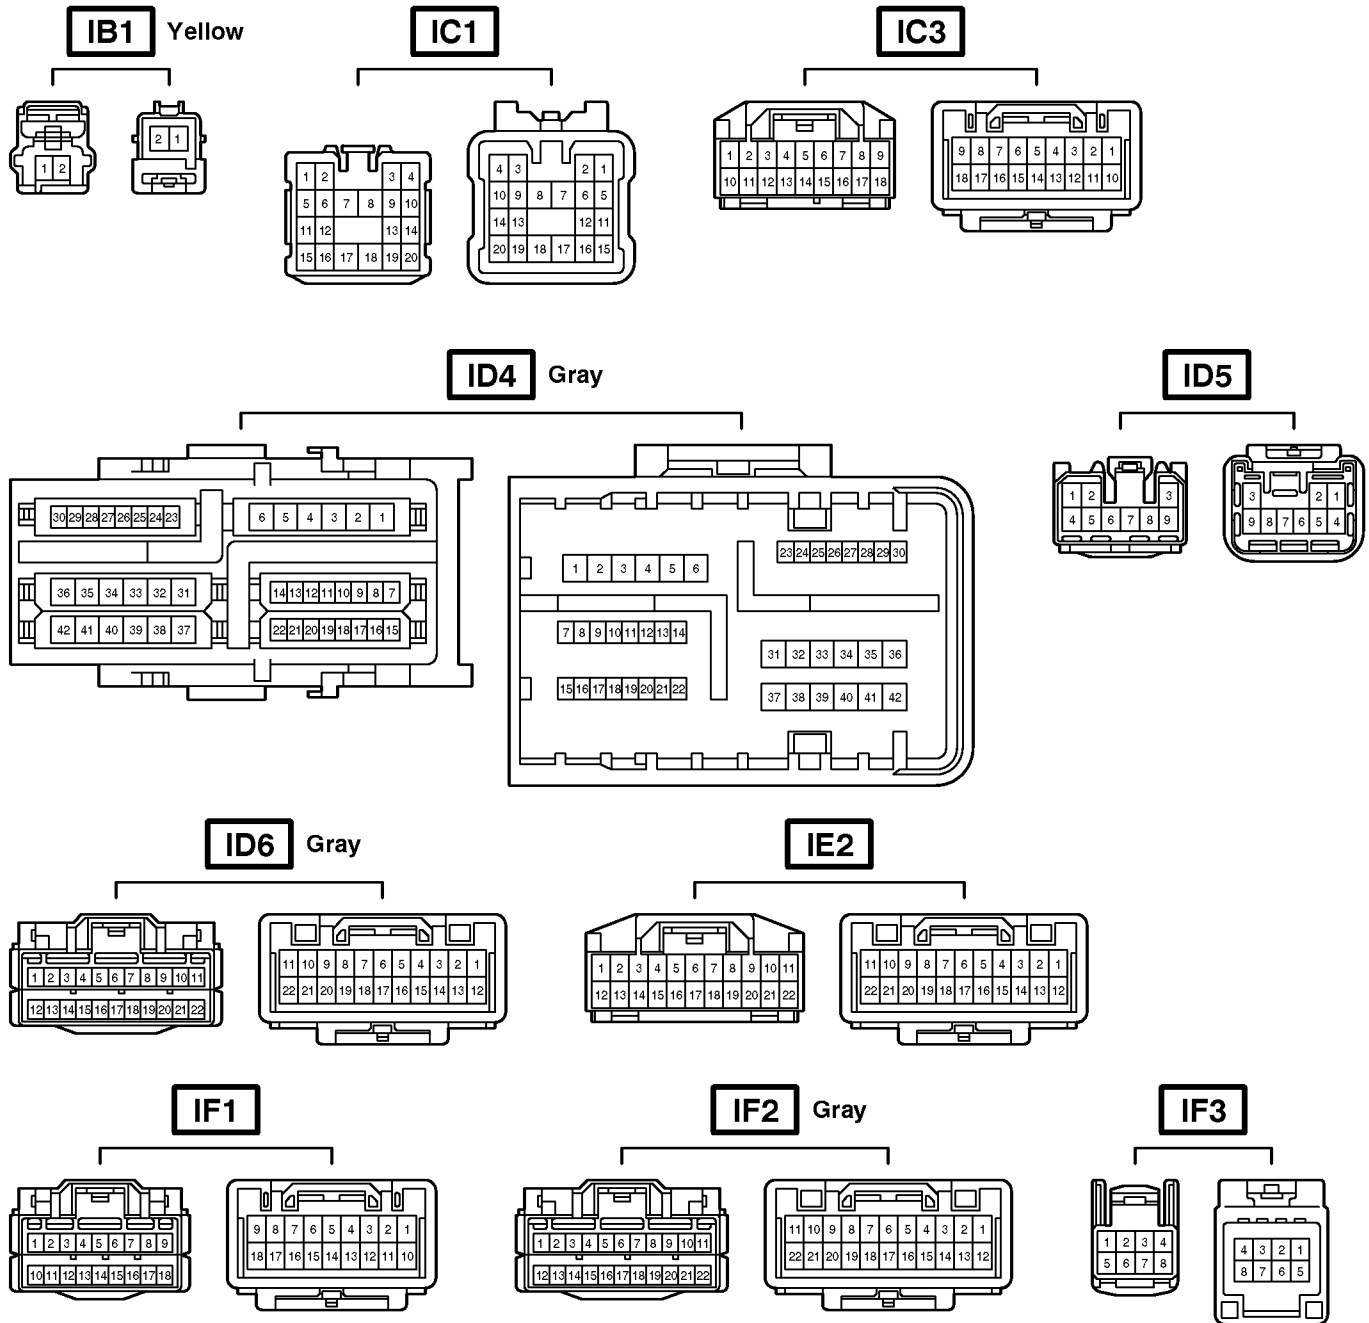


Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC1	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC3	
ID4	
ID5	Dash Wire and Floor No.1 Wire (Left Kick Panel)
ID6	
IE2	Dash Wire and Roof No.1 Wire (Left Kick Panel)
IF1	
IF2	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF3	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

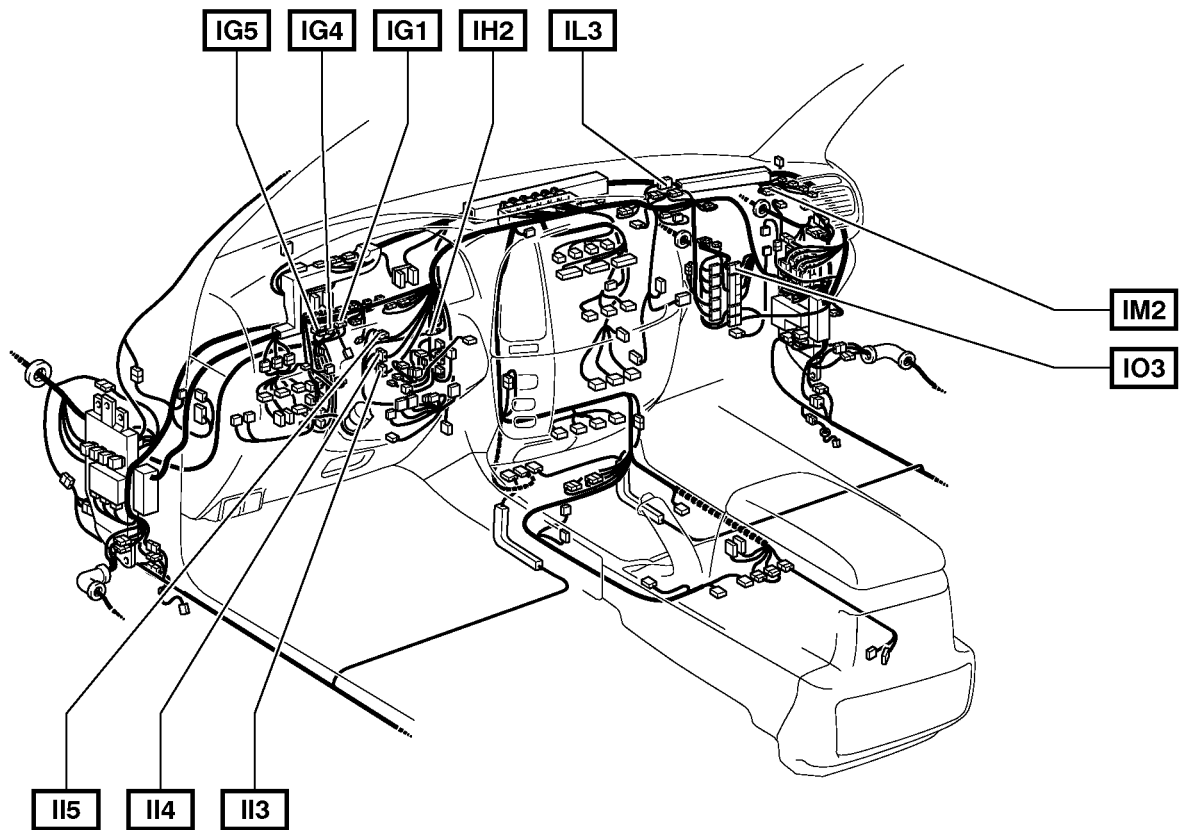

○ : Location of Splice Points

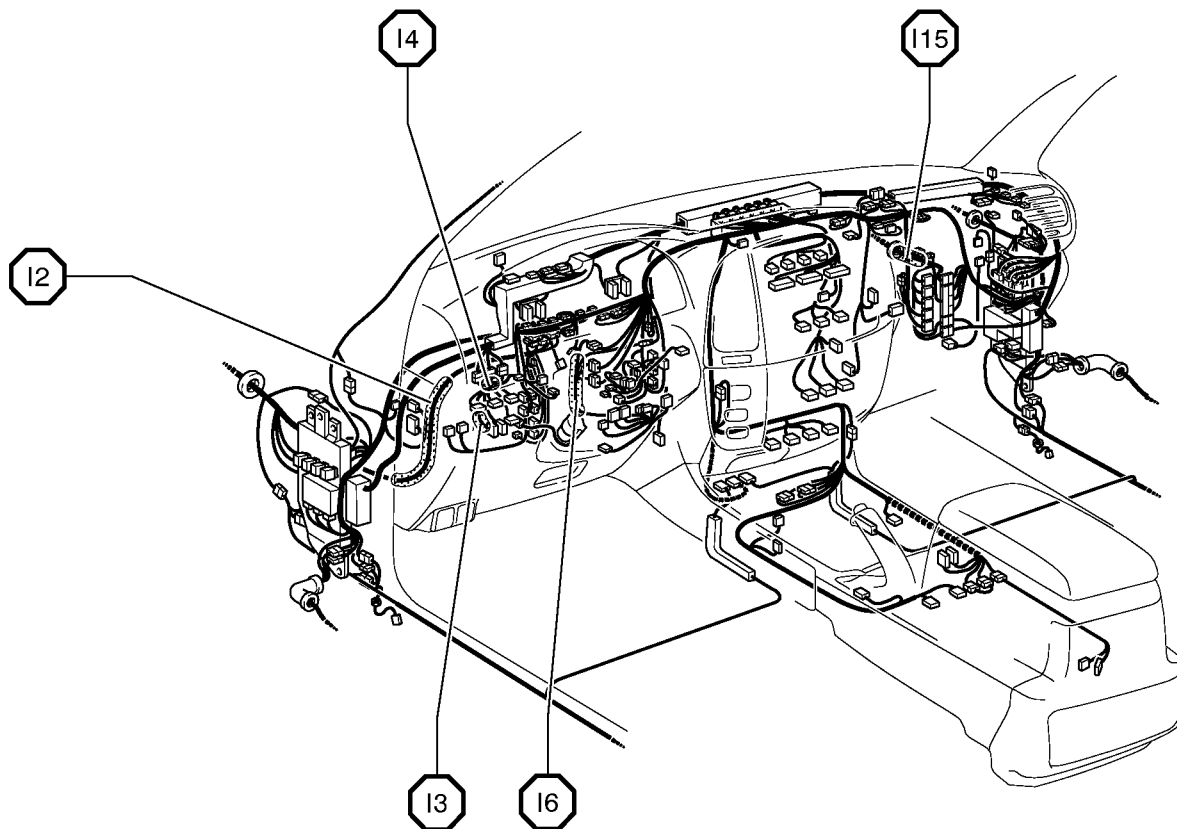


Connector Joining Wire Harness and Wire Harness

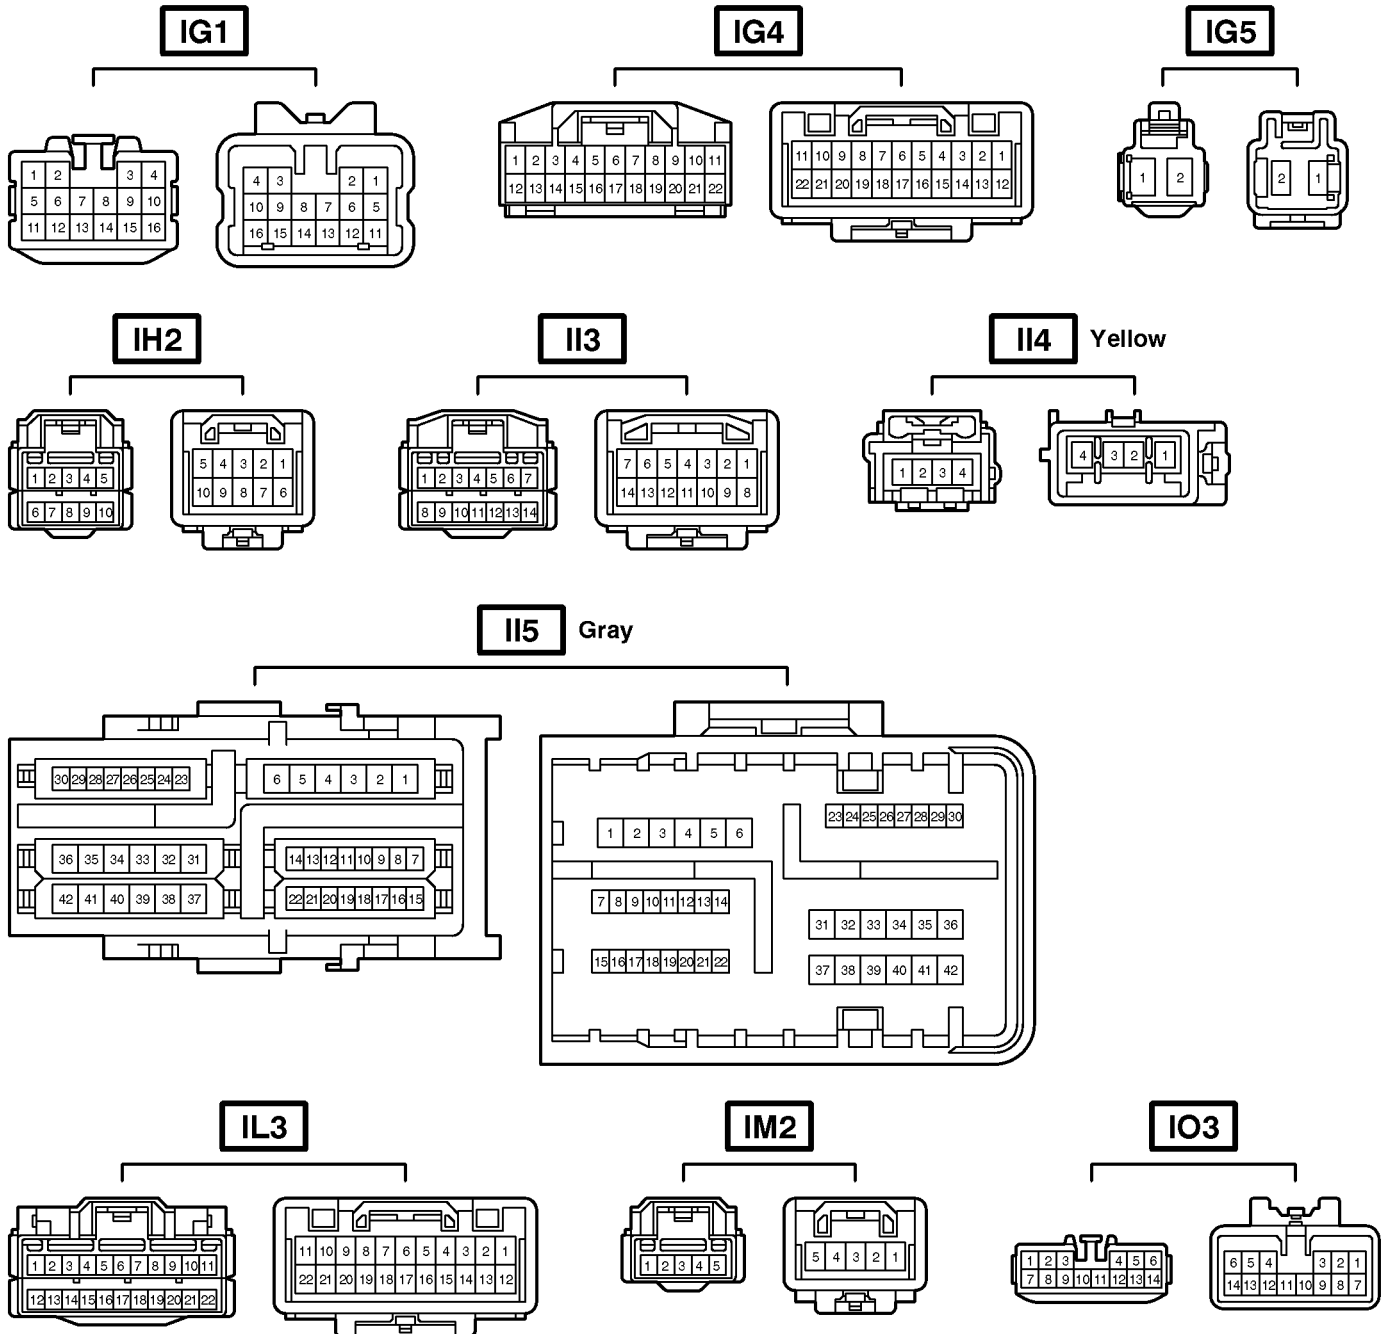

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG4	
IG5	
IH2	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	Dash Wire and Column Wire (Near the Ignition SW)
II4	
II5	
IL3	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IM2	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Right Side of Instrument Panel)
IO3	Engine Wire and Dash Wire (Behind the Glove Box)


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

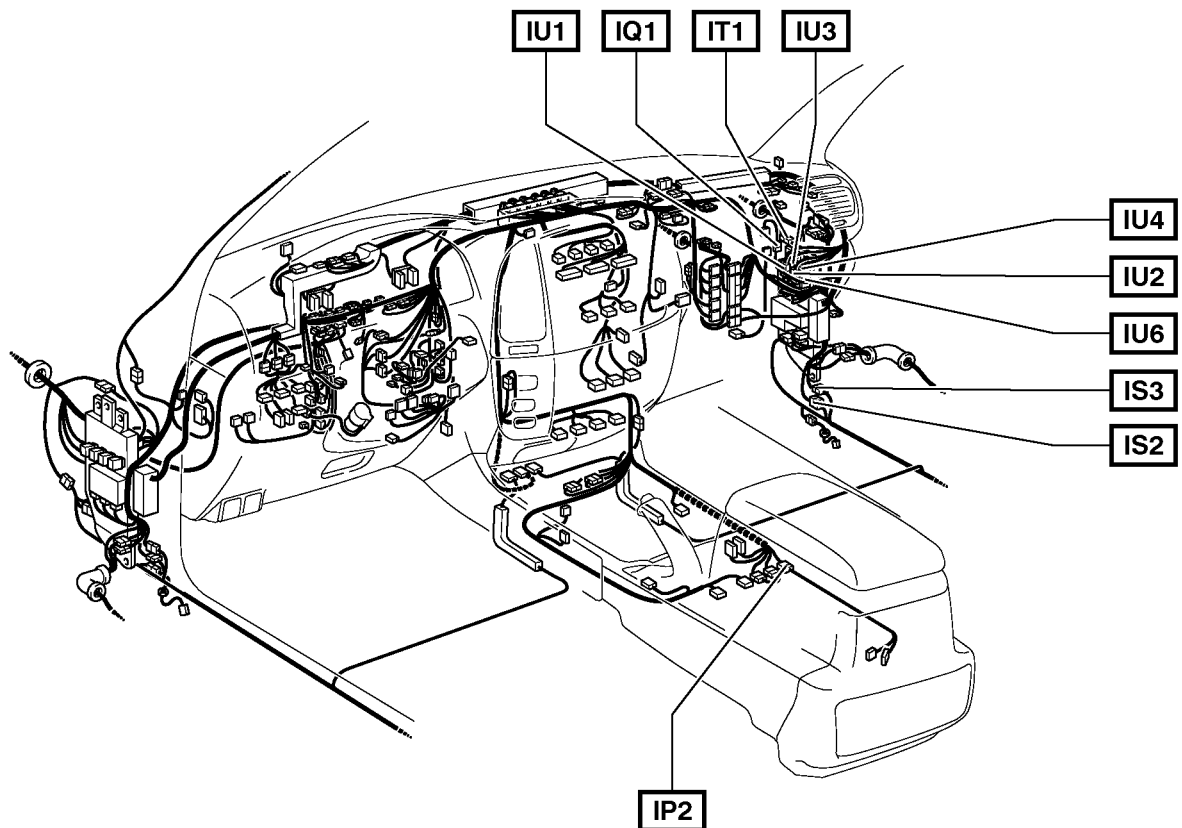


Code	Joining Wire Harness and Wire Harness (Connector Location)
IP2	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IS2	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IS3	
IT1	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU6	

Connector Joining Wire Harness and Wire Harness

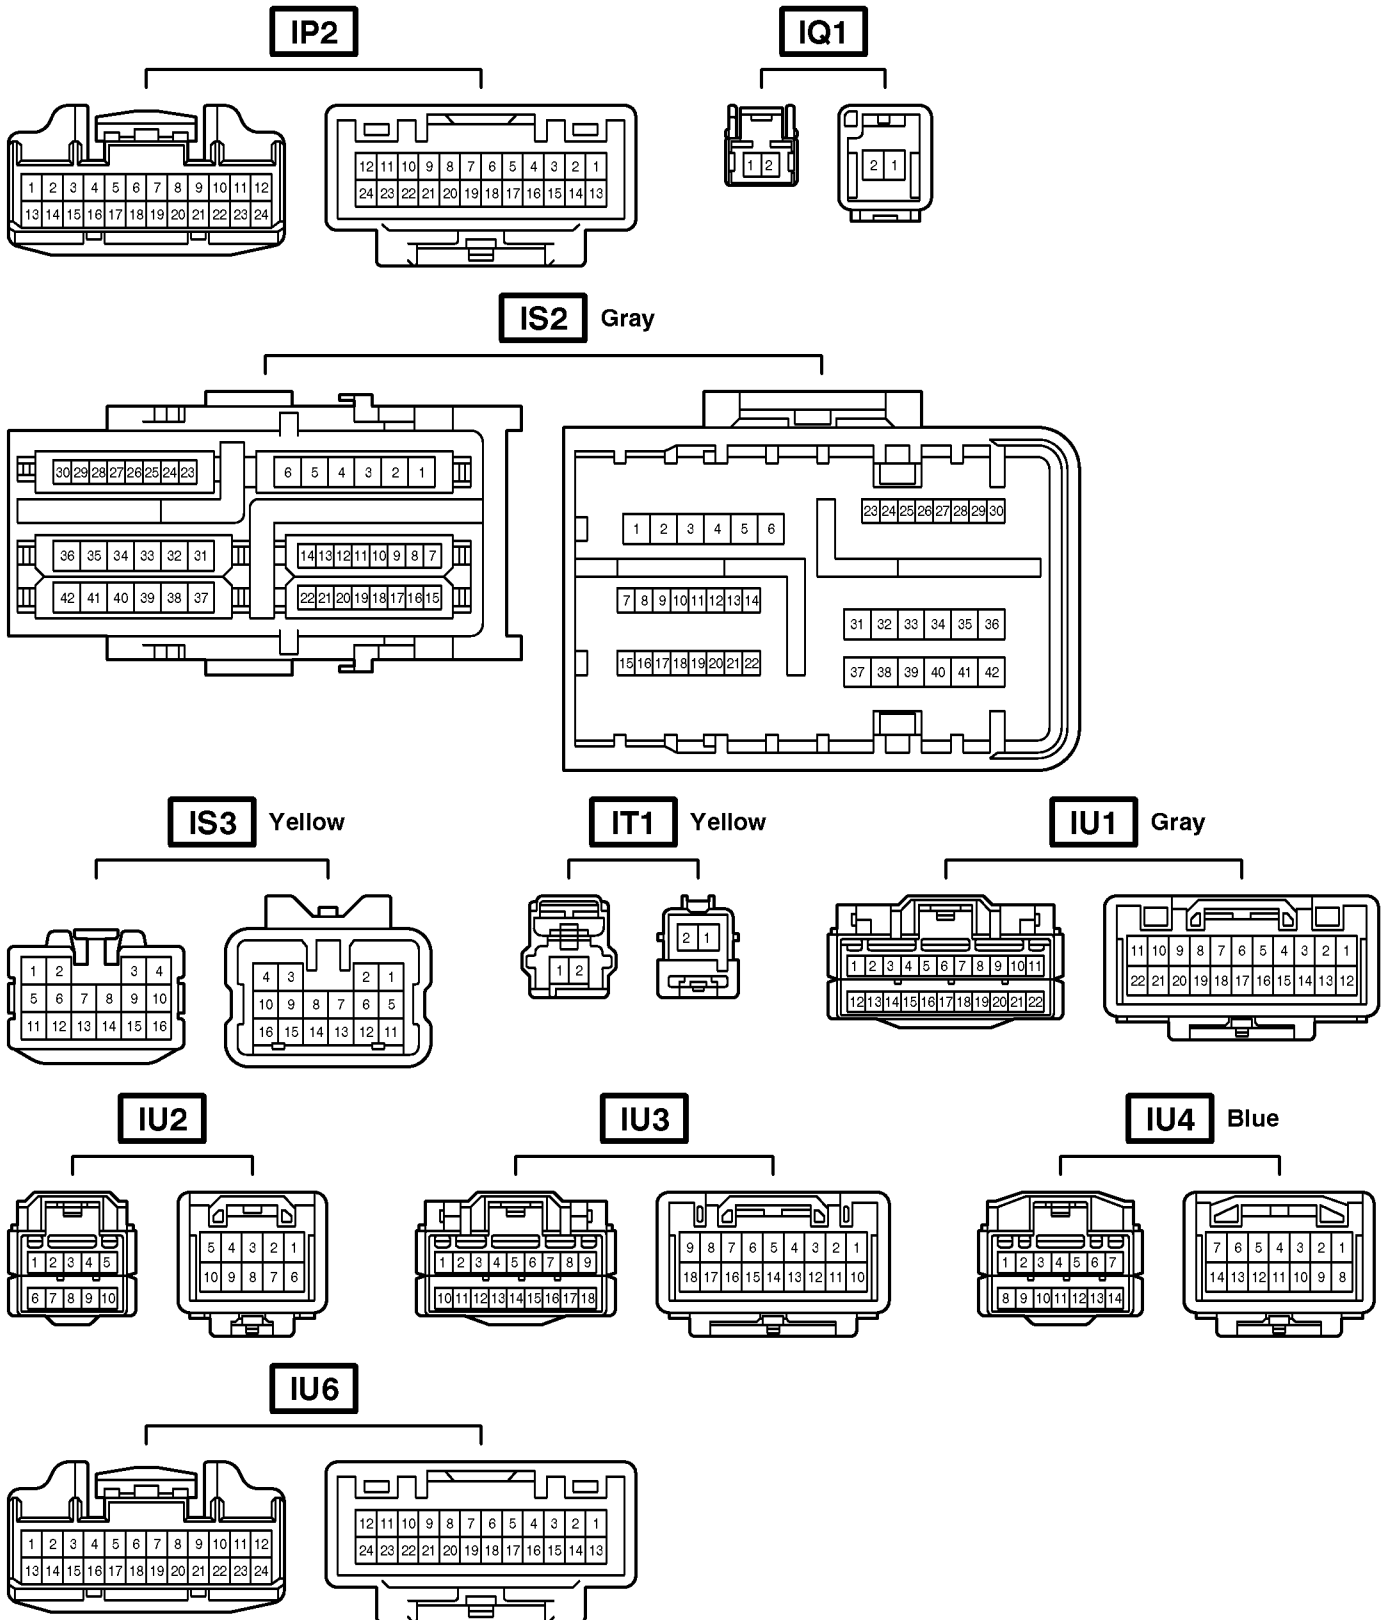


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

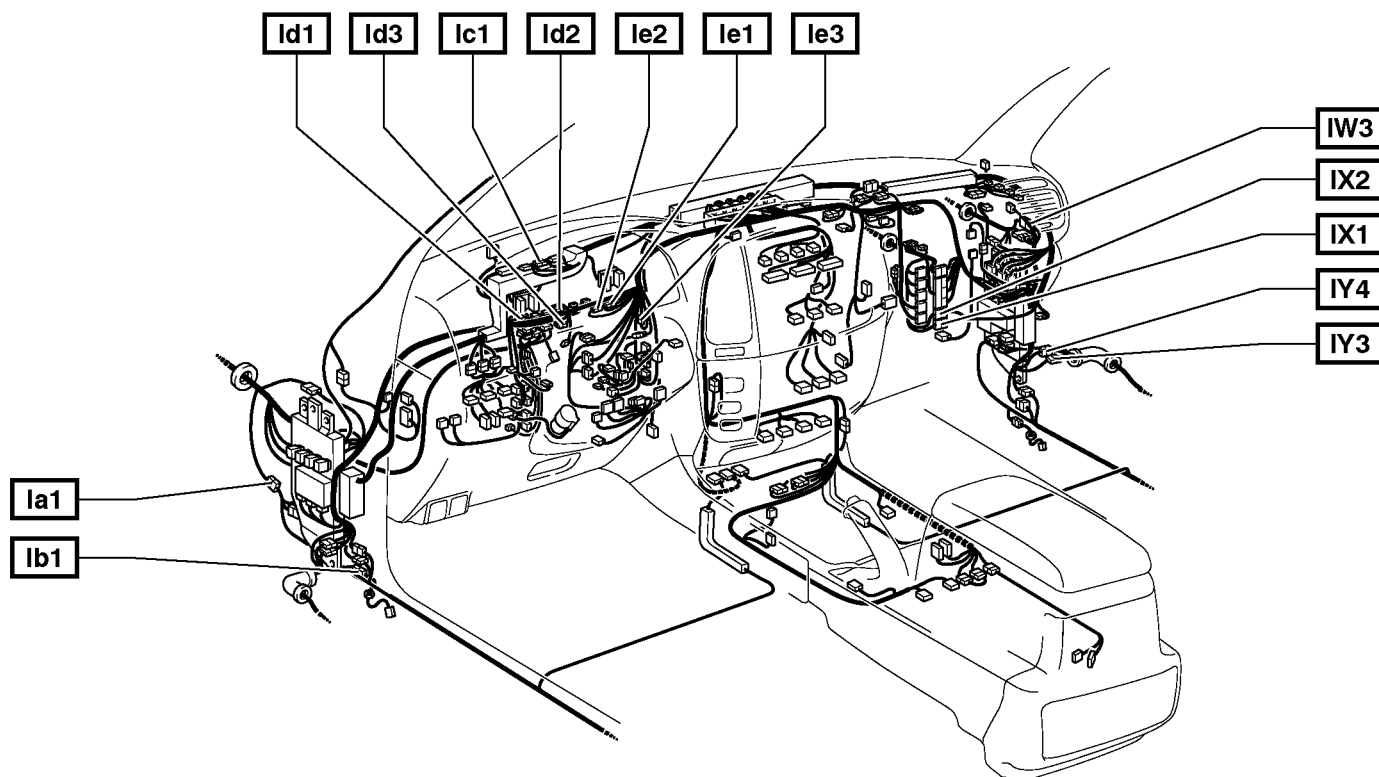


Code	Joining Wire Harness and Wire Harness (Connector Location)
IW3	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2	
IY3	Front Door RH Wire and Dash Wire (Right Kick Panel)
IY4	
Ia1	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ib1	Lamp No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ic1	Instrument Panel Integration Wire and Instrument Panel Integration Wire (Left Side of Instrument Panel)
Id1	Dash Wire and Dash Wire (Behind the Combination Meter)
Id2	
Id3	
le1	
le2	
le3	

Connector Joining Wire Harness and Wire Harness

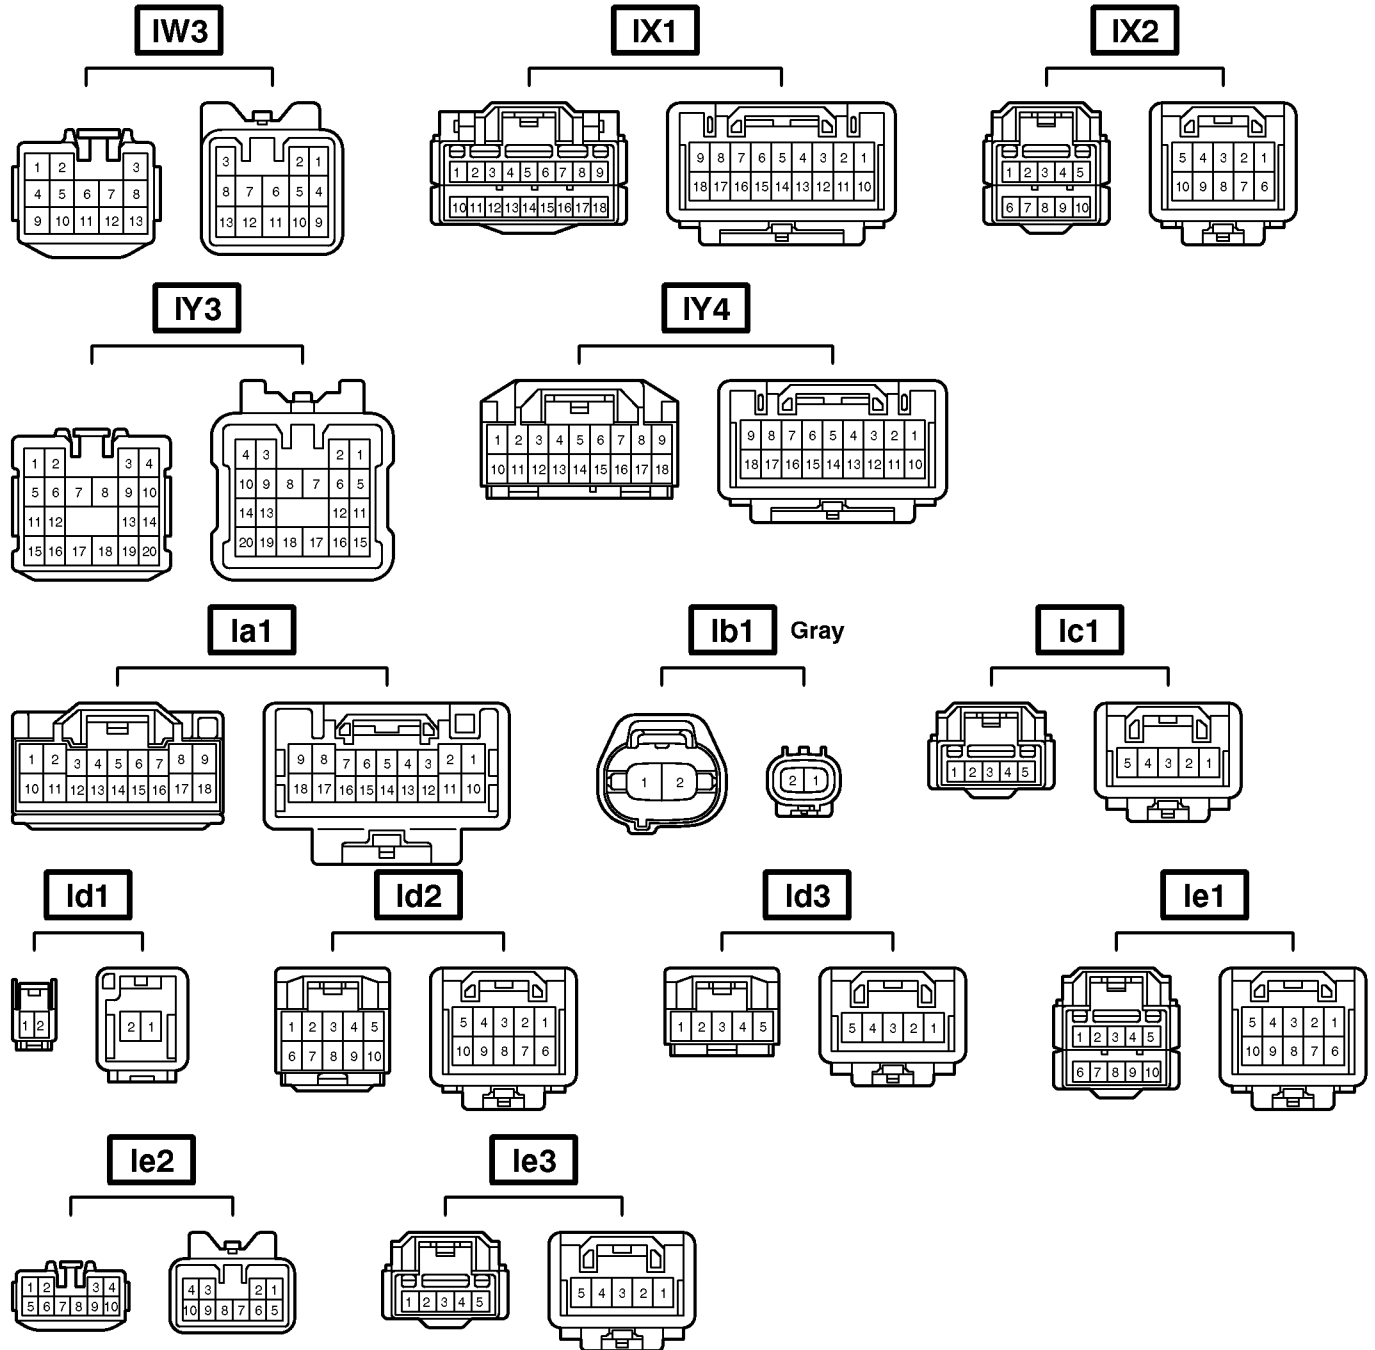


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

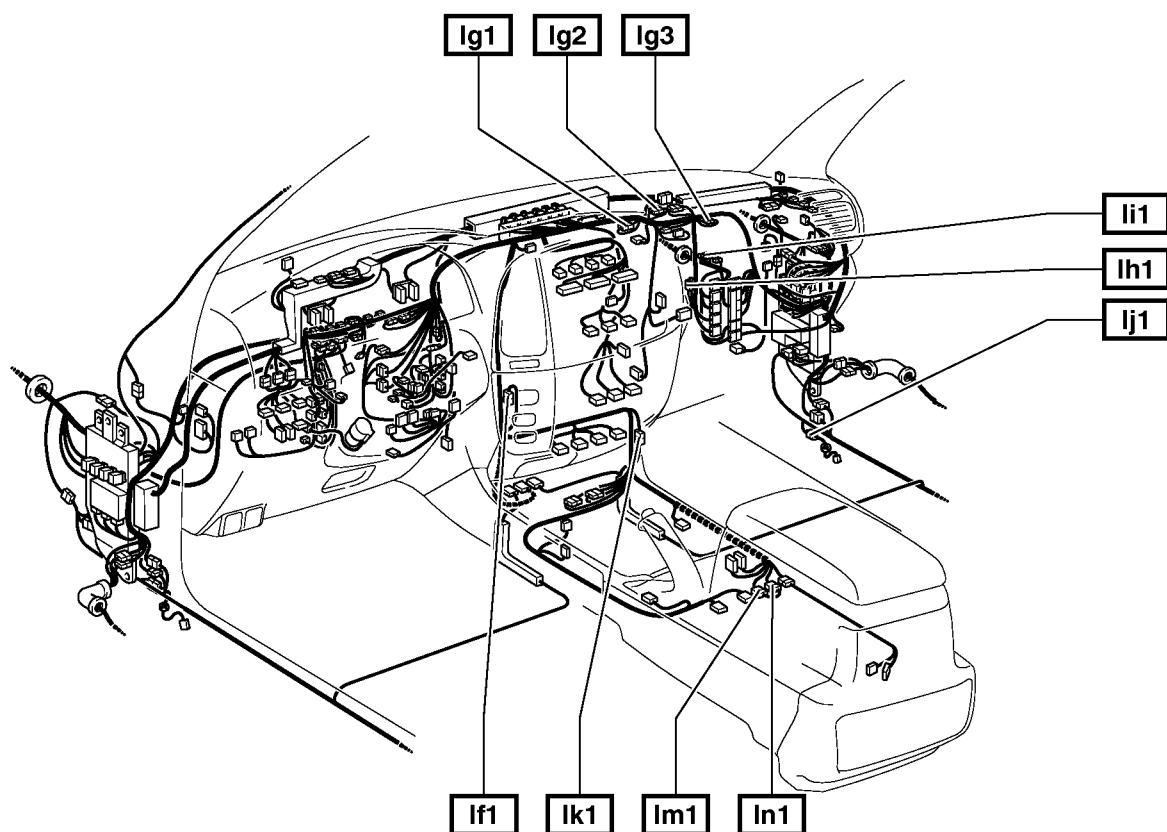

Code	Joining Wire Harness and Wire Harness (Connector Location)
If1	Dash Wire and Dash Wire (Behind the Center Panel)
Ig1	Dash Wire and Dash Wire (Instrument Panel Center)
Ig2	
Ig3	
Ih1	Dash Wire and Dash Wire (Behind the Glove Box)
li1	Engine Wire and Engine Wire (Behind the Glove Box)
lj1	Lamp No.2 Wire and Floor No.2 Wire (Right Kick Panel)
lk1	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
lm1	Dash Wire and Computer No.4 Wire (Right Side of Rear Console)
ln1	Computer No.4 Wire and Dash Wire (Right Side of Rear Console)


Connector Joining Wire Harness and Wire Harness

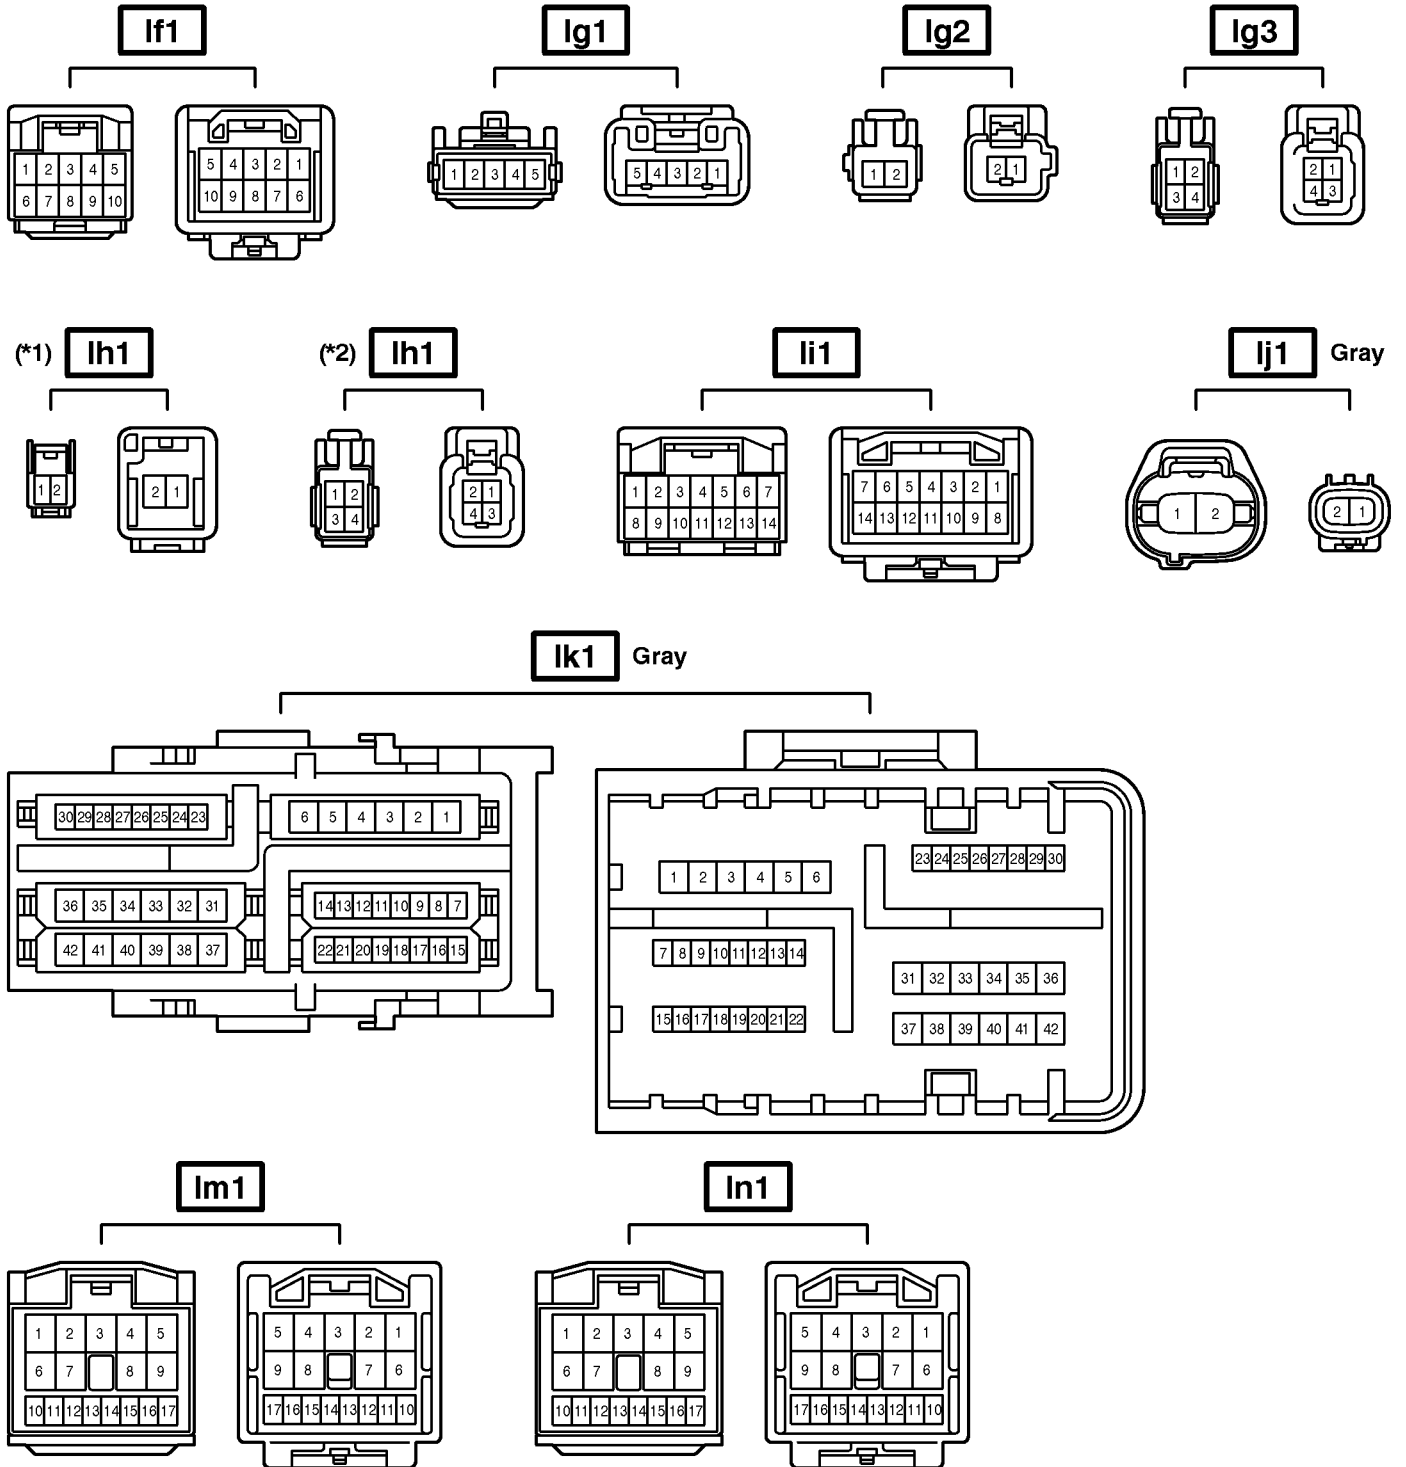


* 1:w/ LEXUS Navigation System
 * 2:w/o LEXUS Navigation System

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

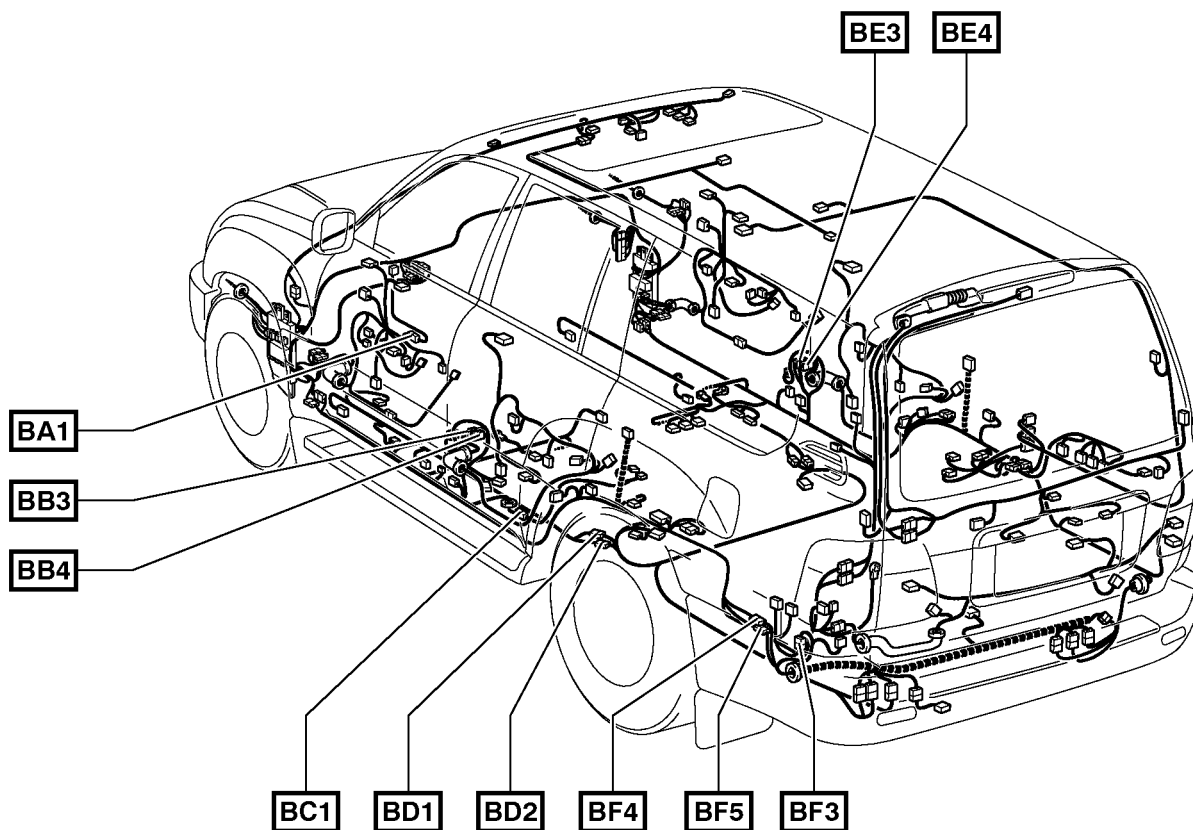

▽ : Location of Ground Points

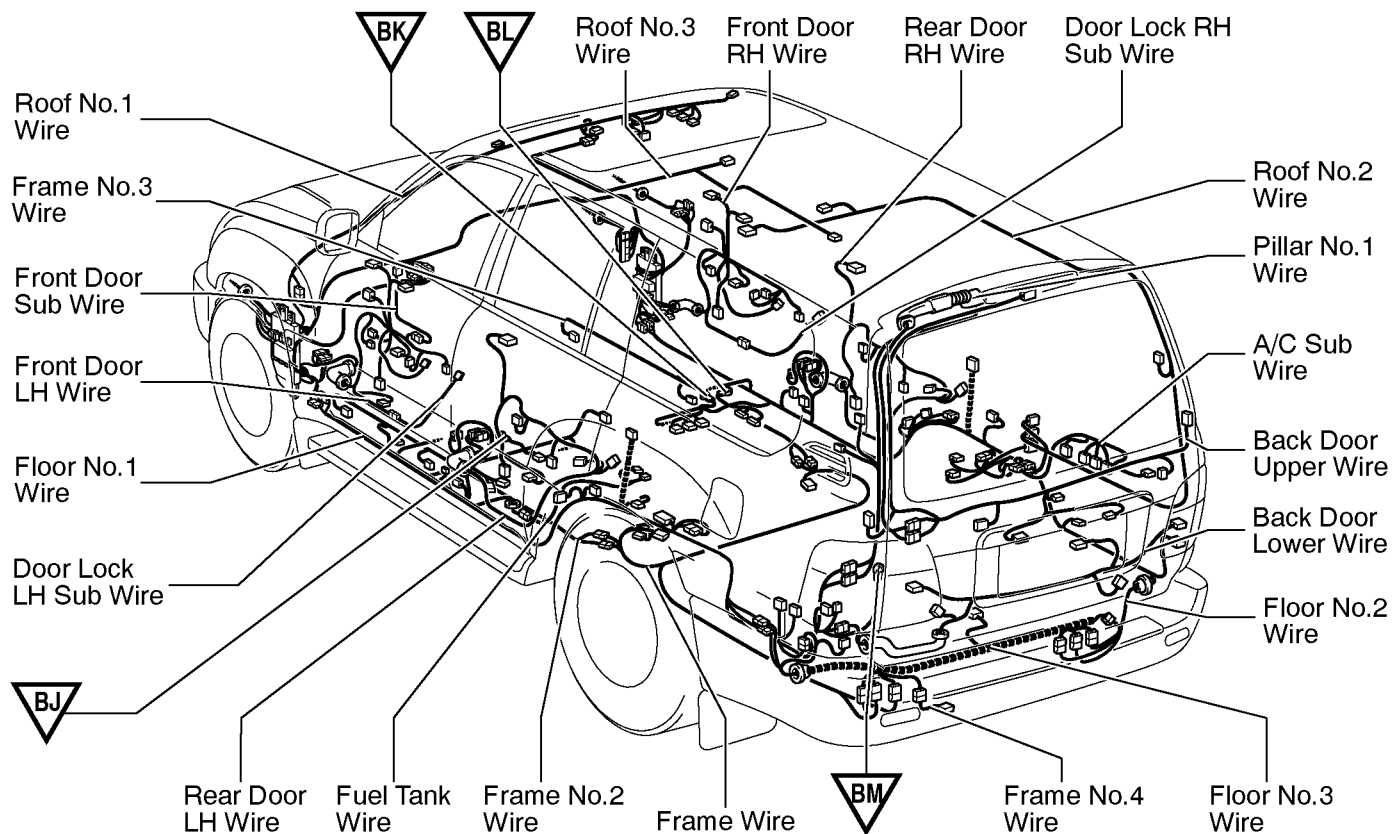


Connector Joining Wire Harness and Wire Harness

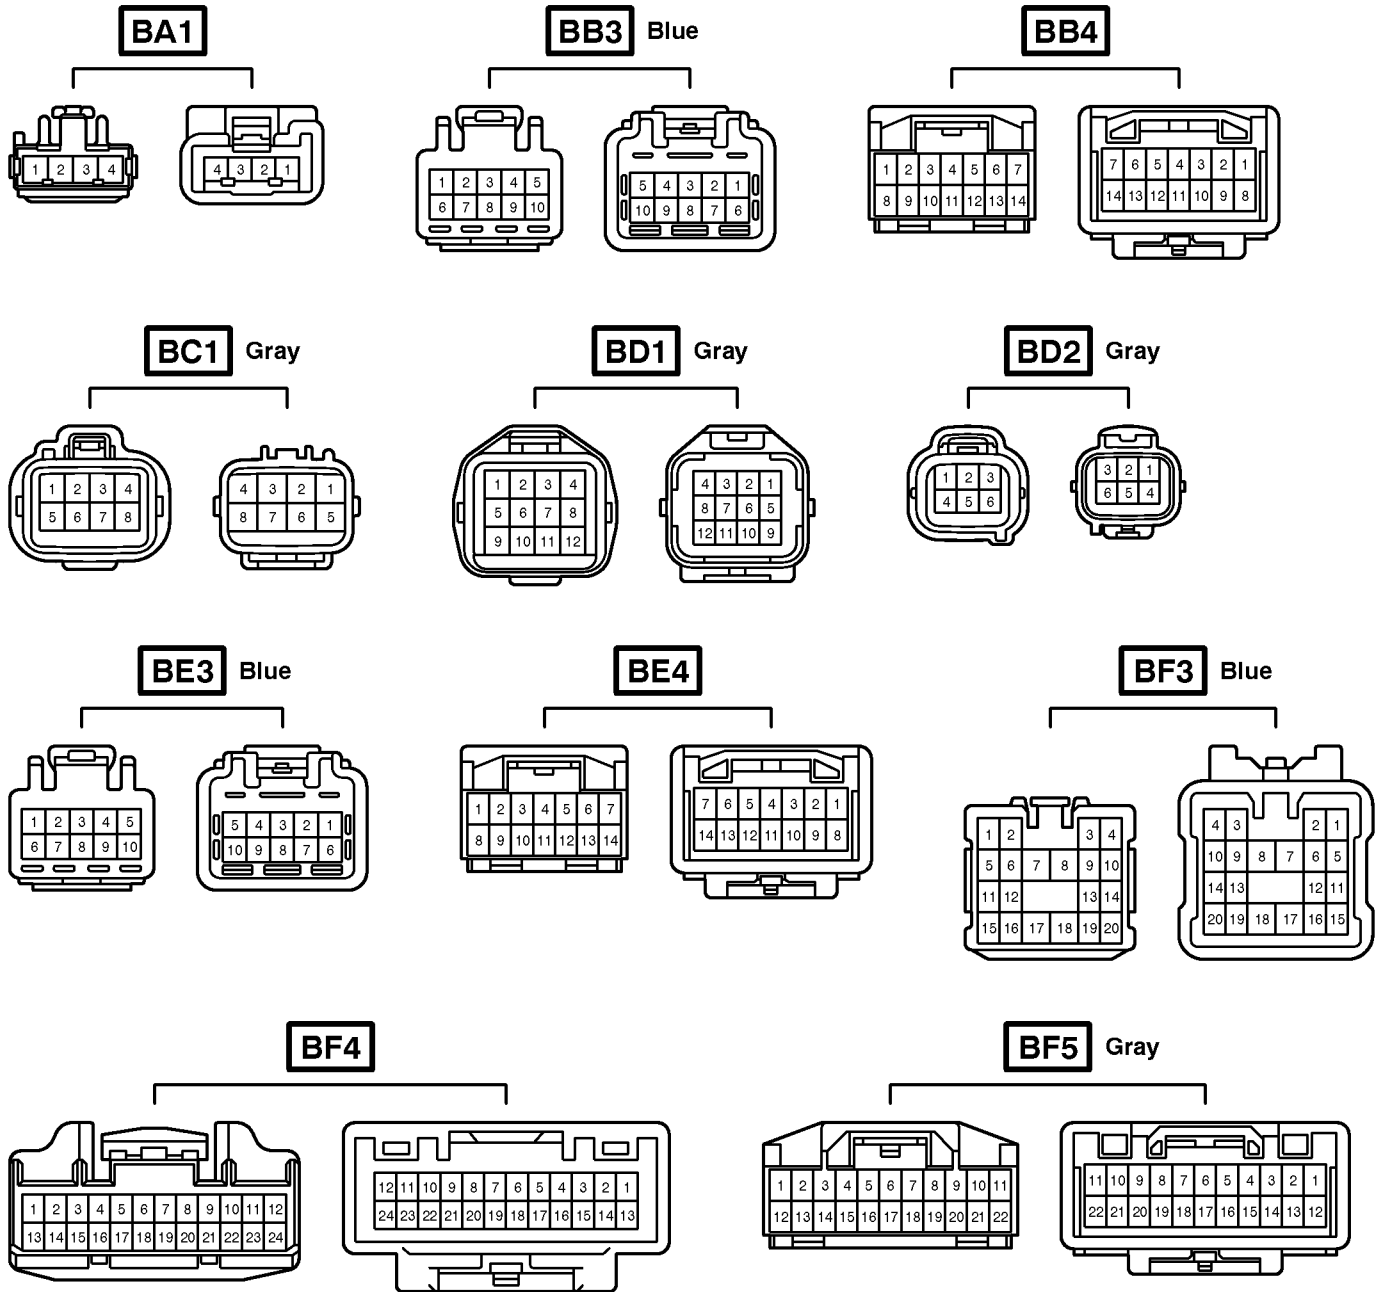


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door Sub Wire (Front Door LH)
BB3	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BB4	
BC1	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BD2	
BE3	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE4	
BF3	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BF4	
BF5	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

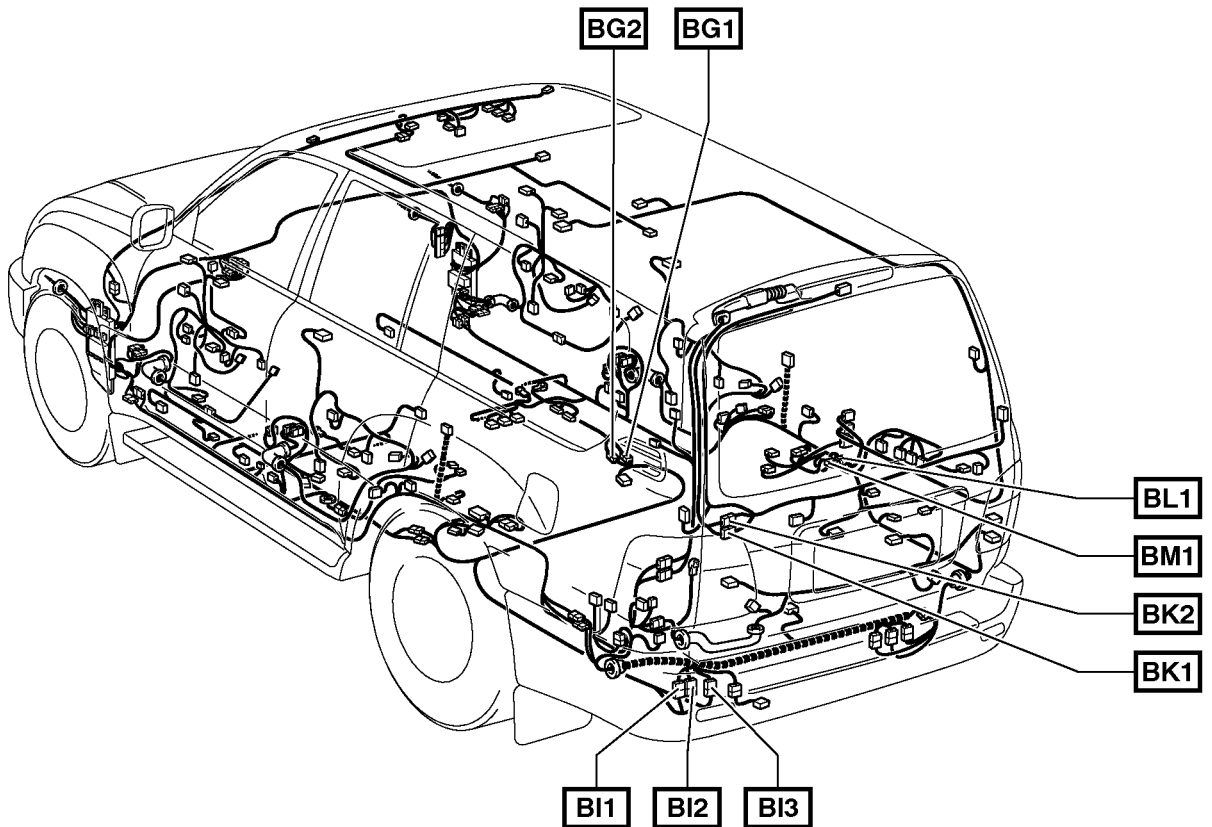

○ : Location of Splice Points

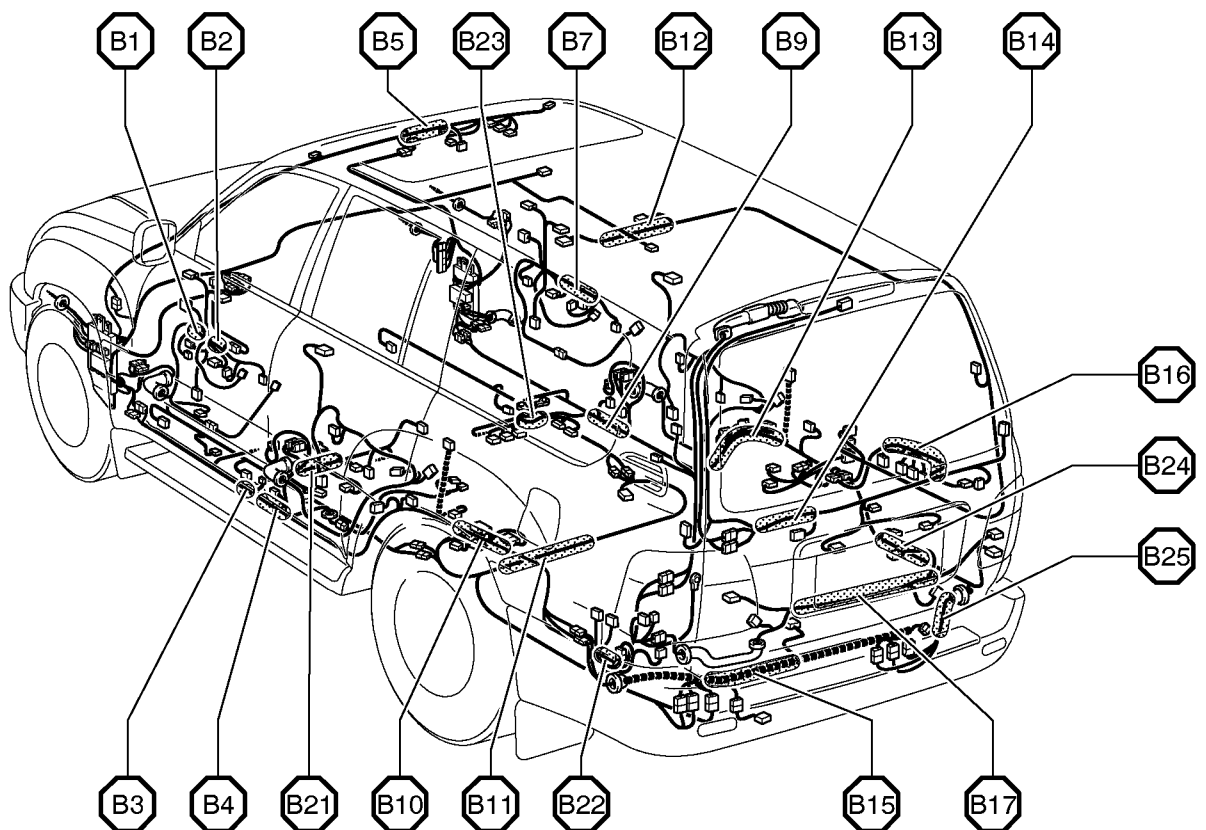


Connector Joining Wire Harness and Wire Harness

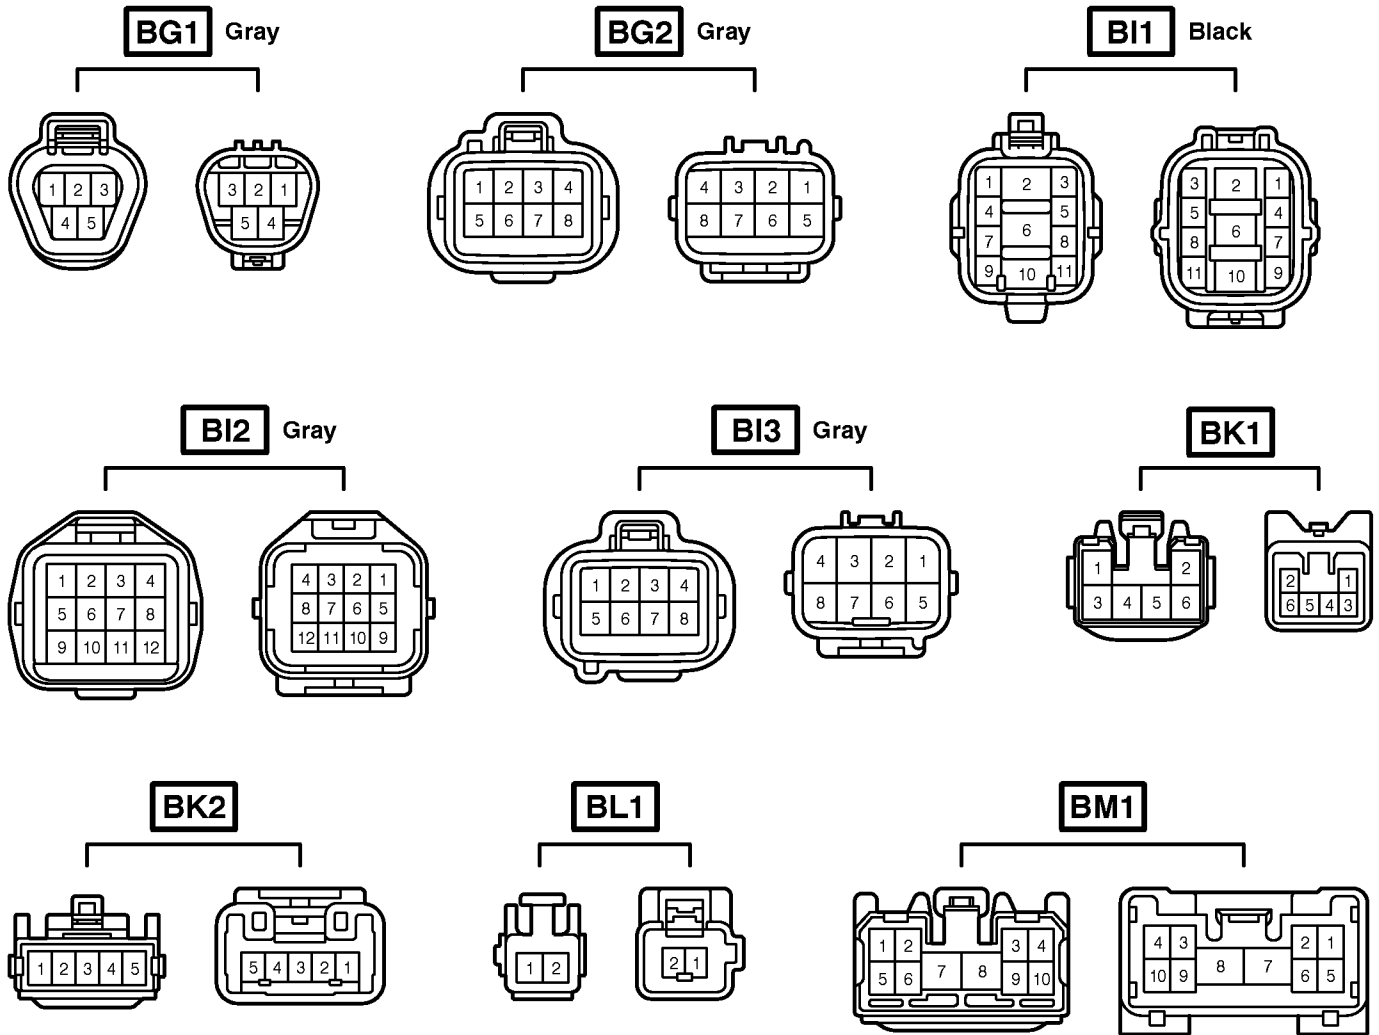


Code	Joining Wire Harness and Wire Harness (Connector Location)
BG1	Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BG2	
BI1	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BI2	
BI3	
BK1	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2	
BL1	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)
BM1	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

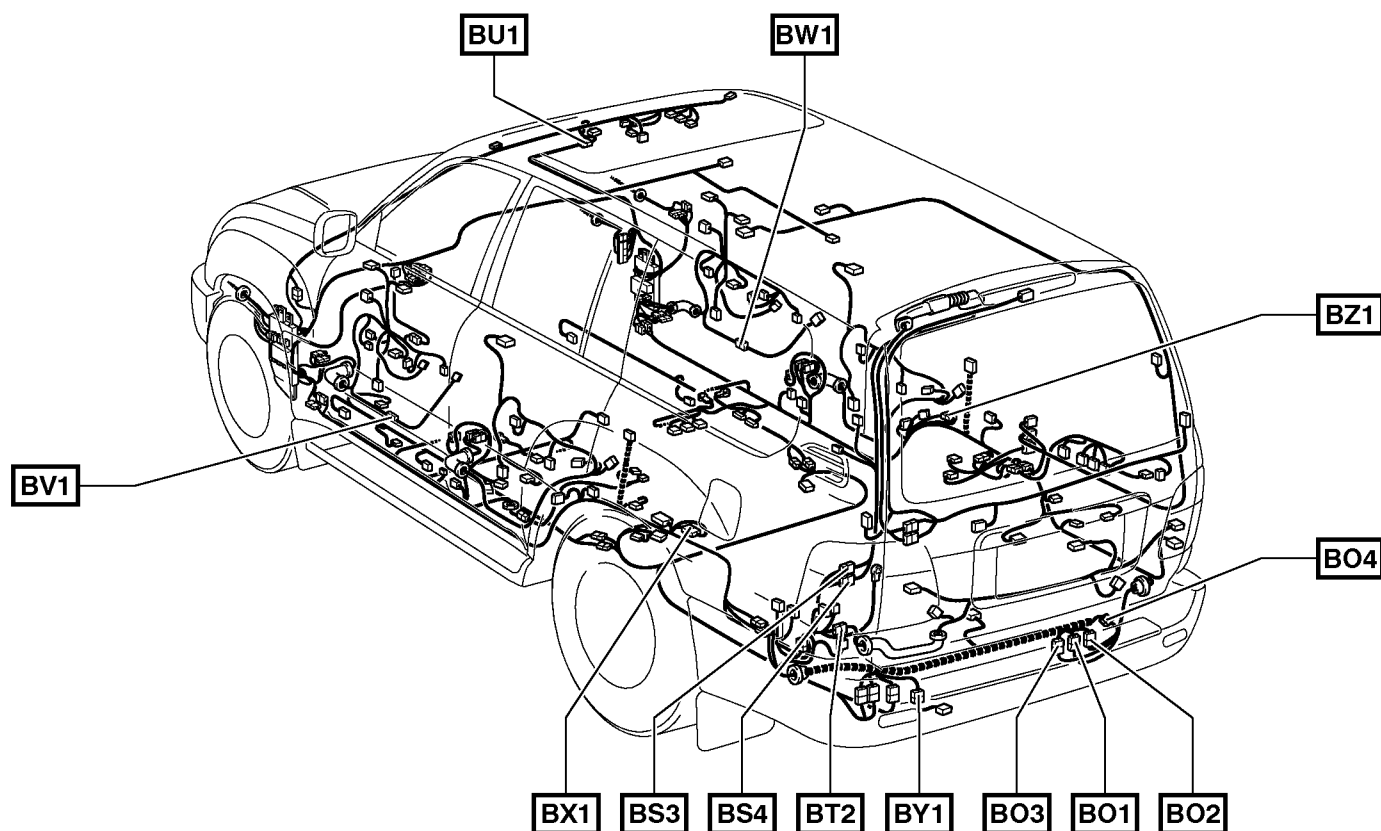


Connector Joining Wire Harness and Wire Harness

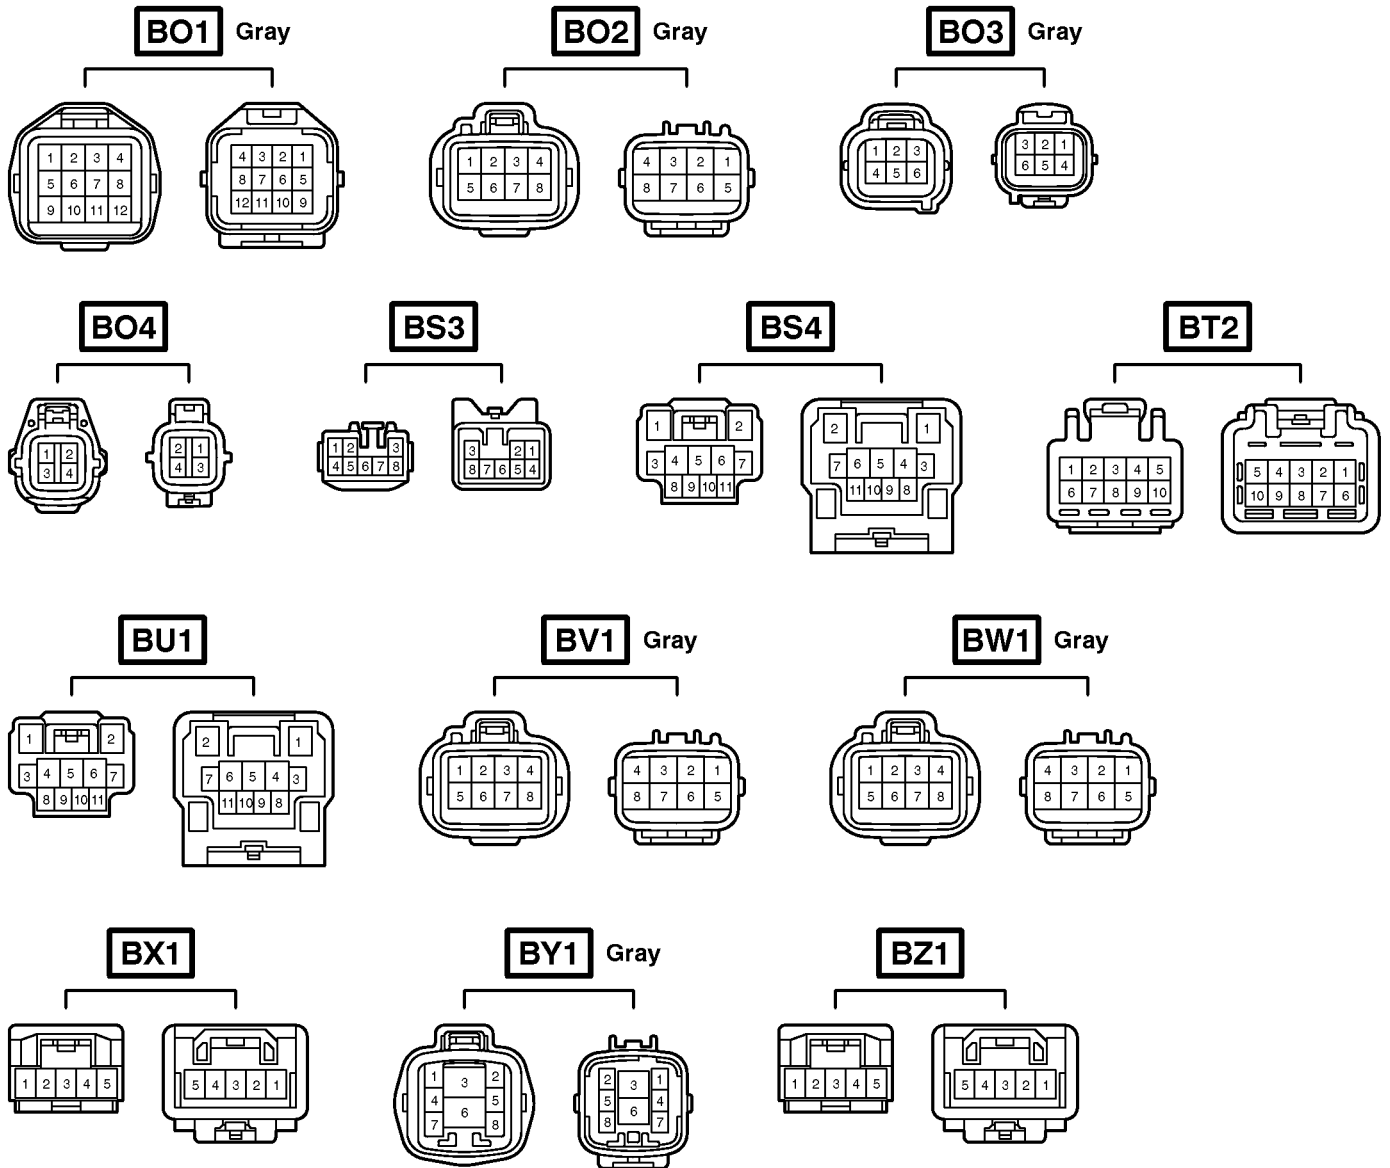


Code	Joining Wire Harness and Wire Harness (Connector Location)
BO1	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO2	
BO3	
BO4	
BS3	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS4	
BT2	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BU1	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
BV1	Door Lock LH Sub Wire and Front Door LH Wire (Front Door LH)
BW1	Door Lock RH Sub Wire and Front Door RH Wire (Front Door RH)
BX1	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
BY1	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BZ1	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

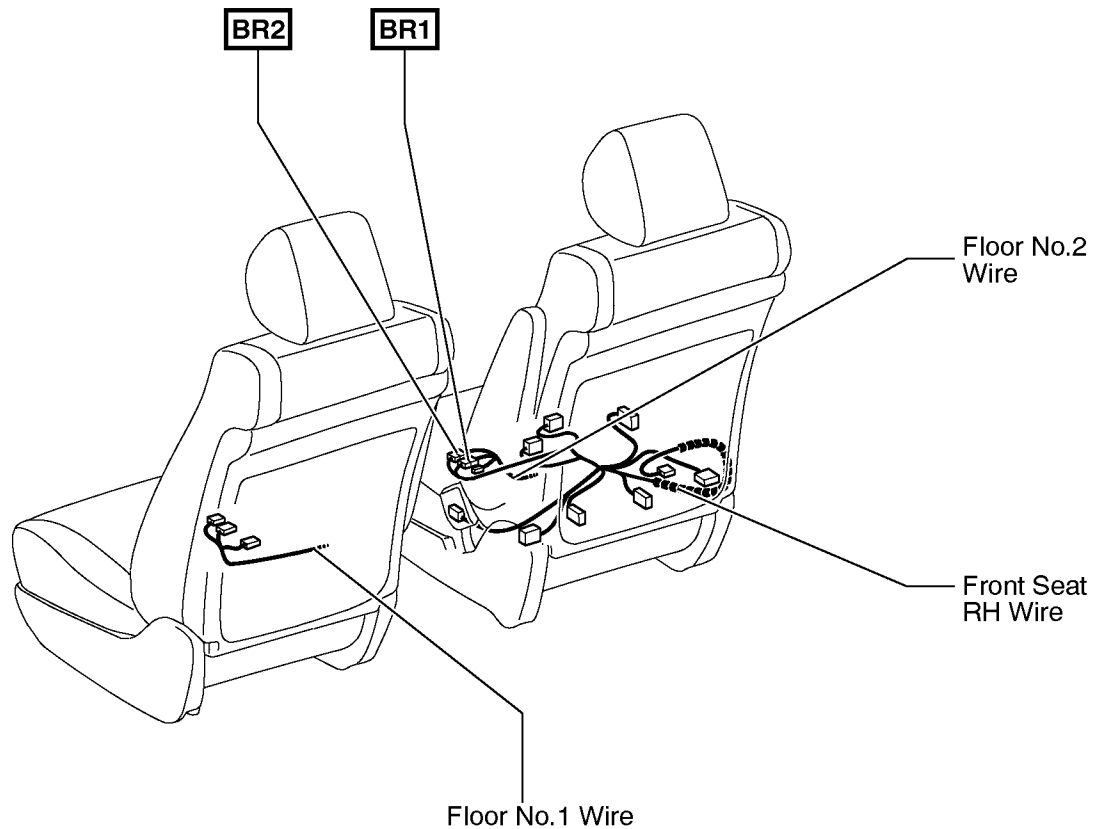

○ : Location of Splice Points

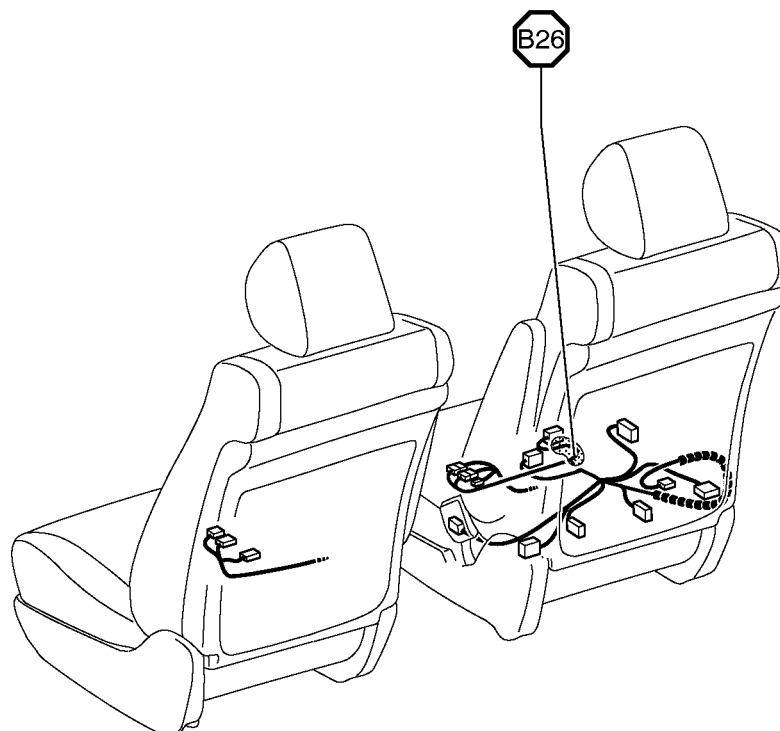


Connector Joining Wire Harness and Wire Harness

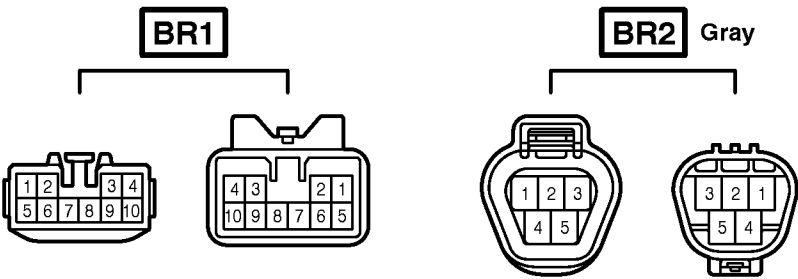

Code	Joining Wire Harness and Wire Harness (Connector Location)
BR1	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BR2	

HINT

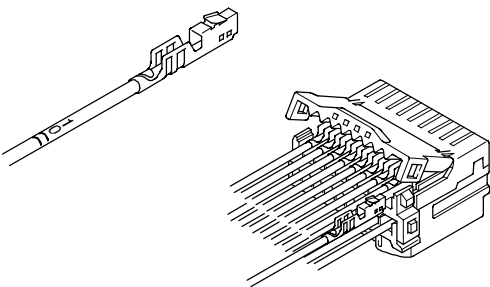

WIRE COLOR AND TERMINAL NUMBER

In some parts of the instrumental panel wiring harness, the same wire color (i.e. SB: Sky Blue) is used for all the wiring to a specific connector.
 In order to identify the wiring, the terminal number is printed on the wiring.
 Install the wiring to the connector position with the same terminal number.
 Some early production Vehicles may not have these terminal numbers printed.