



Ignition

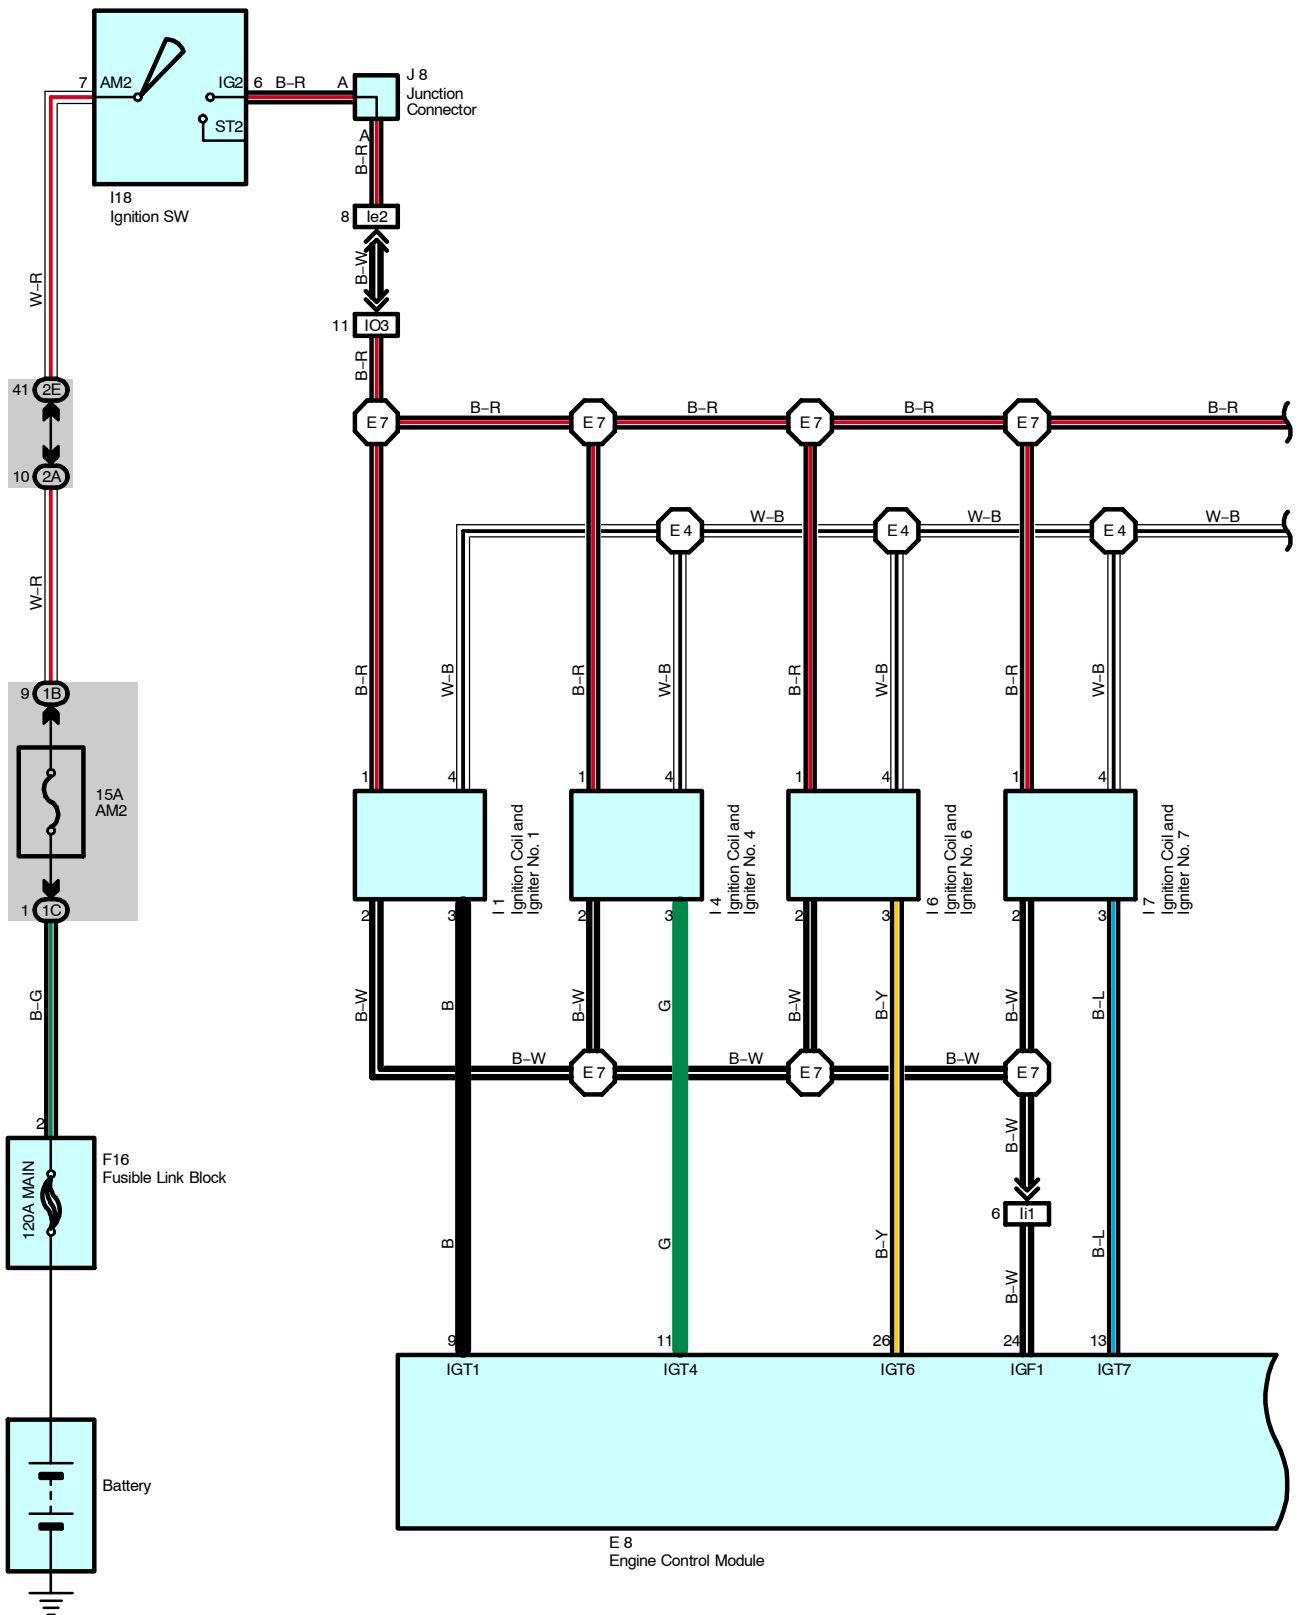

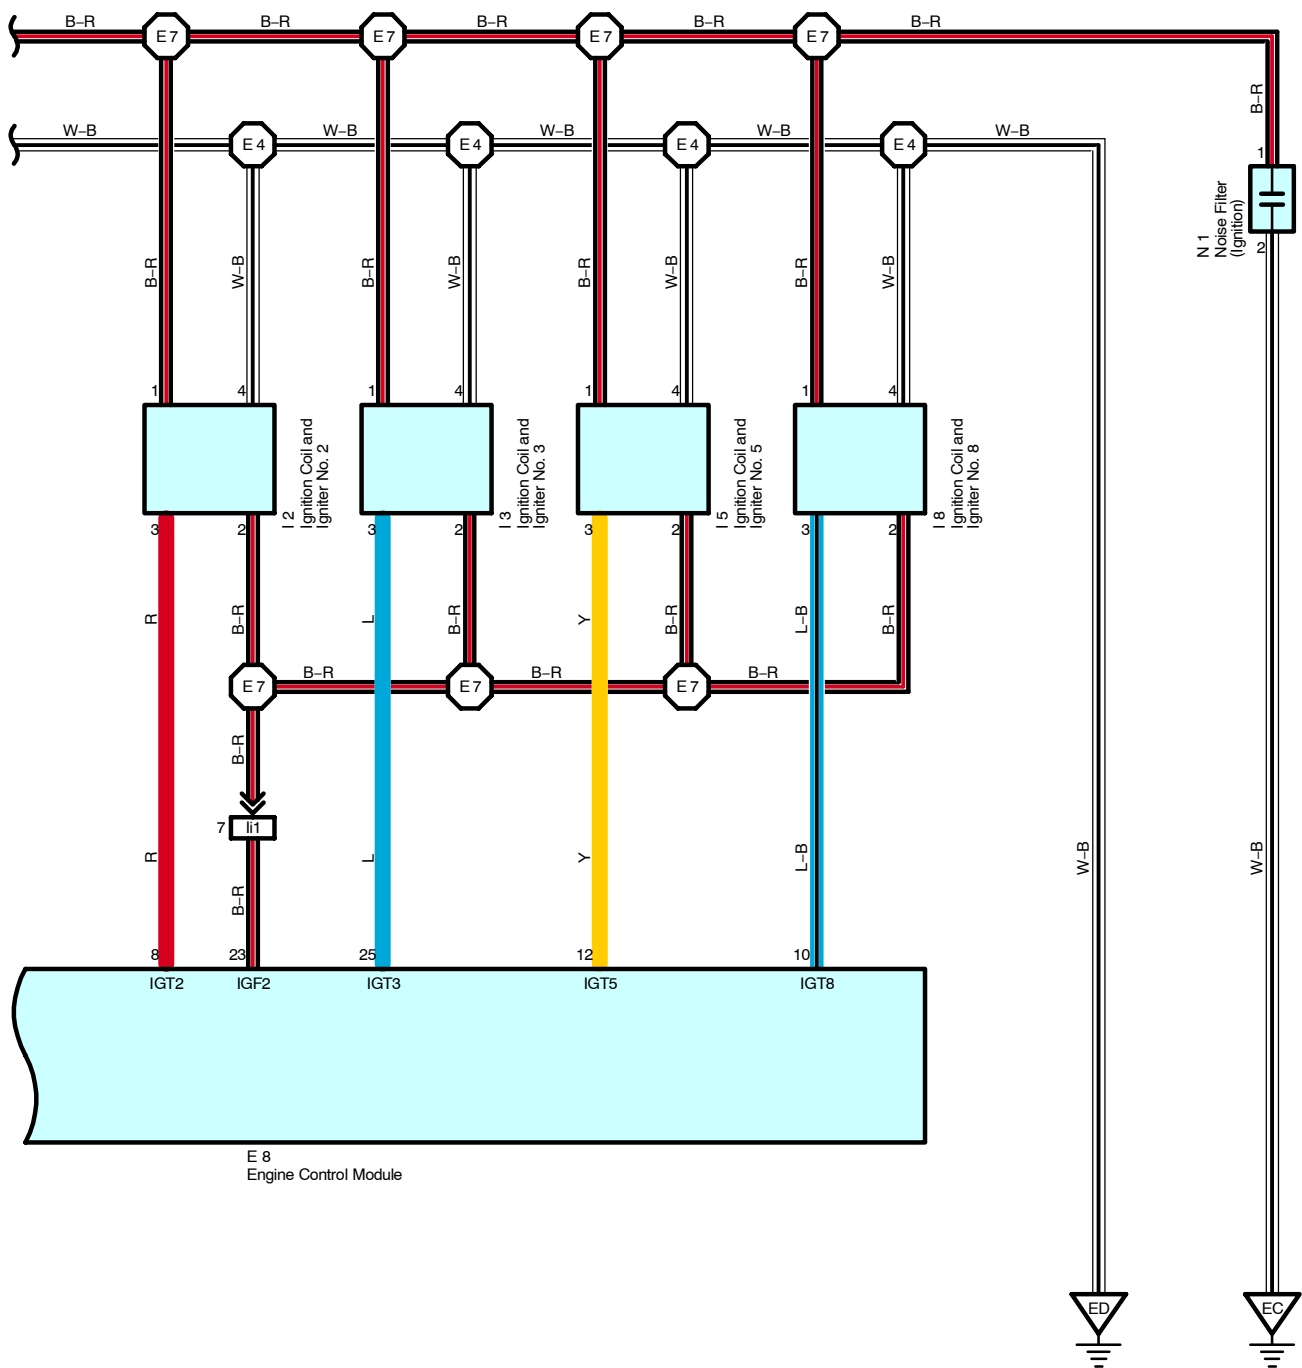

Ignition

Service Hints

I18 Ignition SW

7-6 : Closed with ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E8	71	I4	69	I18	71
F16	68	I5	69	J8	72
I1	69	I6	69	N1	69
I2	69	I7	69		
I3	69	I8	69		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ii1	88	Engine Wire and Engine Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
ED	78	Rear Bank of Left Cylinder Head

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire	E7	78	Engine Wire

