


Stop Light

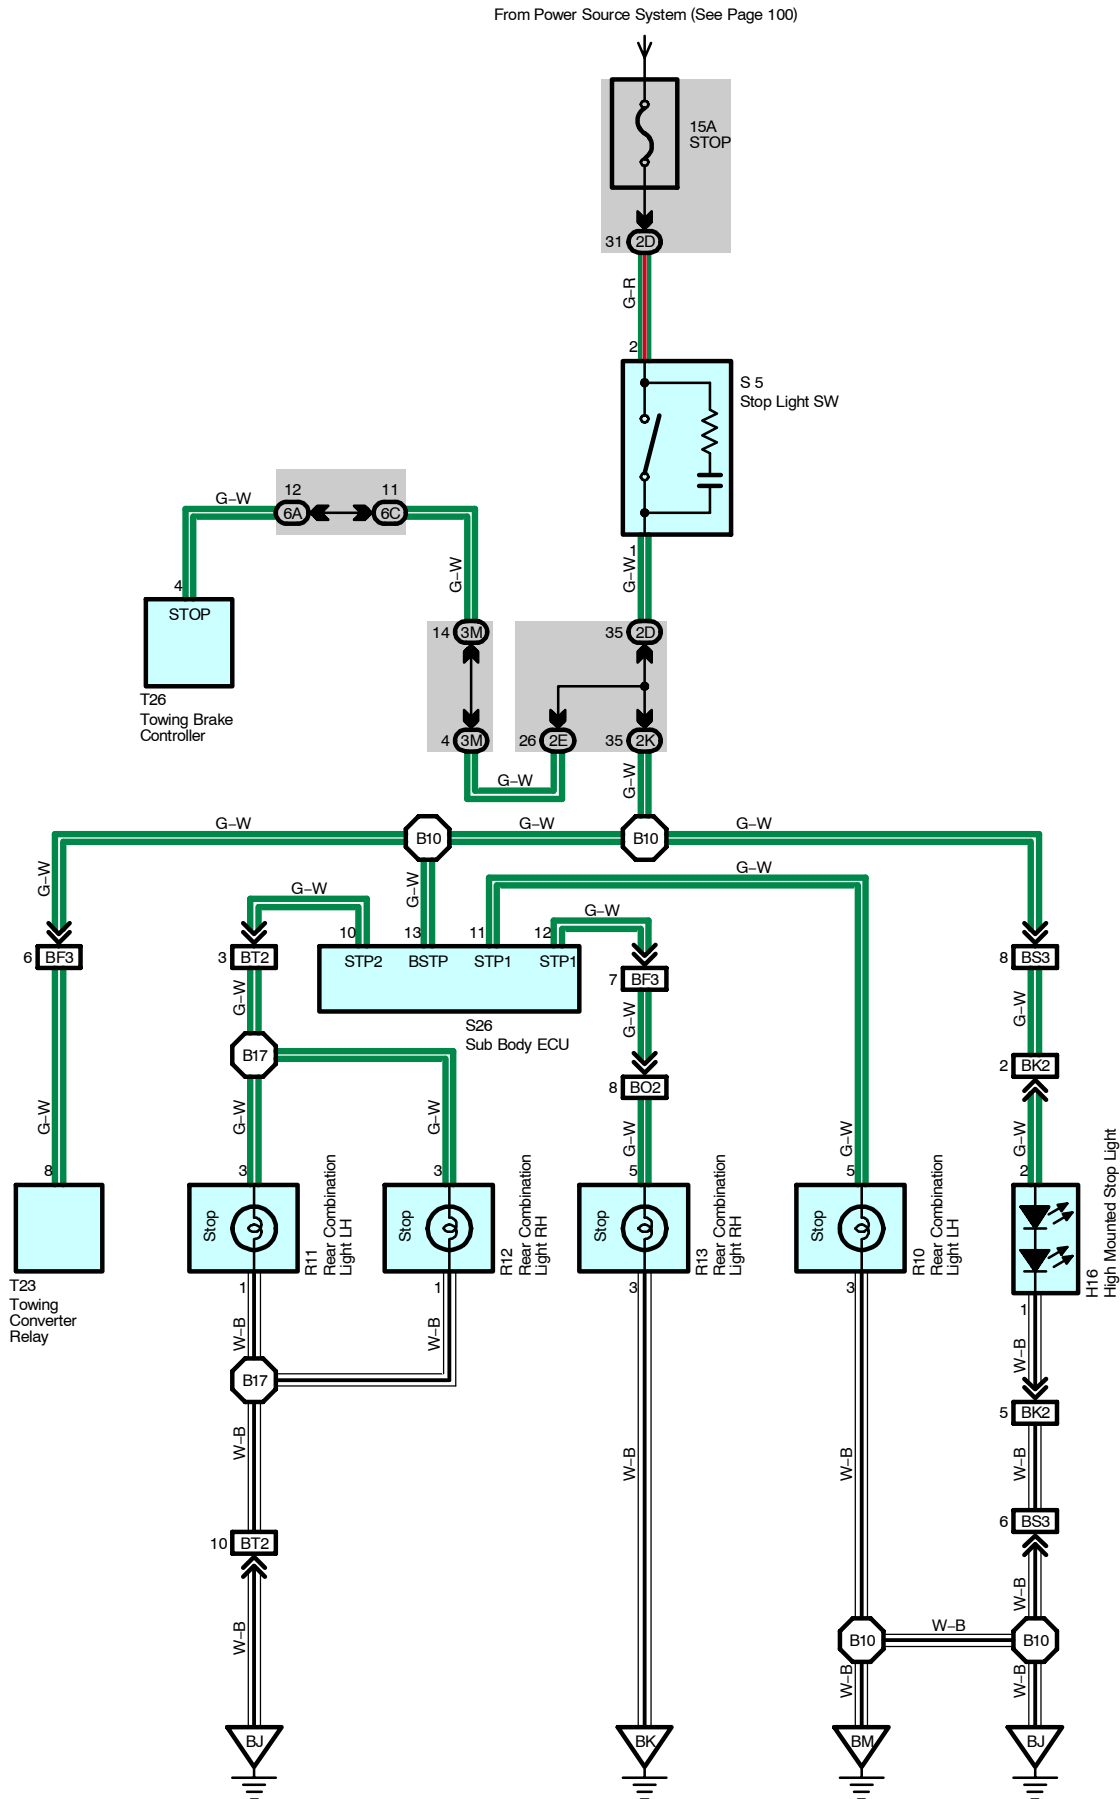

Service Hints**S5 Stop Light SW**

2-1 : Closed with brake pedal depressed

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H16	74	R12	75	S26	75
R10	75	R13	75	T23	75
R11	75	S5	73	T26	73

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
6A	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BK2	92	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BO2	94	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BS3	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BT2	94	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
BJ	90	Under the Driver's Seat
BK	90	Front Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	92	Floor No.1 Wire	B17	92	Back Door Lower Wire