



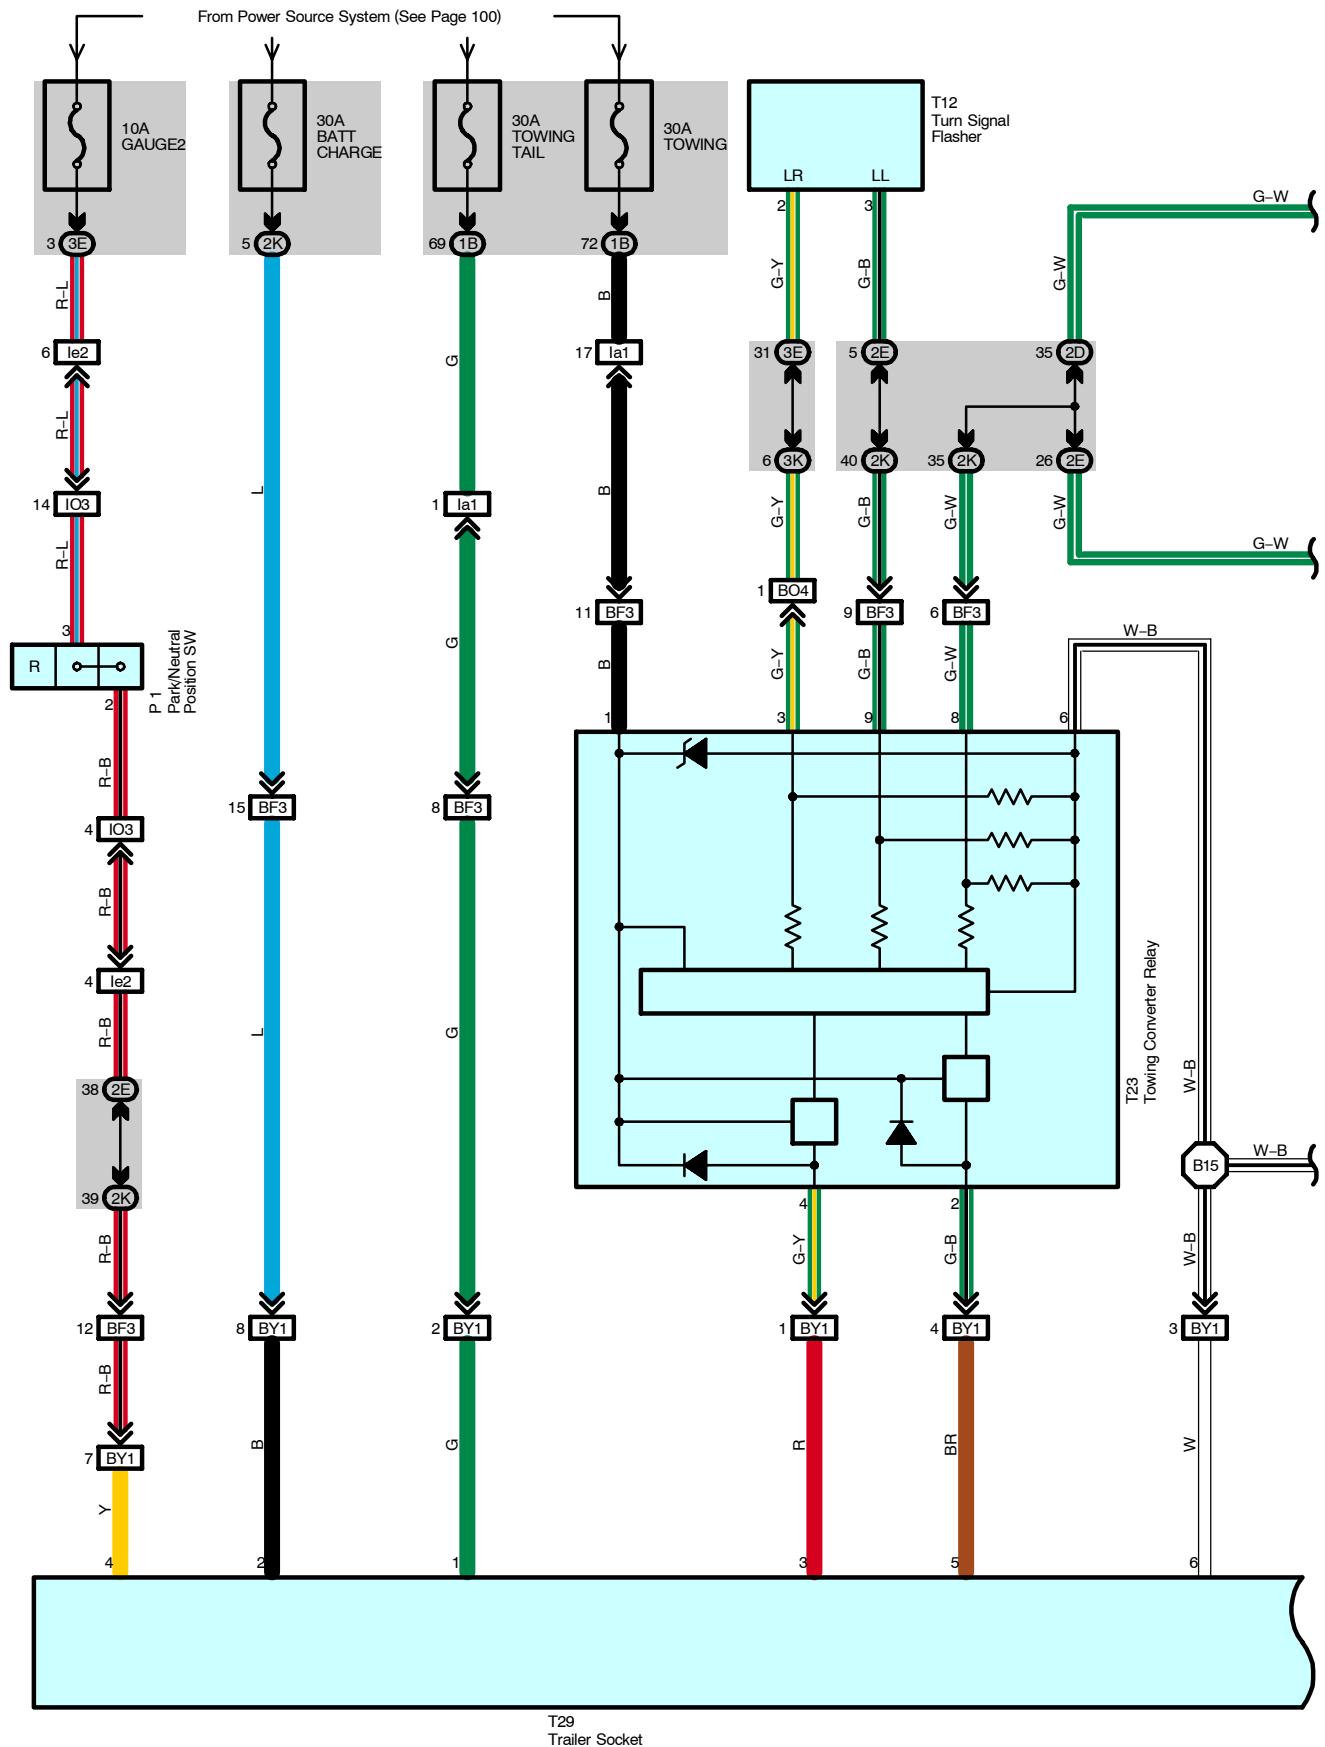

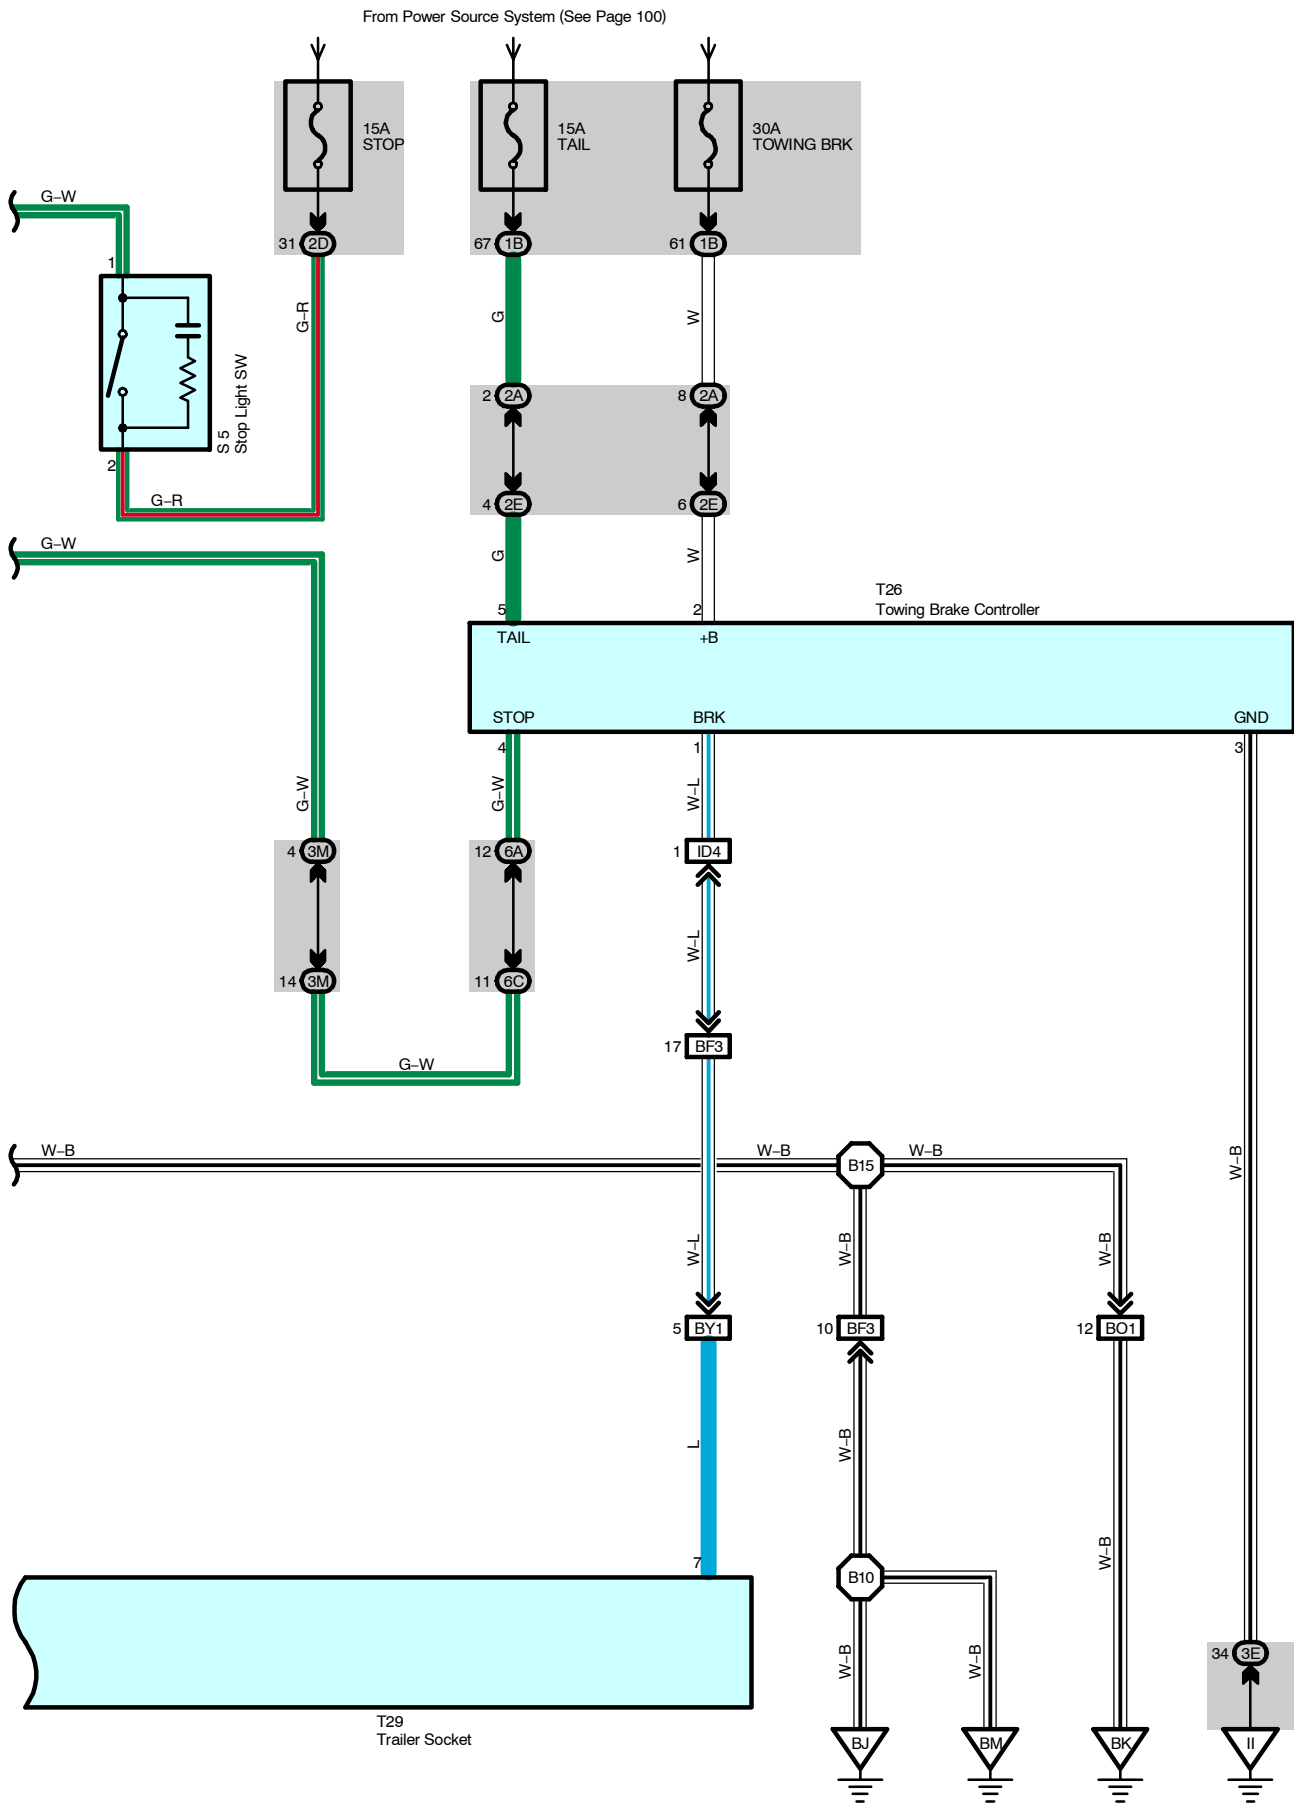

# Trailer Towing

## Service Hints

### T23 Towing Converter Relay

- 1-Ground : Always approx. 12 volts
- 6-Ground : Always continuity

### S5 Stop Light SW

- 2-1 : Closed with brake pedal depressed

## ○ : Parts Location

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| P1   | <a href="#">69</a> | T12  | <a href="#">73</a> | T26  | <a href="#">73</a> |
| S5   | <a href="#">73</a> | T23  | <a href="#">75</a> | T29  | <a href="#">75</a> |

## □ : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                |
|------|--------------------|---------------------------------------------------------------------|
| 1B   | <a href="#">24</a> | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left) |
| 2A   | <a href="#">28</a> | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)        |
| 2D   | <a href="#">28</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                    |
| 2E   |                    |                                                                     |
| 2K   | <a href="#">28</a> | Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)              |
| 3E   | <a href="#">40</a> | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 3K   | <a href="#">40</a> | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)             |
| 3M   | <a href="#">43</a> | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 6A   | <a href="#">60</a> | Dash Wire and J/B No.6 (Behind the Grove Box)                       |
| 6C   |                    |                                                                     |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|--------------------|----------------------------------------------------------------------------|
| ID4  | <a href="#">80</a> | Dash Wire and Floor No.1 Wire (Left Kick Panel)                            |
| IO3  | <a href="#">82</a> | Engine Wire and Dash Wire (Behind the Glove Box)                           |
| Ia1  | <a href="#">86</a> | Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)                |
| Ie2  | <a href="#">86</a> | Dash Wire and Dash Wire (Behind the Combination Meter)                     |
| BF3  | <a href="#">90</a> | Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)         |
| BO1  | <a href="#">94</a> | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember) |
| BO4  |                    |                                                                            |
| BY1  | <a href="#">94</a> | Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)  |

## ▽ : Ground Points

| Code | See Page           | Ground Points Location                      |
|------|--------------------|---------------------------------------------|
| II   | <a href="#">80</a> | Set Bolt of Cowl Side J/B RH                |
| BJ   | <a href="#">90</a> | Under the Driver's Seat                     |
| BK   | <a href="#">90</a> | Front Side Under the Front Passenger's Seat |
| BM   | <a href="#">90</a> | Left Rear Side Quarter Panel                |

## ○ : Splice Points

| Code | See Page           | Wire Harness with Splice Points | Code | See Page           | Wire Harness with Splice Points |
|------|--------------------|---------------------------------|------|--------------------|---------------------------------|
| B10  | <a href="#">92</a> | Floor No.1 Wire                 | B15  | <a href="#">92</a> | Floor No.3 Wire                 |

