


Back-Up Light

From Power Source System (See Page 100)

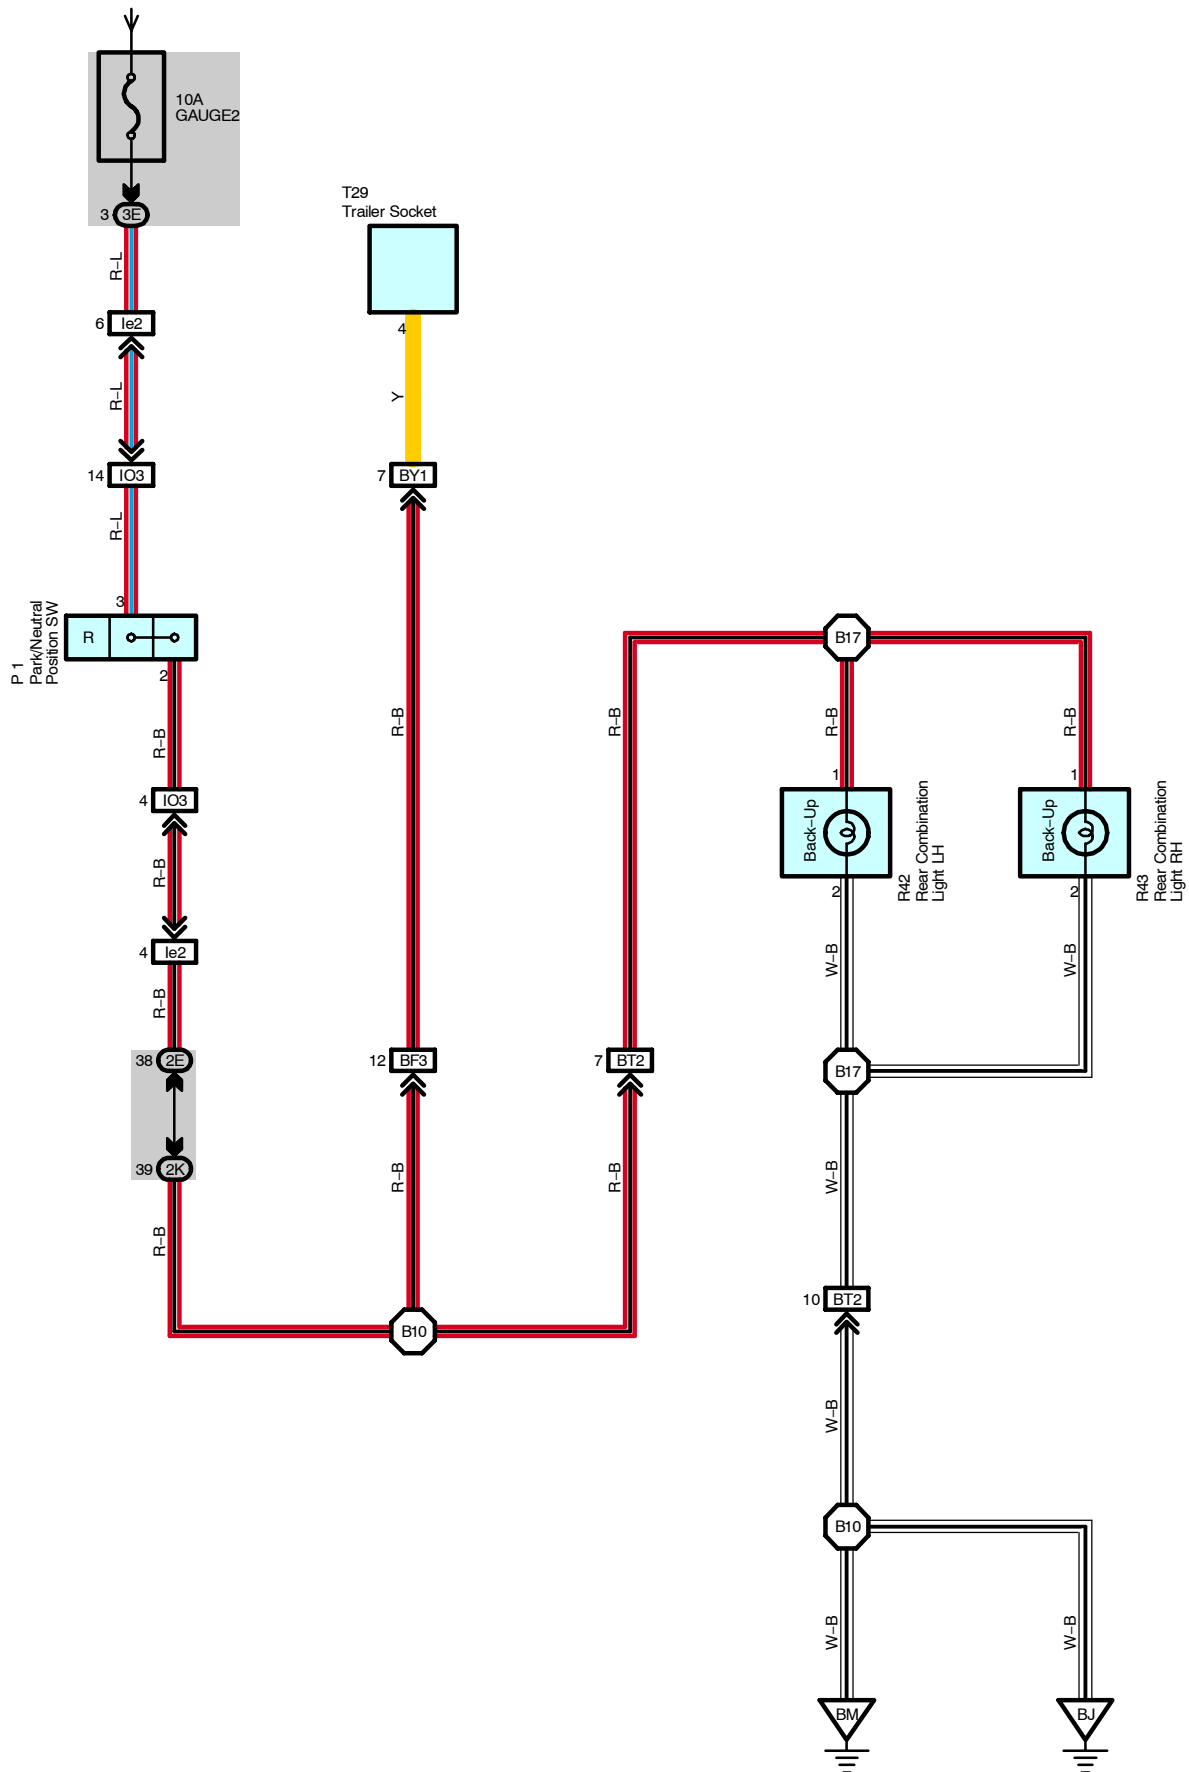

Service Hints

P1 Park/Neutral Position SW

3-2 : Closed with shift lever at R position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
P1	69	R43	75		
R42	75	T29	75		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BT2	94	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BY1	94	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)

: Ground Points

Code	See Page	Ground Points Location
BJ	90	Under the Driver's Seat
BM	90	Left Rear Side Quarter Panel

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	92	Floor No.1 Wire	B17	92	Back Door Lower Wire