



Automatic Light Control

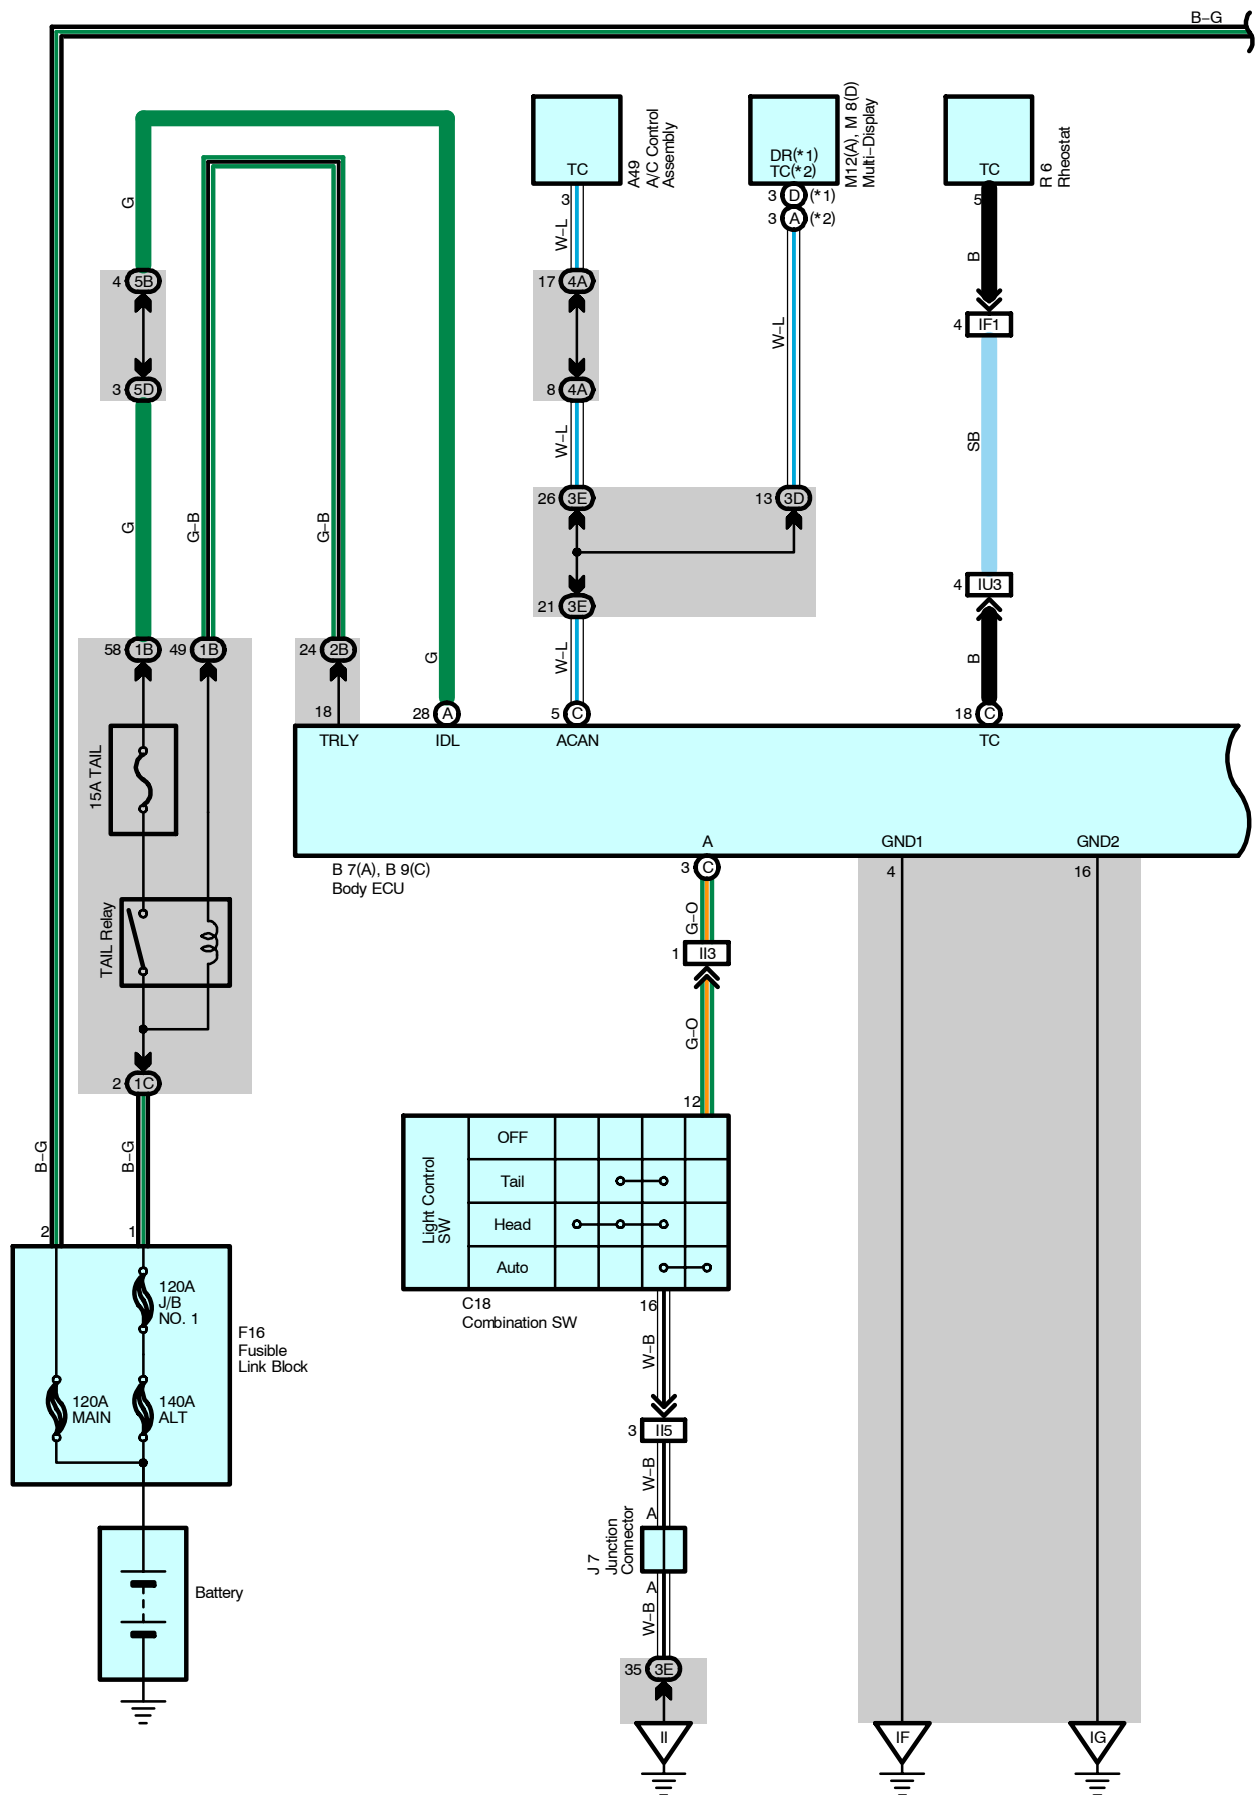

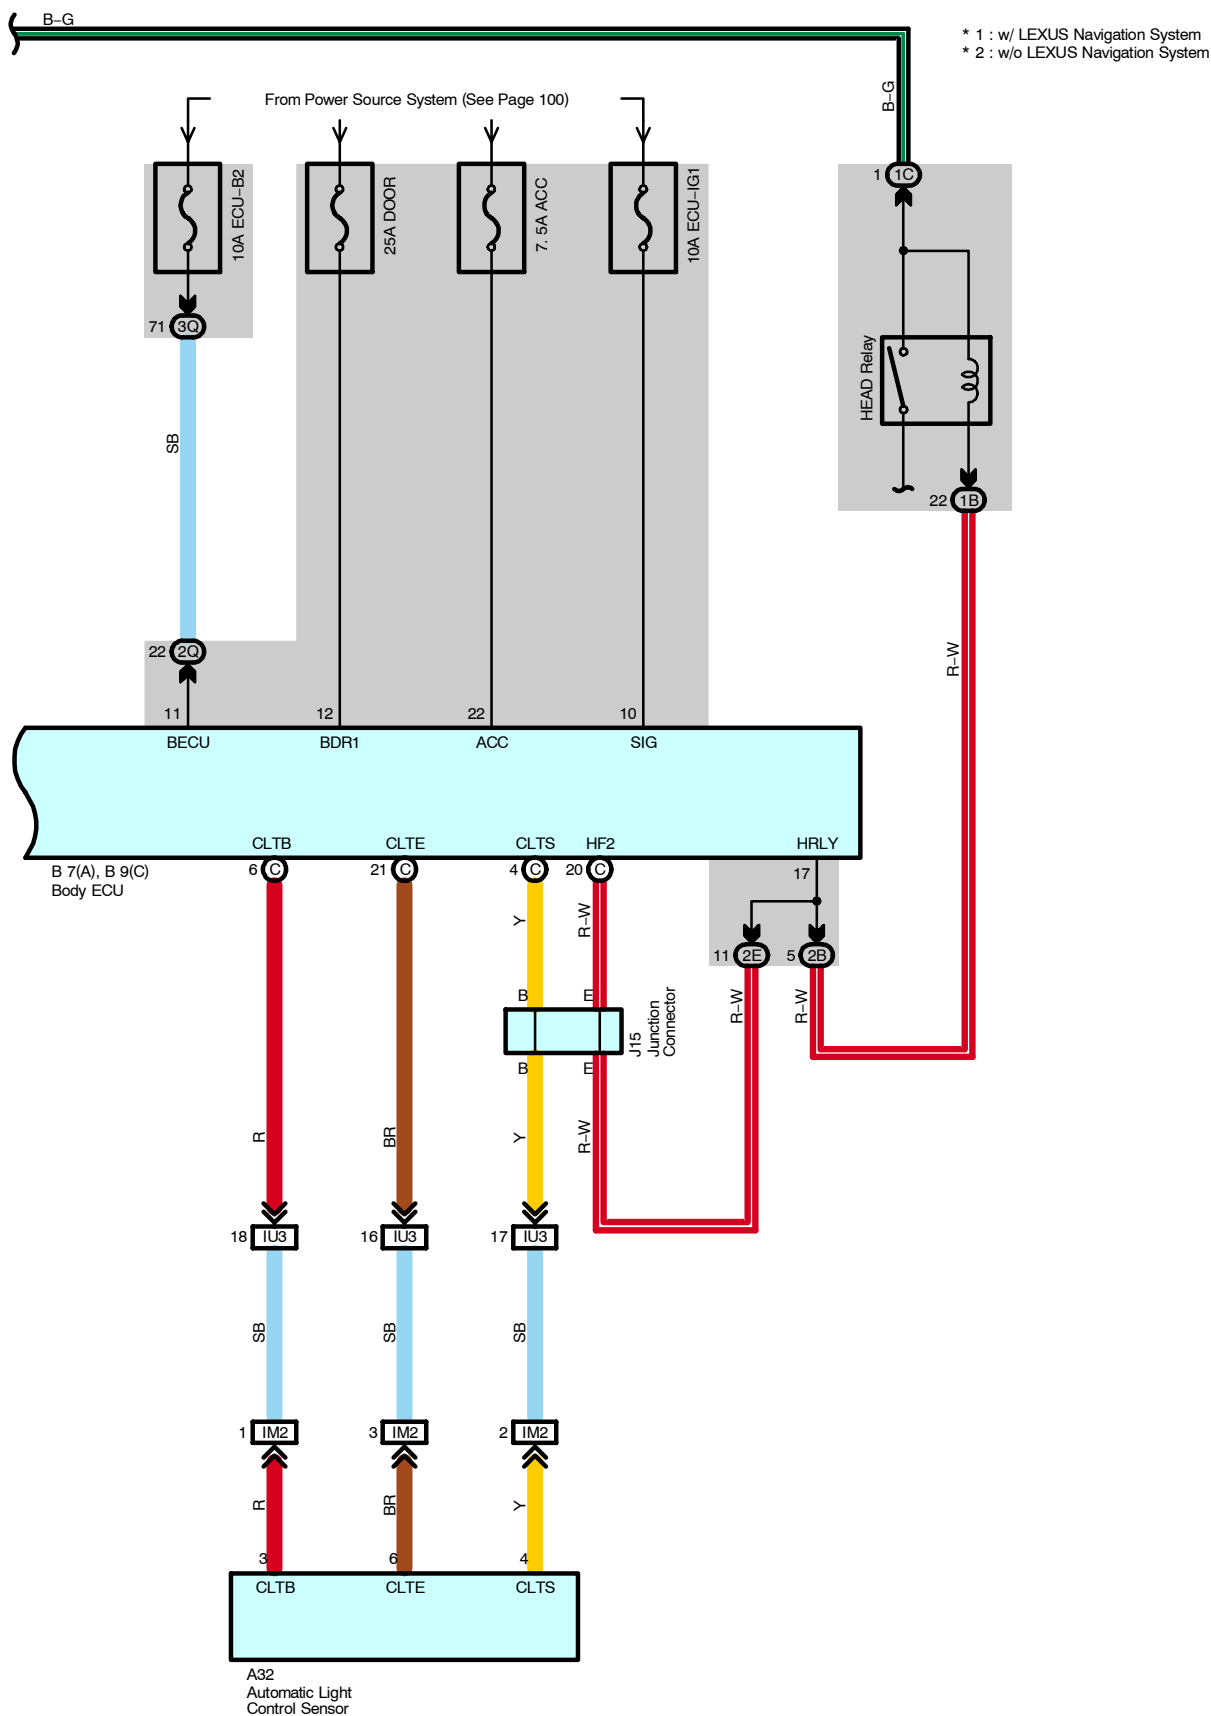

Automatic Light Control

System Outline

The automatic light control system works when the light control SW is turned to AUTO. The automatic light control sensor detects the brightness around the vehicle. By this function, the system automatically turns the taillight and headlight on if the brightness is below the regular level and turns the taillight and headlight off when the surroundings become brighter than the regular level.

Service Hints

Body ECU

- 11, 12-Ground : Always approx. 12 volts
- 22-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 10-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 4, 16-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A32	70	C18	71	M8	D 72
A49	70	F16	68	M12	A 72
B7	A 70	J7	72	R6	73
B9	C 70	J15	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	80	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
II3	82	Dash Wire and Column Wire (Near the Ignition SW)
II5		
IM2	82	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Right Side of Instrument Panel)
IU3	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
IG		
II	80	Set Bolt of Cowl Side J/B RH

