



Rear Wiper and Washer

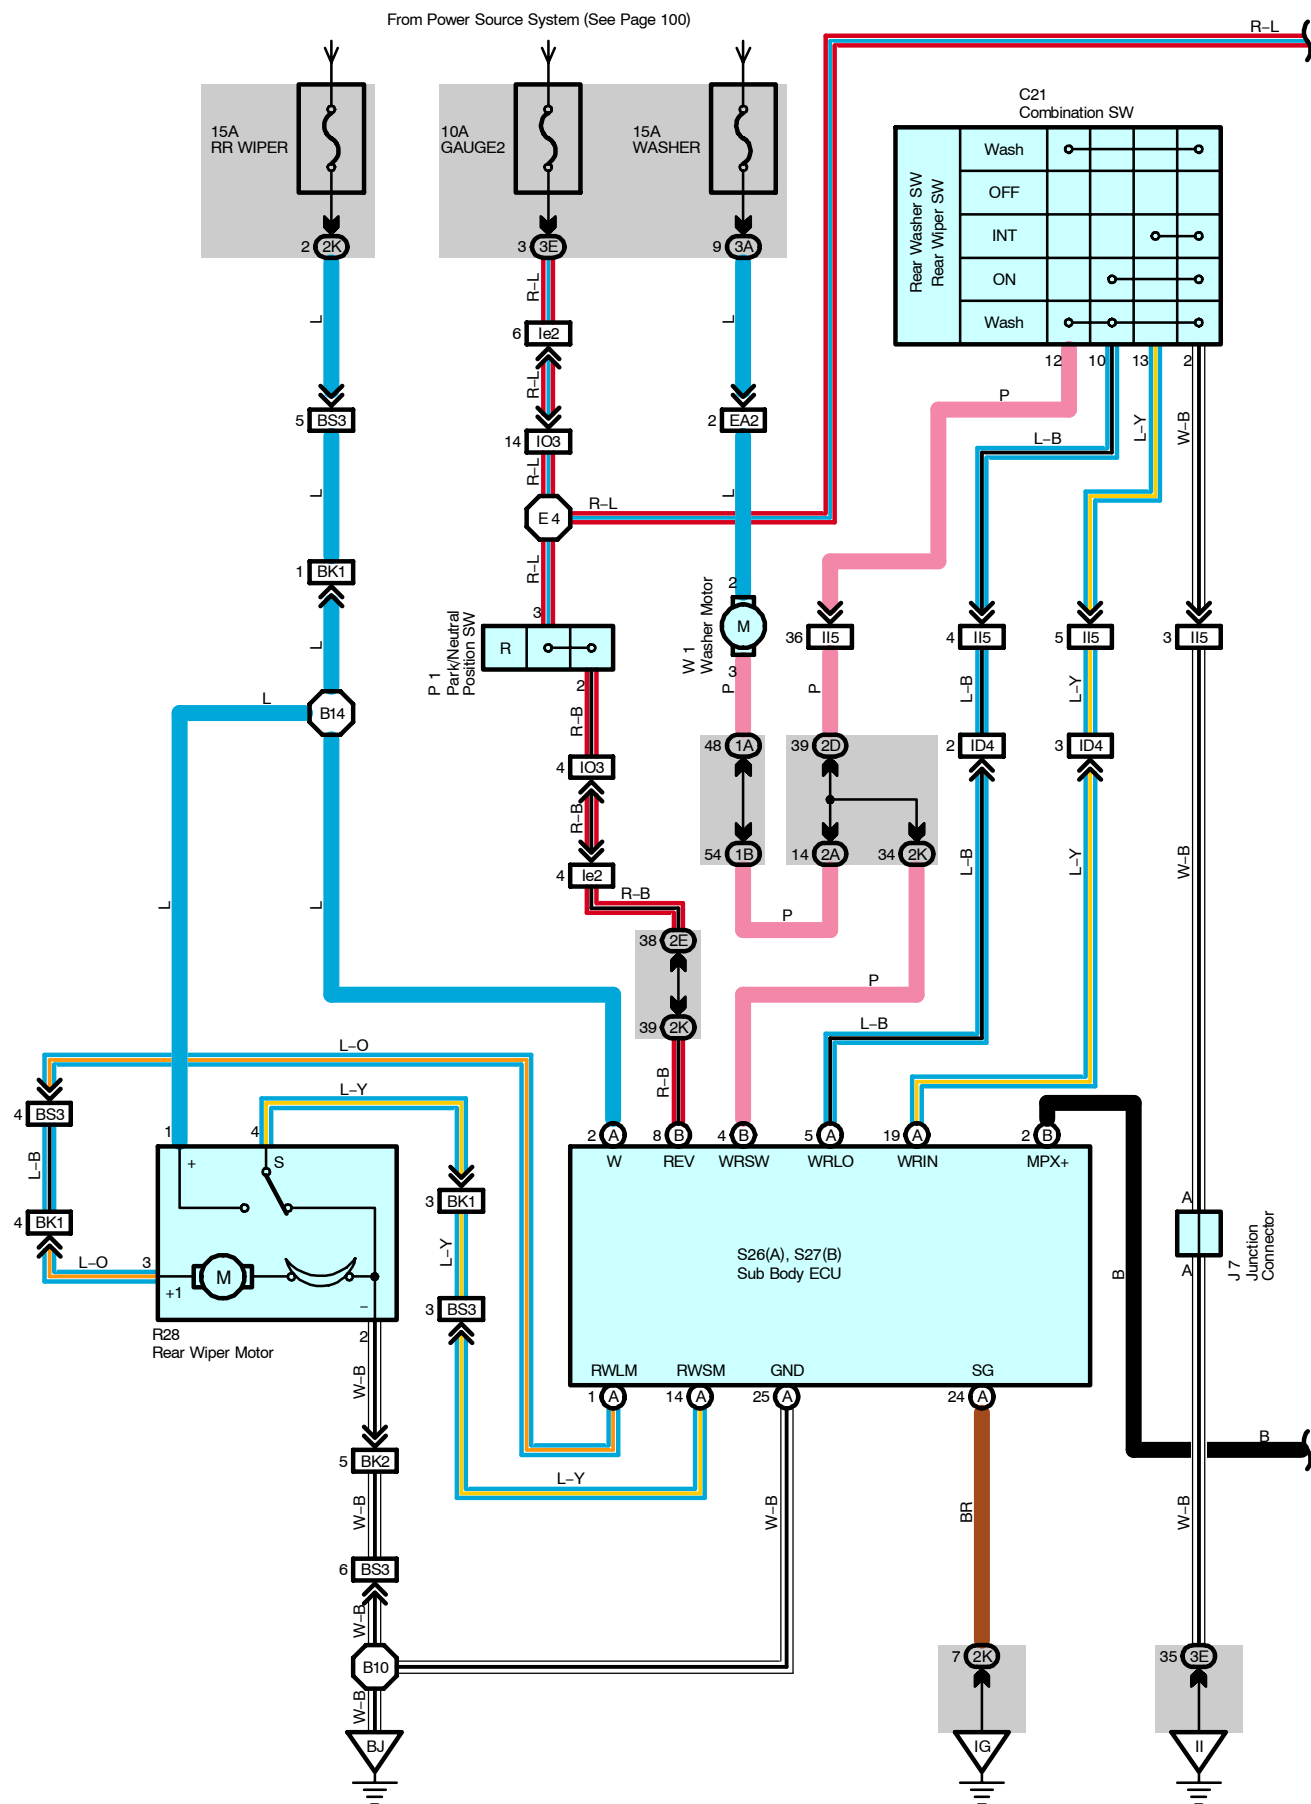

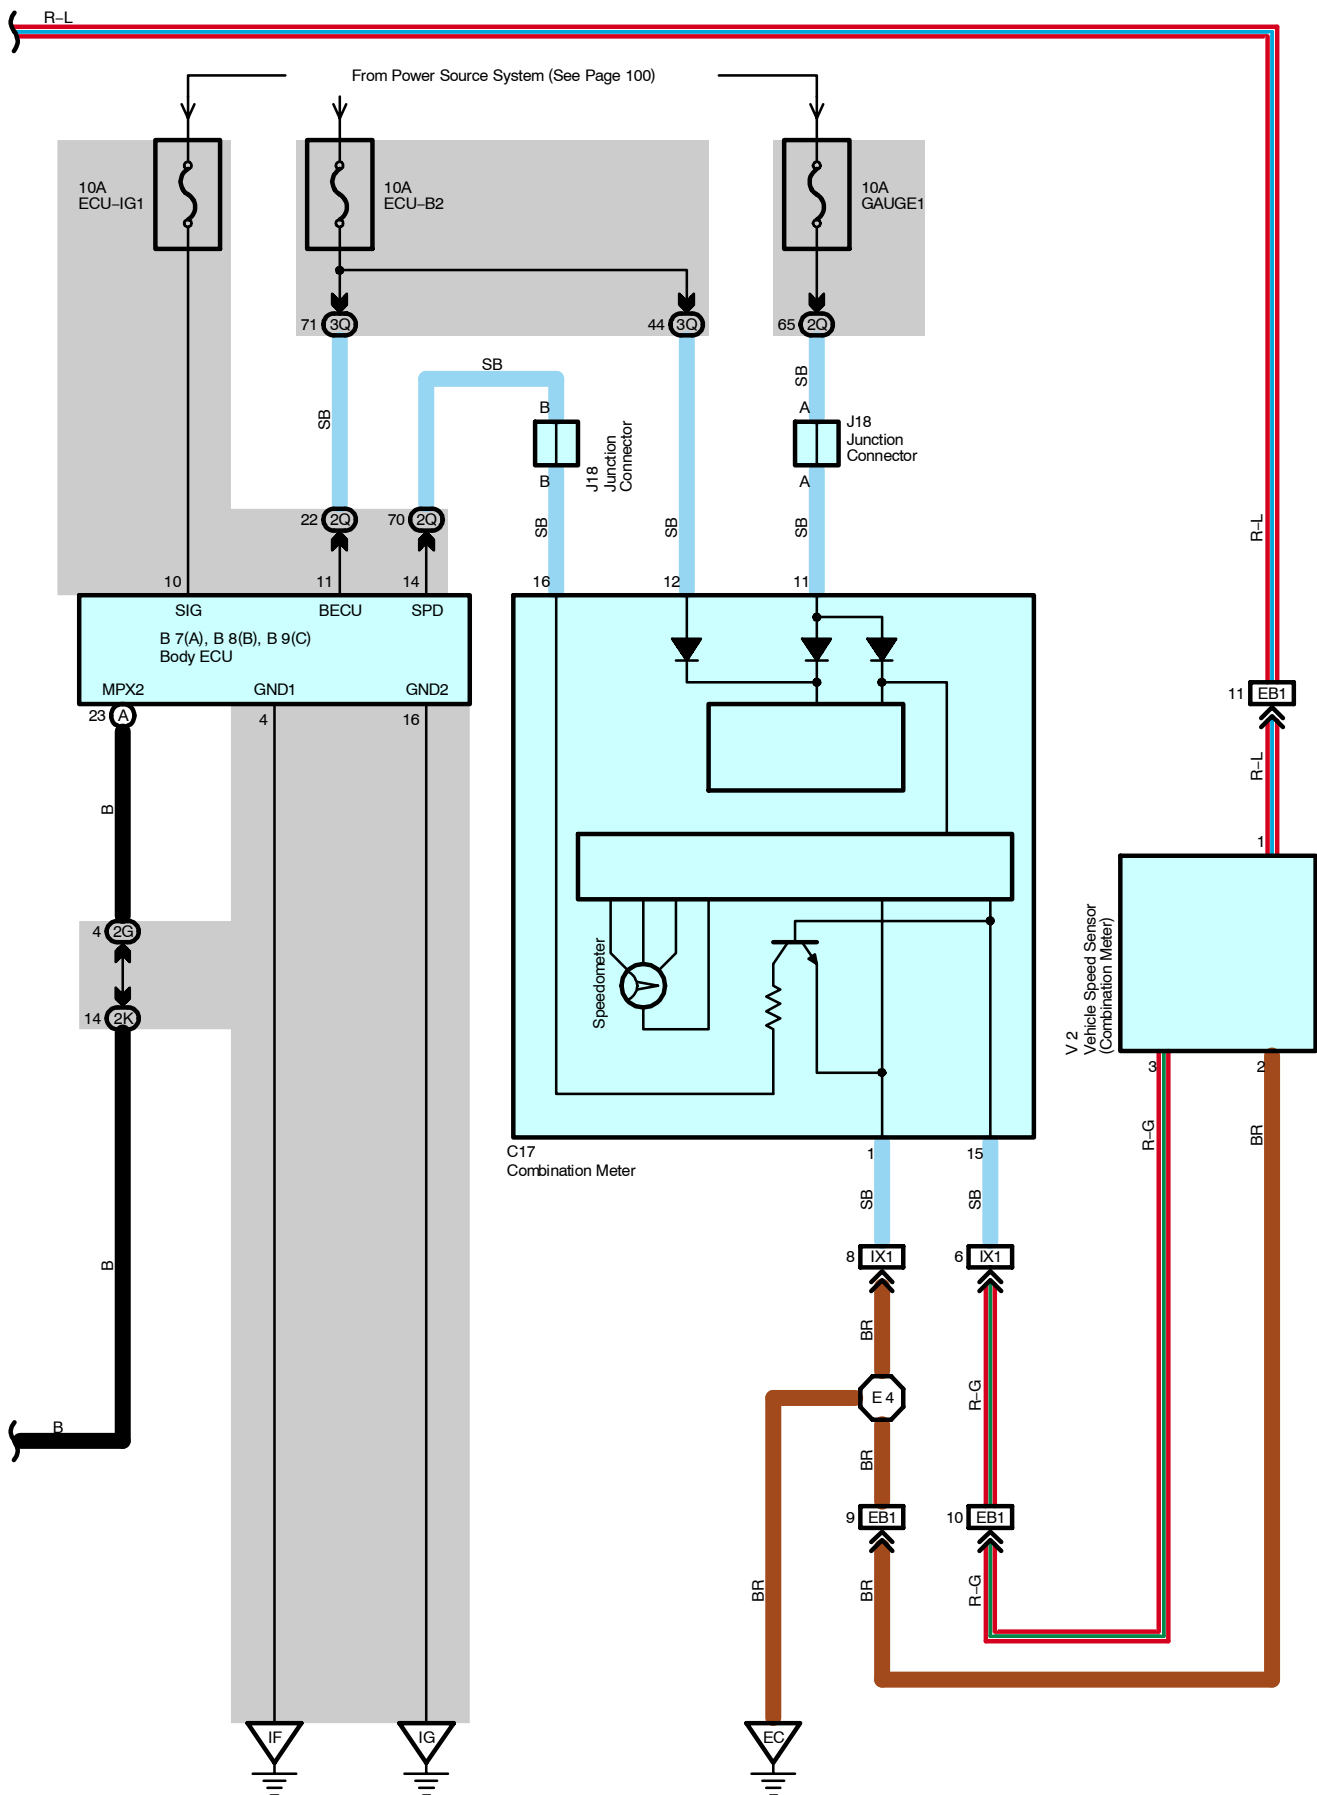

Rear Wiper and Washer

System Outline

The rear wiper and washer system controlled by the sub-body ECU.
This system has the following function:

1. Rear Wiper Normal Operation Function

If turning the rear wiper and washer switch on to INT or ON mode, the sub-body ECU operates the rear wiper motor and controls in accordance with the selected mode.

2. Washer-Linked Wiper with Drip-Preventive Function

To prevent the fluid from dripping after the washer has been operated, this function operates the wipers once after they have operated in unison with the washer.

3. Vehicle Speed Switching Function

When the rear wiper is operating in the ON mode and the vehicle speed is 0 km/h, the wiper switches to the INT mode.

4. Reverse0-Linked Function

This function operates the rear wiper once by shifting the shift lever to reverse when the front wiper is in operation or when it has been within 17 seconds after the stop of the front wiper.

5. Washer Operation Function

If turning the rear wiper and washer switch on to the washer mode, the sub-body ECU operates the washer motor and controls the washer.

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B7	A	70	J7	72	S27	B 75
B8	B	70	J18	72	V2	69
B9	C	70	P1	69	W1	69
C17		71	R28	75		
C21		71	S26	A 75		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2G		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	78	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EB1	78	Engine Wire and Transmission Wire (On the Transmission)
ID4	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
II5	82	Dash Wire and Column Wire (Near the Ignition SW)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
BK1	92	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BS3	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

**: Ground Points**

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
IF	80	Set Bolt of Cowl Side J/B LH
IG		
II	80	Set Bolt of Cowl Side J/B RH
BJ	90	Under the Driver's Seat

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire	B14	92	Back Door Upper Wire
B10	92	Floor No.1 Wire			