


From Power Source System (See Page 100)

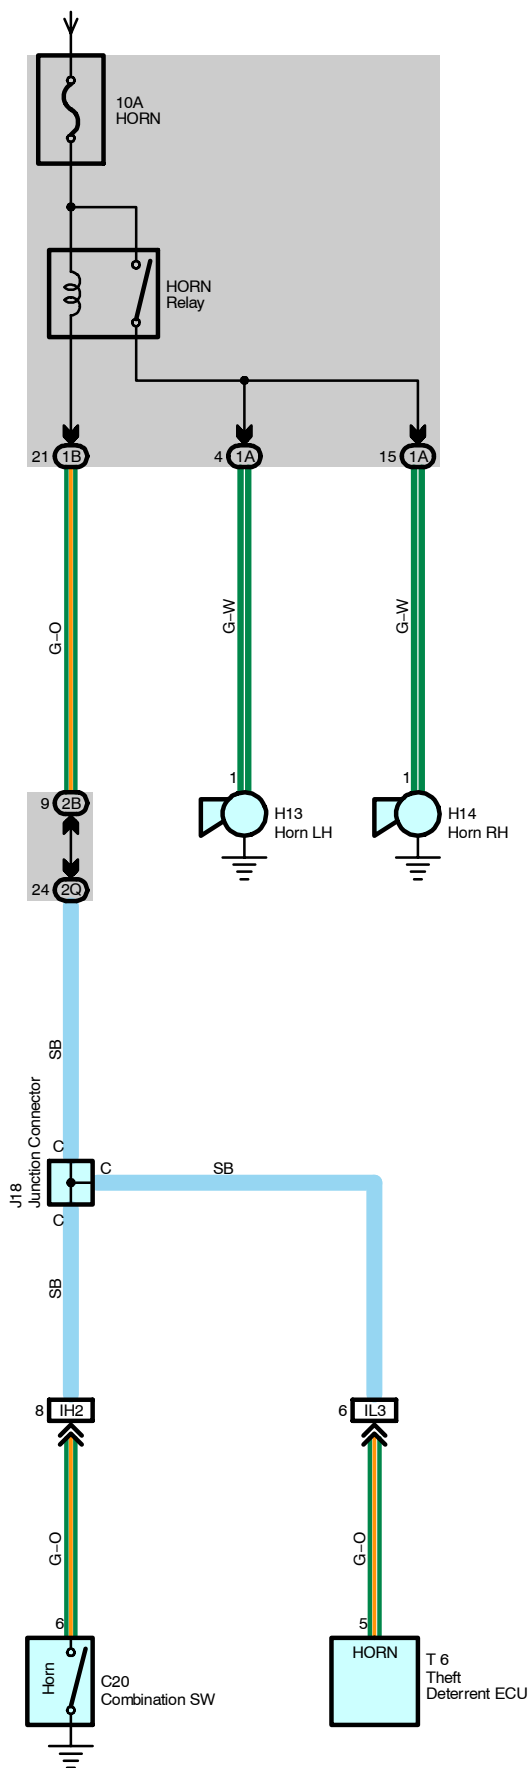

Service Hints

C20 Combination SW

6-Ground : Continuity with horn SW on

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C20	71	H14	69	T6	73
H13	69	J18	72		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH2	82	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IL3	82	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)