



Center Differential Lock

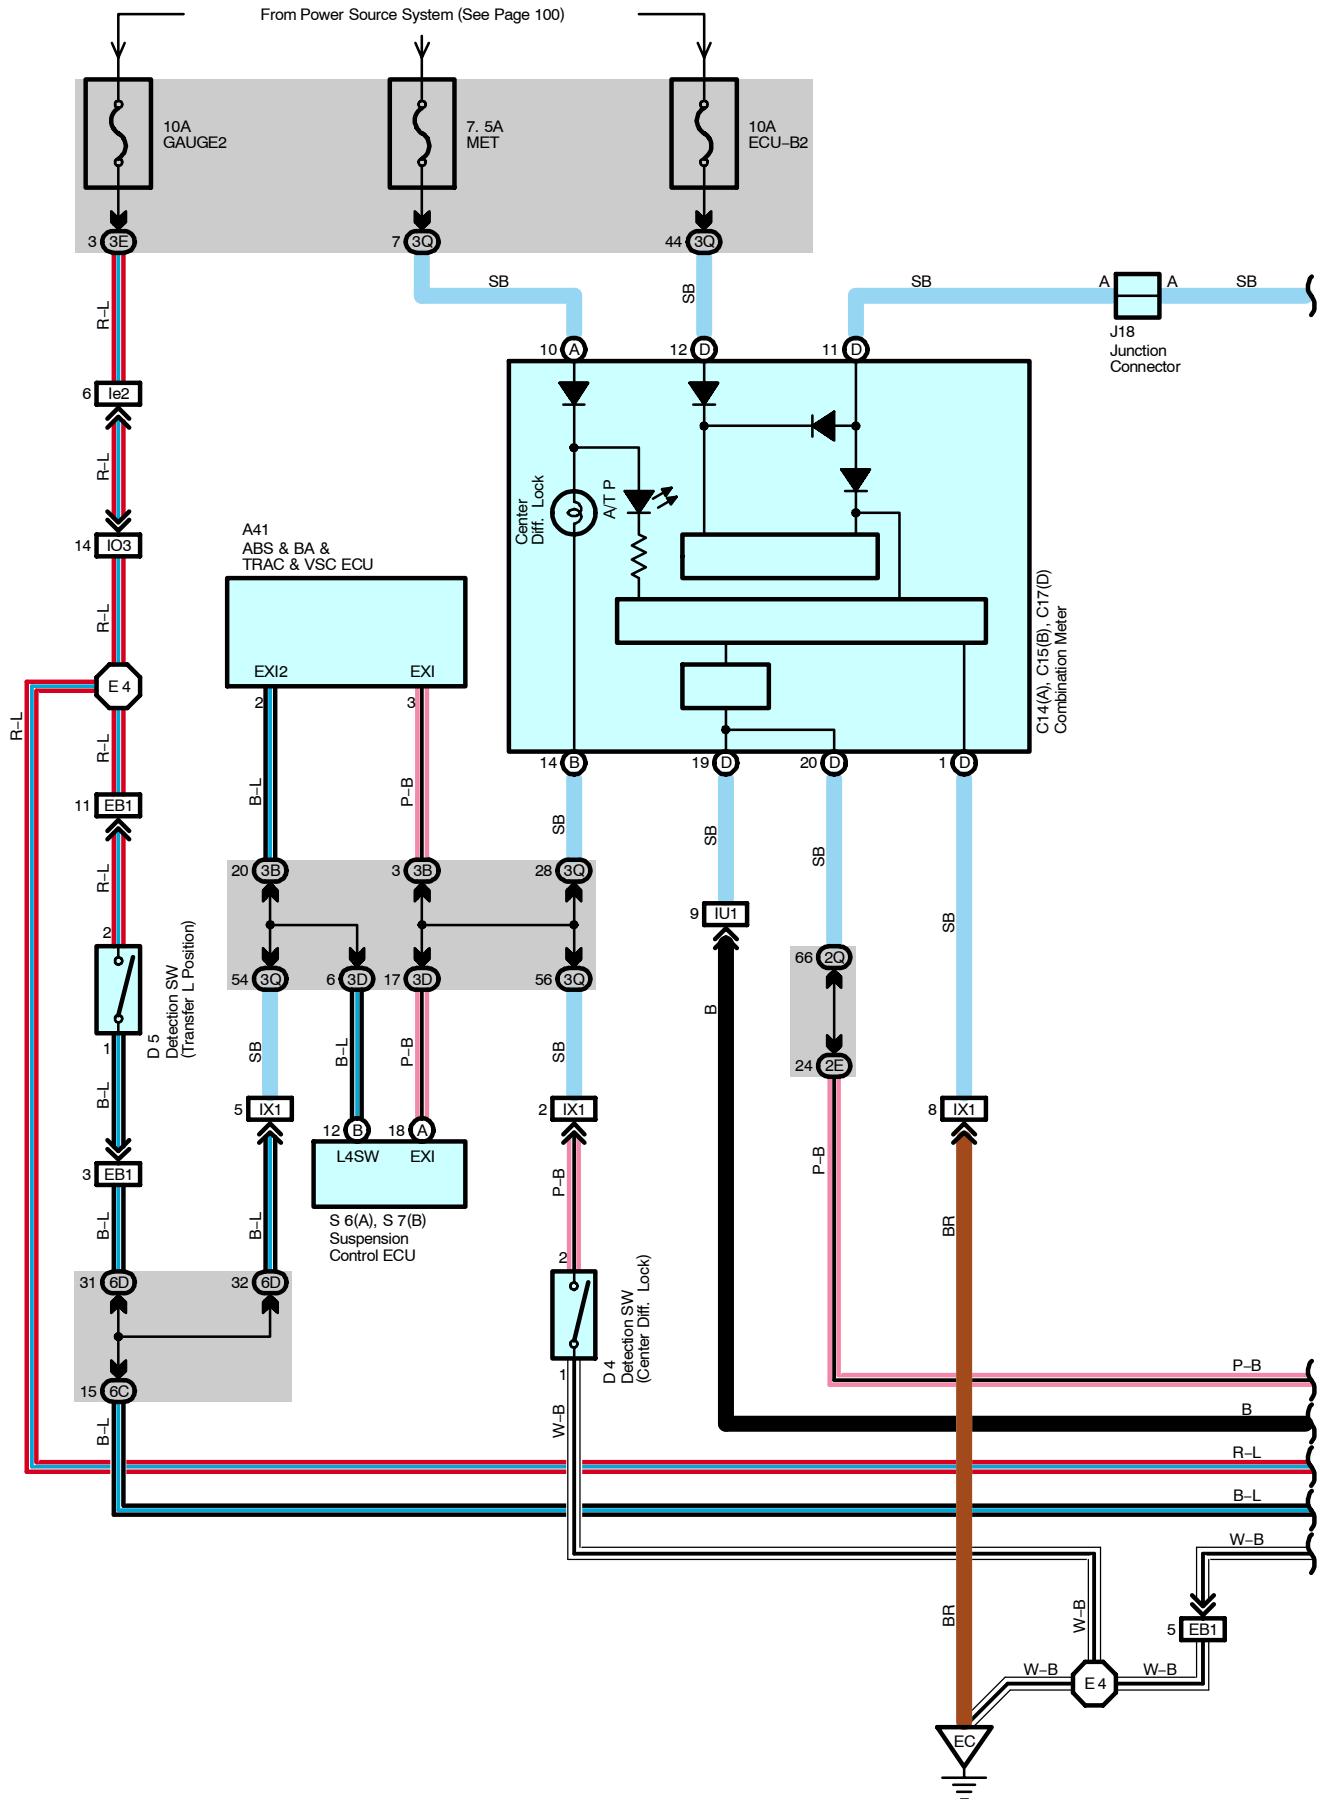

Center Differential Lock

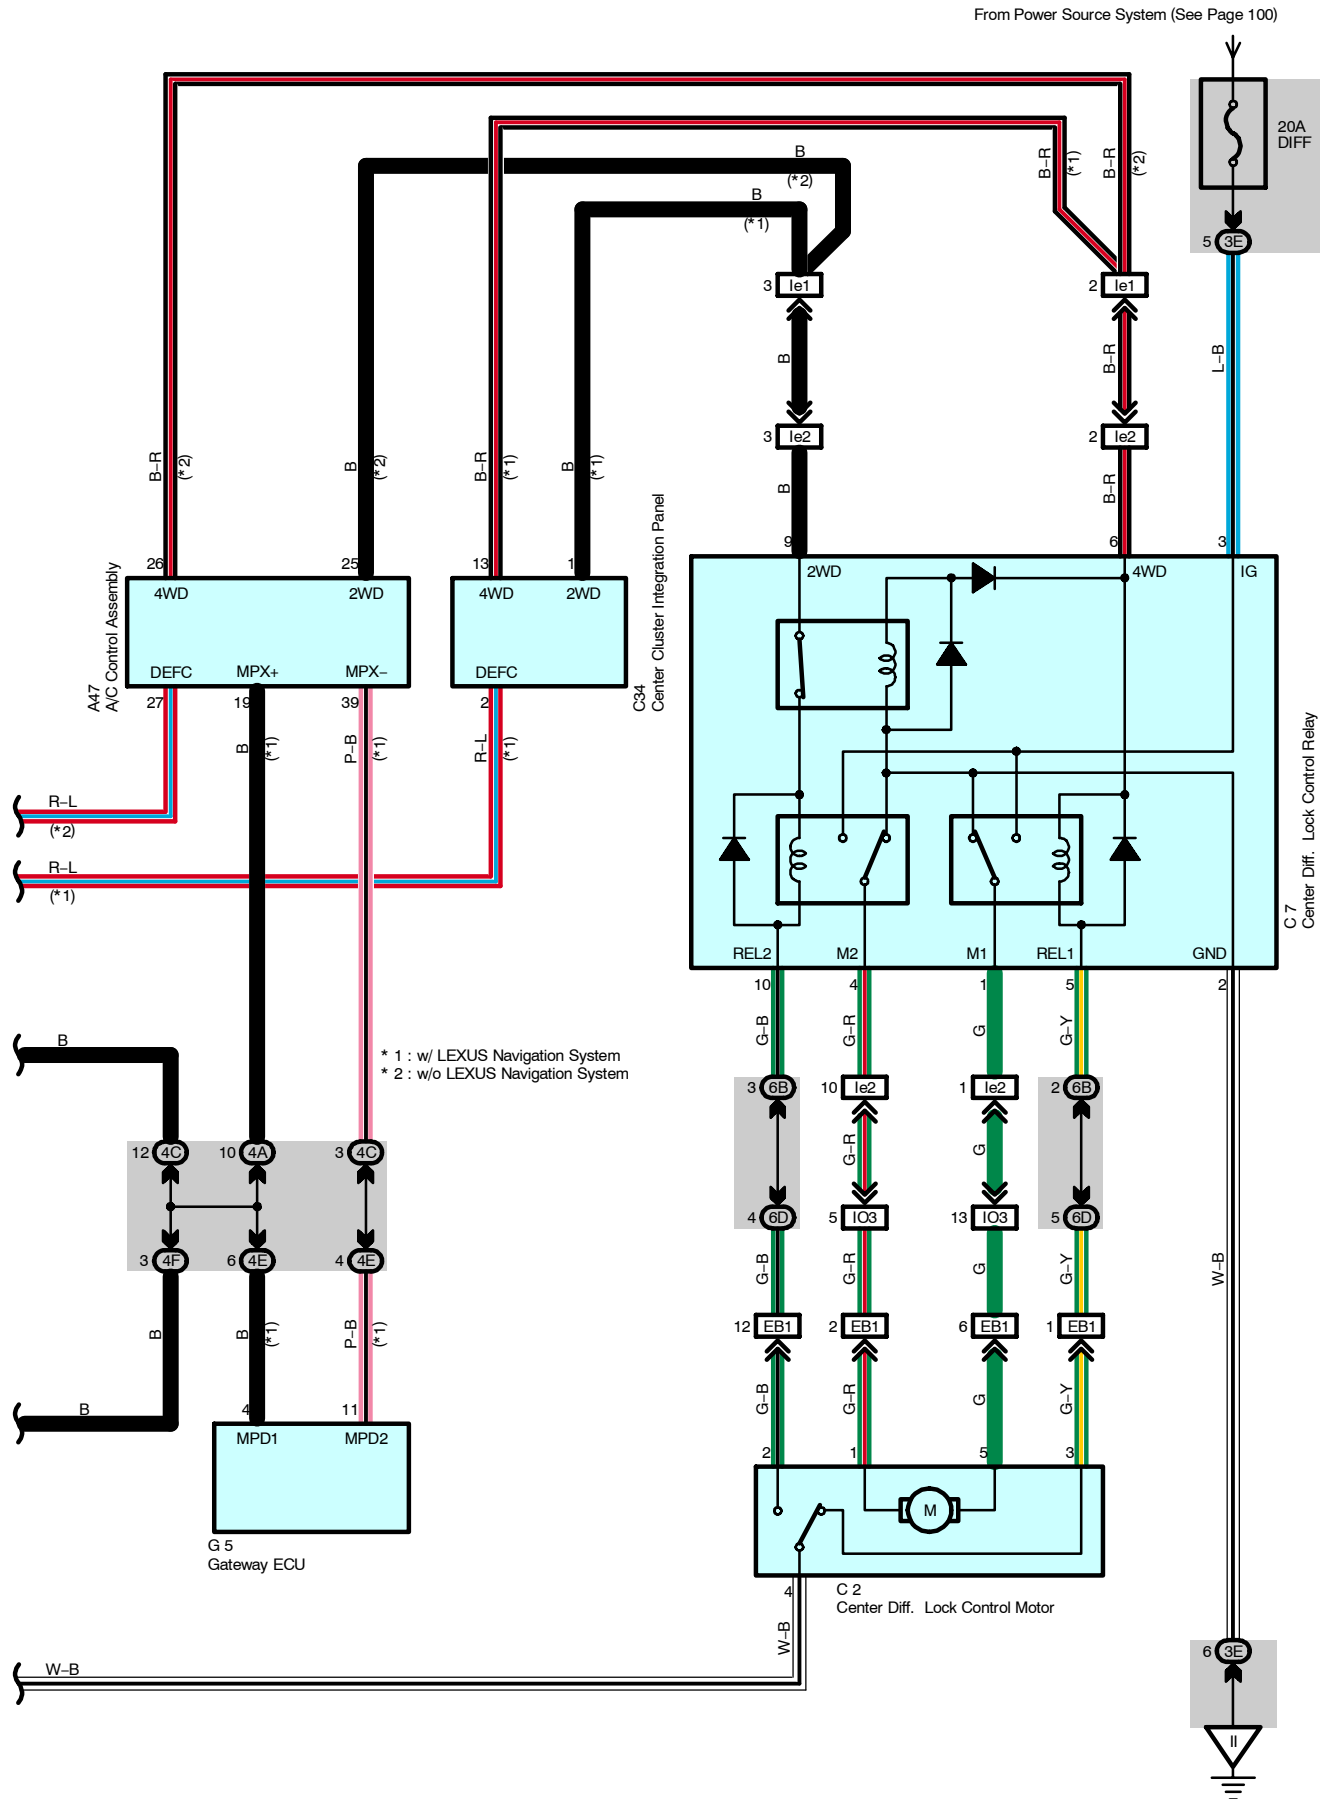

Service Hints

C7 Center Diff. Lock Control Relay

3-Ground : Approx. 12 volts with ignition SW at ON or ST position

2-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A41	70	C17 D	71	E10 E	71
A47	70	C34	71	G5	71
B8	70	D4	68	J18	72
C2	68	D5	68	P1	69
C7	71	D6	68	S6 A	73
C14 A	71	E6 C	71	S7 B	73
C15 B	71	E9 D	71		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	78	Engine Wire and Transmission Wire (On the Transmission)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ie1	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ie2		
Ii1	88	Engine Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
II	80	Set Bolt of Cowl Side J/B RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire	E6	78	Transmission Wire